



# INSTRUCTION MANUAL


## CAT-BACK SINGLE EXHAUST

88-93 CHEVY 1500 TRUCK 5.7L 2/4WD

1990 CHEVY TRUCK 7.4L 2WD ONLY

STANDARD CAB, SHORT BED

PART # 315571

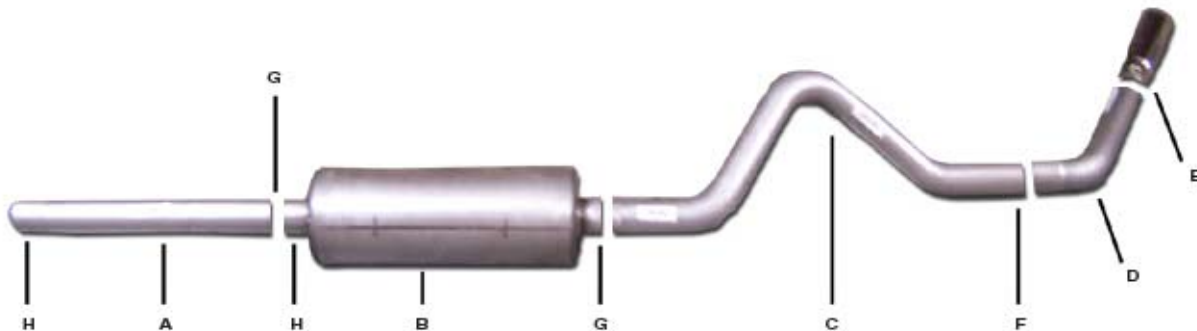

ITEM	PART #	QUANTITY	DESCRIPTION
A	500450	1	3" HEADPIPE
B	788025	1	SUPERFLOW MUFFLER
C	50030R-C	1	3" OVERAXLE PASSENGER TAILPIPE
D	50032R	1	3" TURNOUT PIPE
E	500360	1	3-1/2" STAINLESSS STEEL TIP
F	500033	1	O.E HANGER W/CLAMP
G	500551	2	O.E HANGER W/ANGLE BRACKET
H	OHD300	1	3" CLAMP

***Thank you very much for purchasing our GIBSON PERFORMANCE EXHAUST***

***SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department at (800) 528-3044, Monday through Friday, 8:00 am to 5:00 PM. 0903***

# EXHAUST INSTALLATION PART #315571

## SLIP FIT CONVERTER

WHEN INSTALLING THIS EXHAUST SYSTEM, MAKE SURE TO USE PROPER SAFETY PRECAUTIONS. USE JACK STAND WHEN UNDER TRUCK, SET PARKING BRAKE, BLOCK TIRES, AND USE SAFETY GLASSES AND GLOVES. DO NOT WORK WITH HOT PIPES!

### SUGGESTED TOOLS:

15mm SOCKET, 9/16" SOCKET, 1/2" SOCKET, 1/2" WRENCH, JACK STAND

1. Lay out the GIBSON EXHAUST SYSTEM on the floor so it looks like the drawing.
2. Raise vehicle and support with stands. Remove stock hangers leaving all rubber mounting grommets in place. Cut stock tailpipe for easy removal.
3. Connect head pipe #A behind the stock converter. Use jack stands to support converter, so it won't drop and connect with clamp #H.
4. Connect muffler #B with inlet towards the converter to the head pipe. Use a jack stand to support the muffler and connect clamp using hanger #G. DO NOT TIGHTEN. Muffler inlet is looking into louvers.
5. Install the over axle tailpipe #C, connect to the muffler and clamp using hanger #G.
6. Connect turnout exit pipe #D to the rear of overaxle pipe. Roll turnout pipe until you have it at the correct angle for your truck and connect clamp using hanger #F.
7. Install stainless steel tip. Clamp down. To clean stainless tip use a scott brite pad and any stainless steel or aluminum cleaner.
8. When you have everything in place, firmly tighten all bolts and clamp down securely.

### SPECIAL NOTES:

- MAKE SURE YOU HAVE A 1" CLEARANCE ON ALL PIPES FROM ALL RUBBER BRAKE LINES, SHOCK BOOTS, TIRES, ETC.
- SOME 88-89 CHEVY TRUCKS HAVE A REAR CONVERTER THAT SHOULD BE RE-INSTALLED BACK INTO STOCK LOCATION.