




INSTALLATION INSTRUCTIONS
CAT BACK STAINLESS SINGLE REAR EXHAUST
05-06 HONDA RIDGELINE 3.5L 4WD 4DR
PART #614000

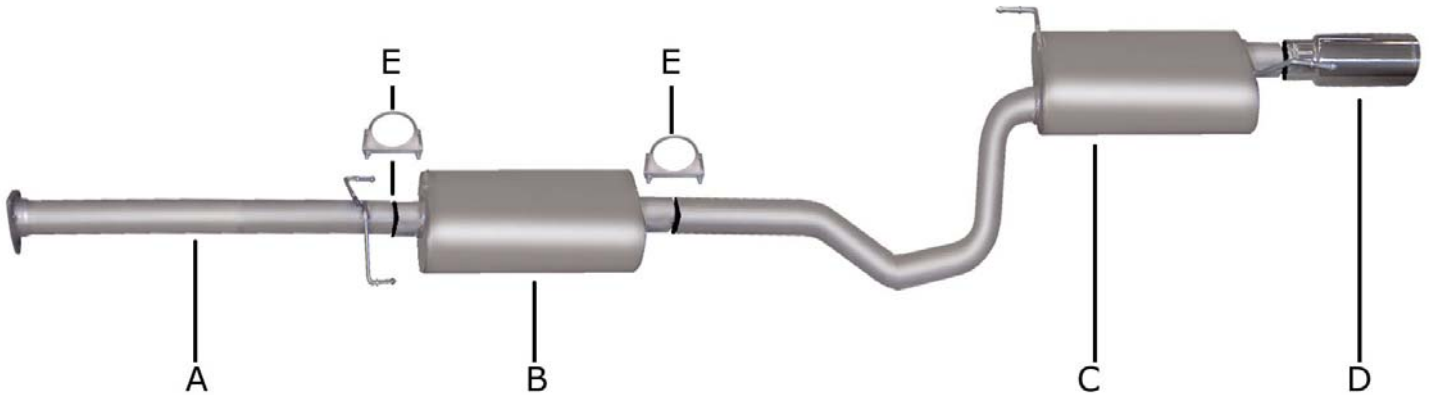

ITEM	PART #	QUANTITY	DESCRIPTION
A	1044-700822S	1	2¼" Stainless Headpipe w/welded hanger and flange
B	11215S	1	Stainless Resonator
C	1045-700823S	1	2¼" Stainless Overaxle tailpipe and Muffler assembly
D	500374	1	3½" Stainless tip
E	5756	2	2¼" Clamp

Thank you for purchasing our Gibson exhaust system for your vehicle. If you need further assistance, please do not hesitate to call our technical dept at (800) 528-3044 Monday through Friday, 8:00 am to 5:00 pm. 0606

INSTALLATION INSTRUCTIONS #614000

CAREFULLY READ INSTRUCTIONS BEFORE STARTING INSTALLATION.

When installing this exhaust system make sure to use proper safety precautions. Use jack stands when working under the vehicle, set parking brake, block tires and use safety glasses and gloves. Allow exhaust to cool before attempting installation. Severe injury or burns could occur if safety measures are not taken.

SUGGESTED TOOLS: 1/2", 9/16" 15mm wrenches & sockets, WD-40, hacksaw, jack stands.

.....
● **Disconnect the negative battery cable before removal of OEM exhaust. This will allow the computer to reset and recognize the new exhaust. Lay out the exhaust on the floor so it looks like the drawing and compare parts with manual.**
.....



1. To remove the stock exhaust remove it from the 3-bolt flange located in front of the muffler. Disengage the welded hangers using WD-40 from the OEM rubber grommets. Do not damage factory hardware or remove the rubber grommets as you will re-use them to mount your new system.



4. Install tailpipe and resonator assembly #C into muffler 1½"-2". Use clamp #E to secure to muffler. DO NOT TIGHTEN. Insert welded hangers into rubber grommets.



2. Bolt head pipe #A onto your existing stock front pipe and attach with factory hardware. DO NOT TIGHTEN. Use a jack stand to support the converter. Insert welded hangers into rubber grommet.



3. Install muffler #B onto head pipe 1½"-2" with the louvers facing towards the converter. Use a jack stand to support the muffler. Use clamp #E to secure the muffler to the headpipe. DO NOT TIGHTEN.



5. Install stainless steel tips #D. Clamp down. When you have everything in place, firmly tighten all bolts and clamps down securely. Use stainless steel cleaner and a Scotch Brite pad weekly to prevent tip from discoloration.