




PERFORMANCE EXHAUST SYSTEMS

INSTRUCTION MANUAL
CAT-BACK SINGLE EXHAUST
01-04 TOYOTA TACOMA 3.4L TRUCK TRD 2DR 2/4WD
XTRA CAB, SHORT BED
PART # 618705

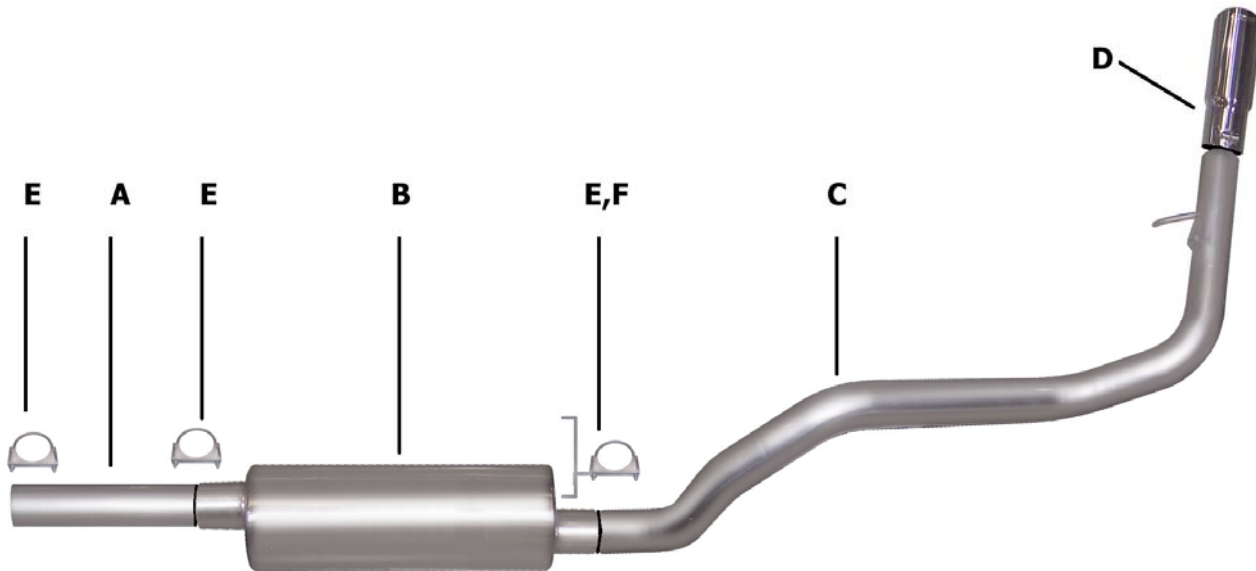

ITEM	PART #	QTY	DESCRIPTION
A	257-700130S	1	2.5" STAINLESS HEADPIPE
B	788200S	1	SUPERFLOW STAINLESS MUFFLER
C	256-700127S	1	2.5" OVERAXLE STAINLESS TAILPIPE
D	500361	1	3" STAINLESS TIP
E	5757	3	2-1/2" CLAMP
F	4129	1	REAR MUFFLER HANGER

Thank you for purchasing our GIBSON EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department at

EXHAUST INSTRUCTIONS KIT#618705


WHEN INSTALLING THIS EXHAUST SYSTEM MAKE SURE TO USE PROPER SAFETY PRECAUTIONS. USE JACKSTANDS WHEN UNDER THE VEHICLE, SET PARKING BRAKE, BLOCK TIRES AND USE SAFETY GLASSES.
DO NOT WORK WITH HOT PIPES!!!

SUGGESTED TOOLS:


9/16" SOCKET, 1/2" WRENCH, HACKSAW, JACKSTANDS, WD-40

LAY OUT THE GIBSON EXHAUST AND COMPARE PART NUMBERS WITH THE MANUAL. LEAVE ALL FACTORY RUBBER GROMMETS IN PLACE. FOR EASIER REMOVAL OF HANGERS SPRAY WD-40 ON THEM. CUT THE TAILPIPE BEHIND THE MUFFLER TO REMOVE STOCK EXHAUST


TACOMA: CUT STOCK EXHAUST 17-1/2" IN FRONT OF THE STOCK MUFFLER
PRE-RUNNER TRD: CUT 16-1/2" IN FRONT OF THE STOCK MUFFLER

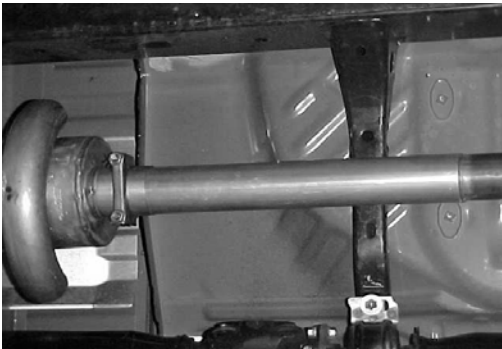

SLIDE THE HEADPIPE ONTO THE STOCK HEADPIPE USING CLAMP # E. THEN INSTALL THE MUFFLER ON HEADPIPE #A NO LESS THAN 1-1/2" TO 2" USING CLAMP #E. THE MUFFLER OUTLET WILL BE Clocked AT 12 O'CLOCK POSITION. INLET OF MUFFLER HAS LOUVERS FACING THE MOTOR. DO NOT TIGHTEN

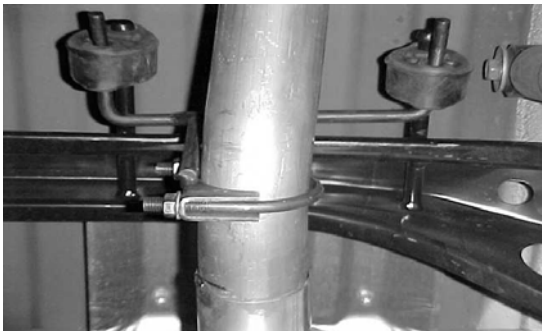

INSTALL REAR MUFFLER OE HANGER #F TO SUPPORT THE TAILPIPE. THE BOLTS FROM THE OE HANGER WILL BE FACING THE

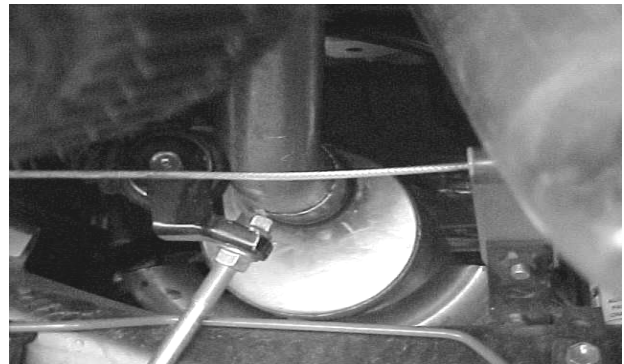

INSTALL OVERAXLE TAILPIPE # C INTO THE MUFFLER, USING CLAMP # E. INSERT WELDED HANGER INTO RUBBER GROMMET.



INSTALL THE STAINLESS TIP. USE A STAINLESS OR ALUMINUM CLEANER TO POLISH TIP. NOW TIGHTEN ALL HANGERS AND CLAMPS.

MAKE SURE YOU HAVE A MINIMUM OF A 1" CLEARANCE FROM ALL BRAKE LINES, FUEL LINES, TIRES, SHOCKS, ETC.