




PERFORMANCE EXHAUST SYSTEMS

INSTRUCTION MANUAL

SUPER TRUCK STAINLESS EXHAUST SYSTEM

06-07 DODGE RAM MEGA CAB, SHORT BED 1500
06-07 DODGE RAM QUAD CAB, SHORT BED 2500/3500
06-07 DODGE RAM MEGA CAB, SHORT BED 2500
5.7L 2/4WD 4DR
PART # 66513

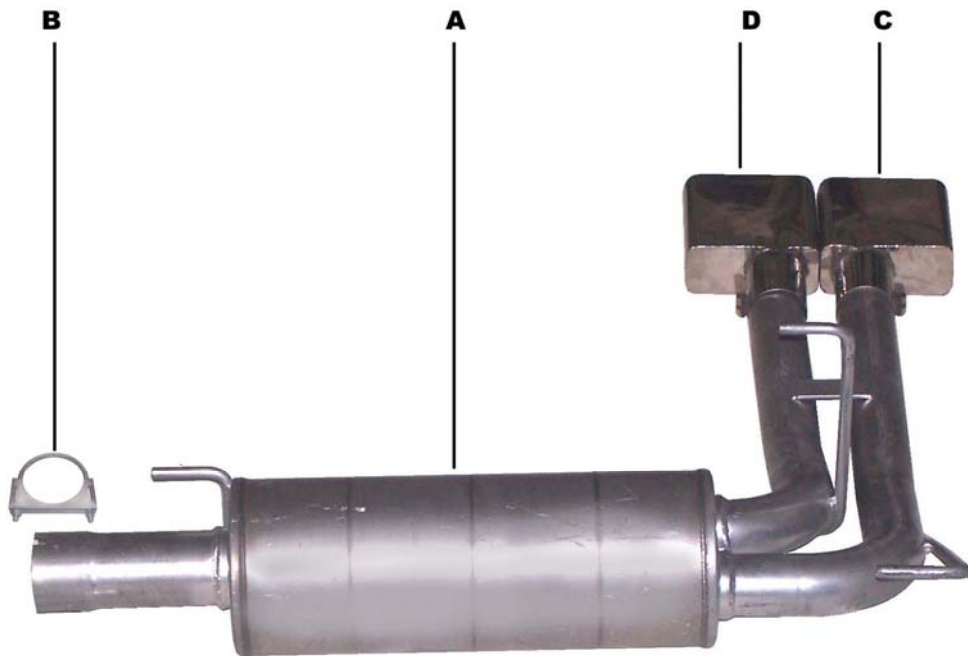

| ITEM | PART # | QUANTITY | DESCRIPTION |
|------|-------------|----------|----------------------------|
| A | 793-700475S | 1 | STAINLESS MUFFLER ASSEMBLY |
| B | OHD300 | 1 | 3" CLAMP |
| C | 500366 | 1 | SUPER TRUCK TIP |
| D | 500365 | 1 | SUPER TRUCK TIP |

Thank you very much for purchasing our GIBSON PERFORMANCE EXHAUST SYSTEM for your vehicle. If you need further assistance, please do not hesitate to call our Technical Department at 1-800-528-3044, Monday through Friday, 8:00 am to 5:00 pm. 0307

EXHAUST INSTALLATION SHEET #66513

WHEN INSTALLING THIS EXHAUST SYSTEM, MAKE SURE TO USE PROPER SAFETY PRECAUTIONS. USE JACK STANDS WHEN UNDER THE TRUCK, SET PARKING BRAKE, BLOCK TIRES, AND USE SAFETY GLASSES AND GLOVES.

DO NOT WORK WITH HOT PIPES!

SUGGESTED TOOLS:

HACKSAW, 9/16" SOCKET, 1/2" SOCKET, 1/2" WRENCH, JACKSTAND, WD-40



TO REMOVE STOCK EXHAUST UNCLAMP IT FROM THE CLAMP LOCATED JUST IN FRONT OF YOUR STOCK MUFFLER. YOU MAY NEED TO HEAT IT UP WITH A TORCH TO REMOVE IT. NOW CUT OFF YOUR STOCK TAILPIPE JUST BEHIND THE MUFFLER AND REMOVE. LEAVE ALL RUBBER GROMMETS ON THE HANGER. USE WD-40 TO AID IN REMOVAL OF EXHAUST AND HANGERS.



INSTALL MUFFLER ASSEMBLY #A ONTO HEADPIPE 1-1/2" TO 2". SLIDE WELDED HANGERS INTO RUBBER GROMMETS YOU MAY NEED TO ADJUST WELDED HANGERS TO FIT INTO YOUR GROMMETS. USE A JACKSTAND TO SUPPORT YOUR MUFFLER. USE CLAMP #B TO SECURE IT TO YOUR HEADPIPE. DO NOT TIGHTEN.



INSTALL YOUR STAINLESS TIPS. THERE IS A LEFT AND A RIGHT TIP. TIGHTEN ALL CLAMPS AFTER YOU MAKE SURE YOUR TAILPIPES ARE LEVEL.

SPECIAL NOTES:

MAKE SURE YOU HAVE A 1" CLEARANCE ON ALL PIPES FROM ALL RUBBER BRAKE LINES, SHOCK BOOTS, TIRES, ETC...