



GP304S-C CERAMIC COATED HEADER

96-02 DODGE RAM TRUCK 8.0L-V-10 2WD/4WD

GIBSON HEADERS ARE 50 STATE SMOG LEGAL

*Thank you very much for purchasing our Gibson header
for your vehicle.*

*If you need further assistance, please do not
hesitate to call our Technical Department at
(800) 528-3044
Monday through Friday
8:00 a.m. to 5:00 p.m. PST.*

*1270 WEBB CIRCLE CORONA, CA 92879
11/04*

HEADER INSTRUCTIONS PART # GP-304S

SUGGESTED TOOLS:

SAFETY GOGGLES AND GLOVES, 1/2" & 9/16", 7/16" WRENCH AND SOCKET, WIRE BRUSH, WD-40, JACKSTANDS

1. TO BEGIN WITH THE INSTALLATION, JACK THE VEHICLE UP TO GAIN ACCESS TO THE Y-PIPE UNDER THE VEHICLE. (DO NOT USE BUMPER JACKS) REMOVE THE POSITIVE BATTERY CABLE. BEFORE REMOVING STOCK MANIFOLD SPRAY ALL FASTENERS WITH WD-40 TO AID IN THE REMOVAL.



2. STARTING FROM THE BOTTOM LOOSEN THE BOLTS THAT HOLD THE Y-PIPE UP ON THE DRIVERS SIDE AND PASSENGER SIDE FOR REMOVAL OF THE MANIFOLDS.




3. STARTING ON THE TOP OF THE ENGINE REMOVE THE FACTORY AIR CLEANER ASSEMBLY TO AID IN REMOVAL OF THE DRIVER SIDE MANIFOLD. REMOVE MANIFOLD, SHIELD AND HARDWARE.

4. ONCE THE DRIVERS SIDE MANIFOLD IS REMOVED USE A WIRE BRUSH TO CLEAN HEAD SURFACE. INSTALL SUPPLIED DRIVER SIDE HEADER, GASKET AND HARDWARE. TORQUE HEADER TO 30 TO 35 FT. AFTER DRIVERSIDE HEADER IS INSTALLED PUT SUPPLIED HEAT WRAP ON SPARK PLUG WIRES #7 AND 9 FOR HEAT PROTECTION. RE-INSTALL AIR CLEANER ASSEMBLY.



5. ON THE PASSENGER SIDE DISCONNECT THE DIP STICK FROM THE MANIFOLD, BUT DO NOT REMOVE IT. REMOVE THE MANIFOLD, SHIELD AND HARDWARE. CLEAN THE HEAD SURFACE WITH A WIRE BRUSH.

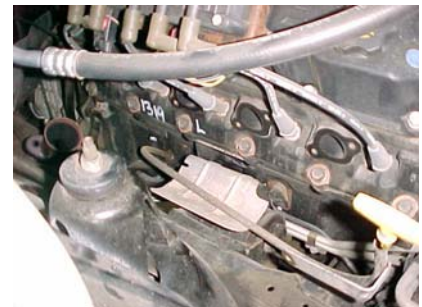

- INSTALL SUPPLIED PASSENGER SIDE HEADER, GASKET AND SUPPLIED HARDWARE. TORQUE THE HEADER BOLTS TO 30-35 FTS. INSTALL THE 1/4" BOLT, LOCK WASHER AND NUT ONTO THE BRACKET FOR THE DIP STICK. MOUNT THE DIP STICK TUBE TO HEADER USING THE BRACKET. INSTALL SUPPLIED HEAT WRAP ONTO SPARK PLUG WIRE #10 FOR HEAT PROTECTION.



- RE-INSTALL Y-PIPE WITH SUPPLIED HARDWARE AND TORQUE TO 30-35 FTS. CHECK ALL CONNECTIONS MAKING SURE THEY ARE ALL TIGHT. RE-INSTALL POSITIVE BATTERY CABLE.



YOU MUST RE-TORQUE YOUR HEADER BOLTS APPROX. 100 MILES AFTER INSTALLATION. IF NOT DONE THE HEAD GASKET WILL LEAK AND IS NOT COVERED UNDER WARRANTY.

NOTE: IT IS NOT UNUSUAL WHEN INSTALLING HEADERS TO GET A BURNING SMELL. THIS IS NORMAL AND IT WILL GO AWAY.

PARTS LIST:

1	GP-304S-D	DRIVER SIDE HEADER ASSEMBLY
1	GP-304S-P	PASSENGER SIDE HEADER ASSEMBLY
2	9160	HEAD GASKETS
20	951	5/16" X 1" HEADER BOLTS
20	225	5/16" STAR WASHERS
1	4538	1/4" BOLT
1	9514	1/4" LOCK WASHER
1	5015	1/4" NUT
4	9535	3/8" FLAT WASHER
4	345	3/8" X 2-1/2" BOLT
4	9033	3/8" LOCK WASHER
4	5057	3/8" NUT
3	14032	5" x 1" PIECE OF HEAT WRAP

**GP304S HEADER
PICKING TICKET
2-6-02**

QTY	PART NUMBER	DESCRIPTION
1	HE-304SD	DRIVER HEADER
1	HE-304SP	PSNGR. HEADER
2	9160	HEAD GASKET
3	14032	5" x 1" HEAT WRAP
1	BO-1016	BOLT KIT
20	951	5/16"x1" HEADER BOLT
20	225	5/16" STAR WASHERS
1	4538	1/4" BOLT
1	9514	1/4" LOCK WASHER
1	5015	1/4" NUT
4	9535	3/8" FLAT WASHER
4	345	3/8 2 1/2" BOLT
4	9033	3/8" LOCK WASHER
4	5057	3/8"x16" NUT

QUANTITY _____

PACKED BY _____

DATE _____