

# Horn Contact Pin Assembly Installation Instructions

For Part Number 2612000010

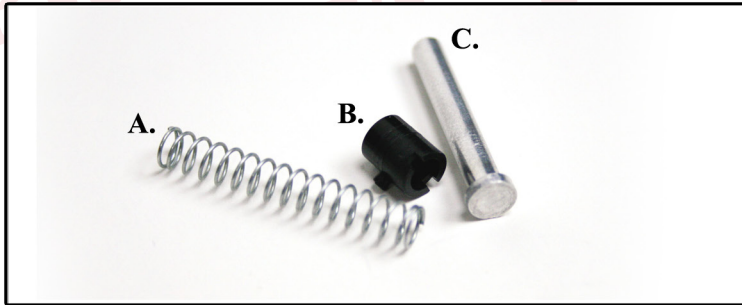


Figure 1

## Kit includes:

- 1 - Spring (A)
- 1 - Locking Sleeve (B)
- 1 - Pin (C)

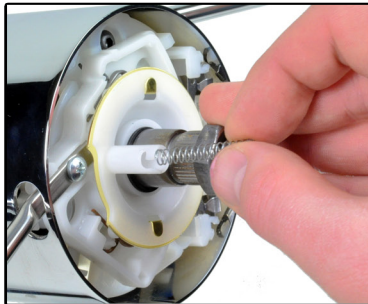


Figure 2



Figure 3

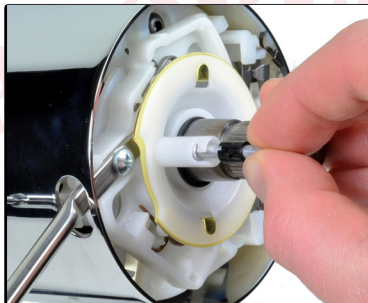


Figure 4

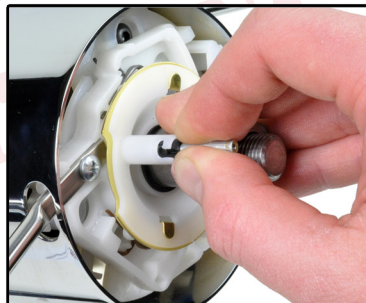


Figure 5

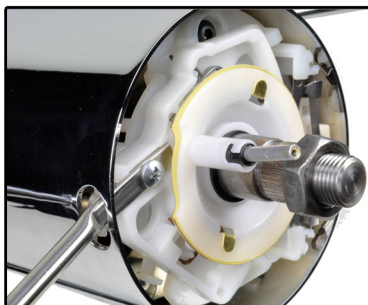


Figure 6

1. Insert spring into the white tube of horn cam. (Figure 2)
2. Slide black locking sleeve over the contact pin so that the sleeve sets on the large flat of the pin. (Figure 3)
3. With the large flat of the pin & holding the black sleeve, compress spring until the tab on the black sleeve lines up with the groove on the horn cam. (Figure 4)
4. Twist black sleeve to the right and lock into place. (Figure 5)
5. Once you have twisted locking sleeve into the groove, your installation of contact pin is now complete. (Figure 6)



www.ididitinc.com

ididit inc. 610 S. Maumee St. 49286 Tecumseh, MI PH: 517-424-0577 FAX: 517-424-7293