



Installation Instructions for 130368 & 130370 A/C Safety Switch Kits

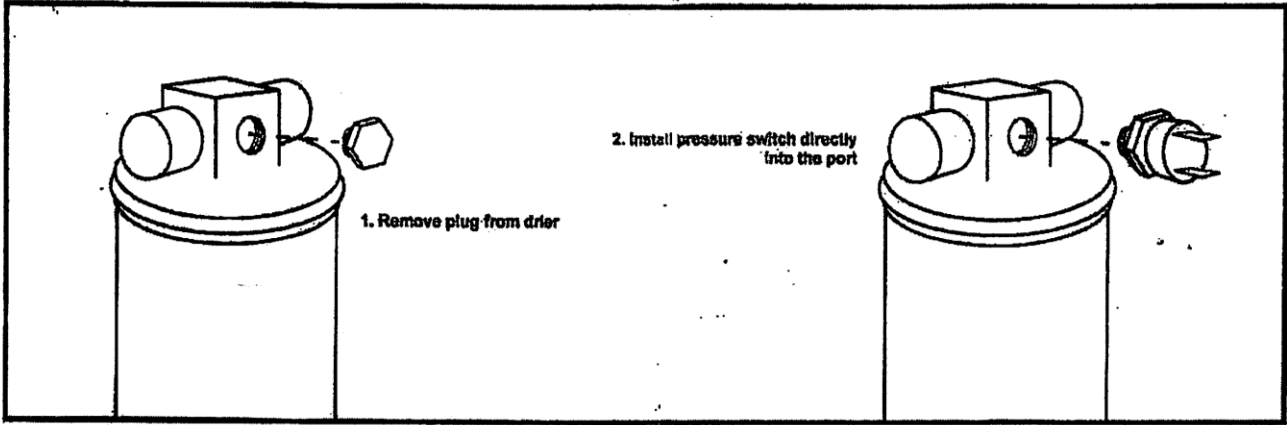

BINARY SWITCH WIRING

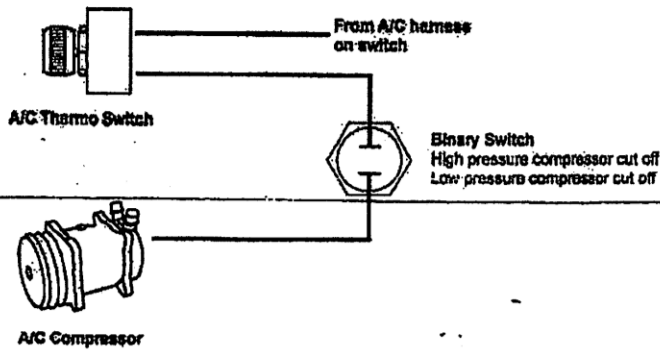

TRINARY SWITCH WIRING

