


Installation Instructions for 20199 Adjustable Rocker Arm Shaft Assembly Ford FE 330, 360, 361, 390, 391, 410, 428

1. Back off adjusting screw until ball is just about to touch underside of rocker arm.

2. Apply 2 to 3 drops of red threadlocker (see arrows) to adjuster screw on topside.

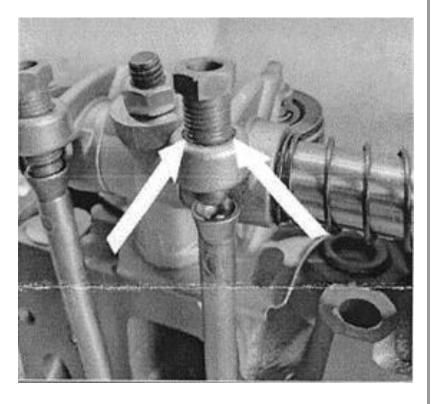



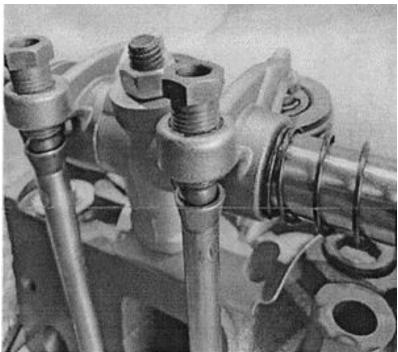



1-800-345-4545 jegs.com