


Installation Instructions for 61600 & 61610 Shifter Cables

Bulkhead or Clip Mount

Installation Instructions:

1. Slide the eyelet end of the cable through the shifter frame.
2. Secure the cable to the shifter frame by:
Clip Mount Cable: using one cable clip firmly seated into the cable.
Bulkhead Mount Cable: adjusting the two jam nuts on either side of the shifter frame.
3. Position shifter a "N" (Neutral) and slide cable eyelet over pin on shifter and secure with cotter pin(not included).
4. Route cable to transmission being careful to avoid any sharp bends or binding. Also, route away from any exhaust system components.
5. Slide the threaded end of the cable through the transmission cable bracket.
6. Secure the cable to the transmission cable bracket by:
Clip Mount Cable: using the second cable clip firmly seated into the cable.
Bulkhead Mount Cable: fasten the cable tab mount to the transmission cable mount.
7. Thread the supplied #10-32 jam nut onto the threaded cable end.
8. With the transmission in neutral thread the cable pivot onto the cable until the cable pivot lines up with the hole in the transmission arm and lock in place with the #10-32 jam nut.
9. Slide cable pivot into transmission arm and secure with supplied cotter pin.
10. Shift through each gear ensuring free movement of the cable pivot and engagement into each gear. Adjust cable pivot as necessary.

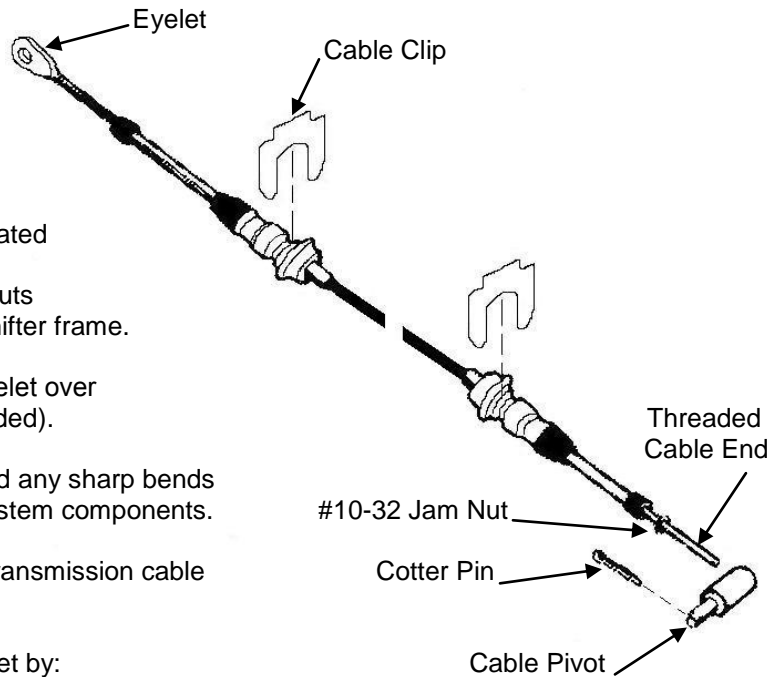

****Cotter pin and Cable pivot only included with Clip Mount Cable #555-61610****