


# ***Installation Guide for 64350***

## **Rear Shock Relocation Kit**

1963-1972 GM Truck

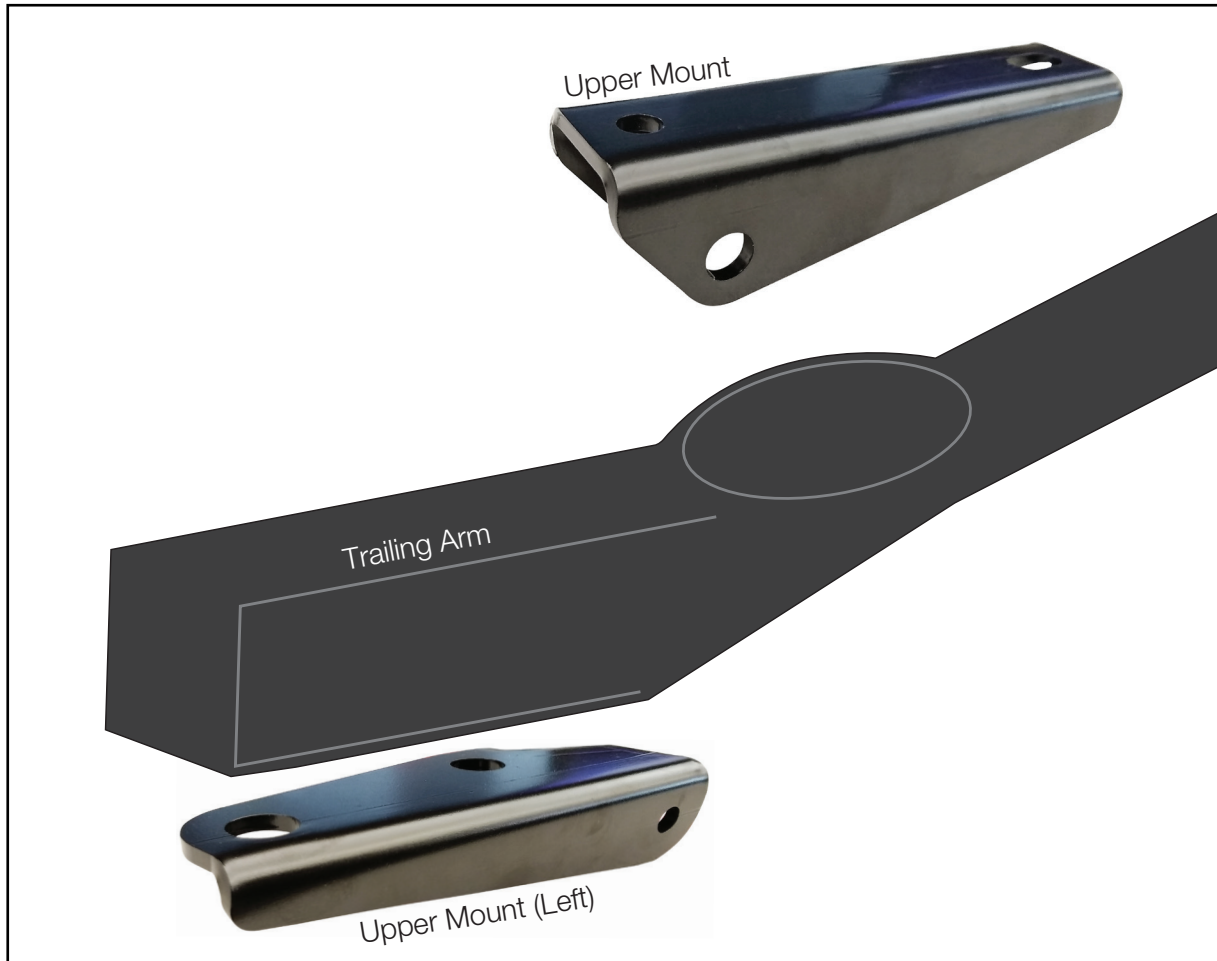

1. Jack up truck and remove the rear shocks.
2. Drill or grind off the (2) rivets securing the upper shock mounting brackets to the rear crossmember.
3. Bolt the new upper shock mounts to the rear crossmember. Use the supplied 3/8" hardware with the old rivet holes.
4. Unbolt and remove the old lower shock mounts from the trailing arms.
5. Install the new lower shock mounts in the same location as the original mounts.
6. Using the supplied 1/2 in. hardware, reinstall the rear shocks.