


Installation Instructions for 80013

2-Ton High Lift Jack Stand

with Tripod

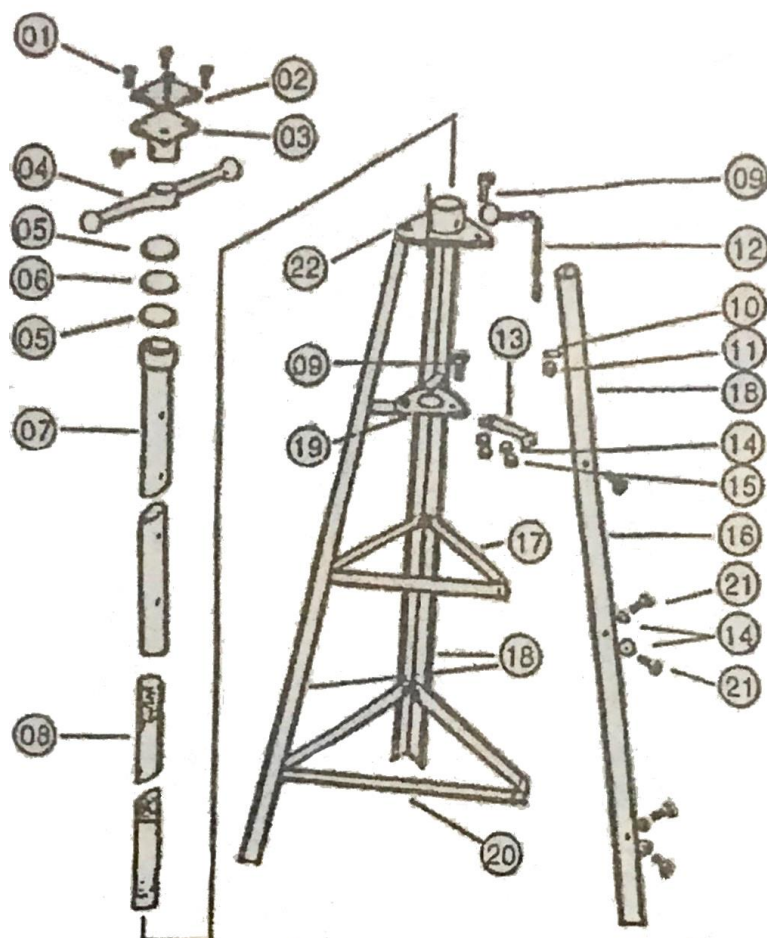

PART	DESCRIPTION	QTY	PART	DESCRIPTION	QTY
01	Allen Socket Head Screw	5	12	Detent Pin & Chain Assembly	1
02	Rubber Saddle Pad	1	13	Short Brace Strap	3
03	Saddle	1	14	Split Med. Lock Washer	15
04	Handle	1	15	Nut	3
05	Bearing Washer	2	16	5/16" - 18 x 3/4" Bolt	3
06	Bearing	1	17	Medium Length Brace	3
07	Upright Tube	1	18	Leg	3
08	Screw Rod	1	19	Lower Support Flange	1
09	3/8" - 16 x 1" Bolt	6	20	Long Brace Support	3
10	Split Med. Lock Washer	6	21	5/16" - 18 x 1/2" Bolt	12
11	Nut	6	22	Upper Support Flange	1