


Installation Instructions for 800645 Small Block Ford Engine Cradle

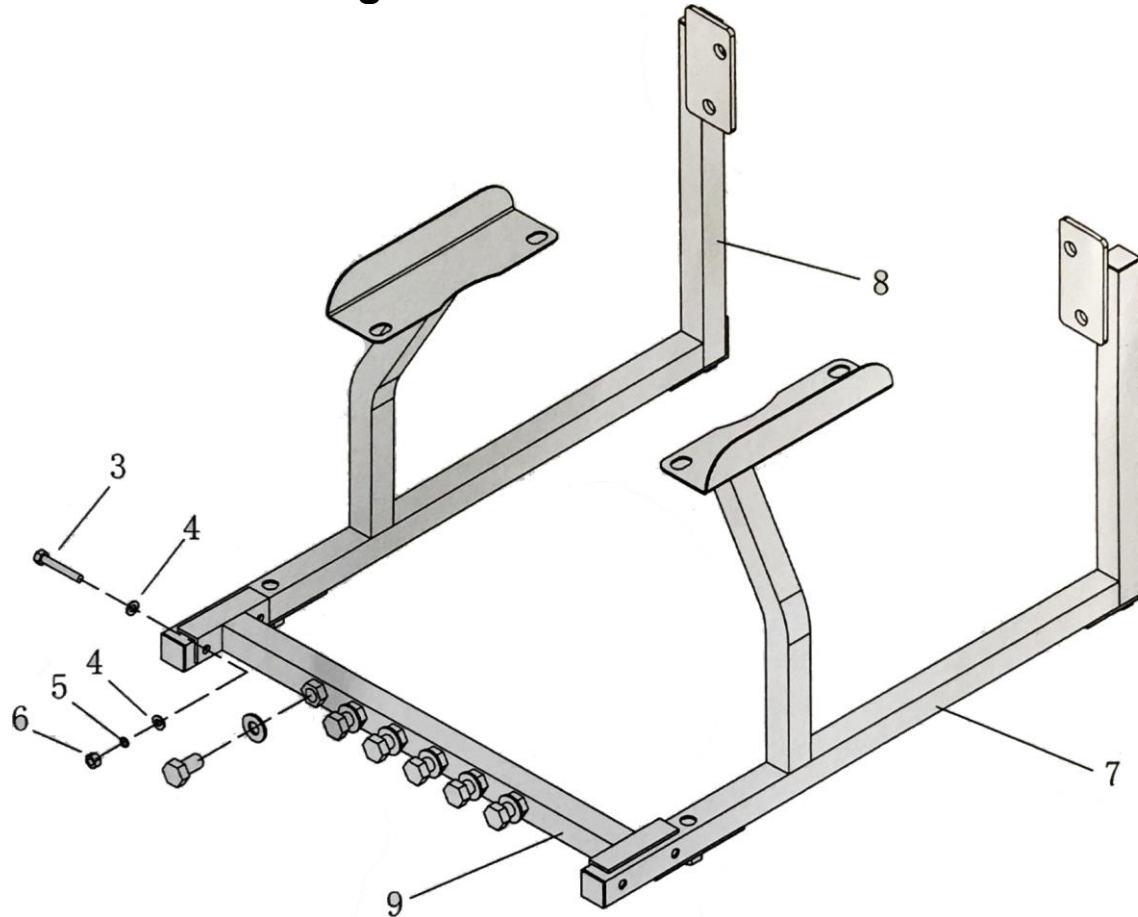

| Part | Description | Qty |
|------|------------------|-----|
| 1 | Bolt 7/16"-3/4" | 6 |
| 2 | 7/16" Washer | 6 |
| 3 | Bolt M6 x 40 | 4 |
| 4 | M6 Washer | 8 |
| 5 | M6 Spring Washer | 4 |
| 6 | M6 Nut | 4 |
| 7 | Part 1 | 1 |
| 8 | Part 2 | 1 |
| 9 | Part 3 | 1 |