Installation Instructions for 81071 On Board Dragster Air Compressor

Drain after every race weekend.

Find a flat surface to mount unit to. It can be mounted in any direction but upside down.

We recommend <u>NOT</u> to mount unit in driver's compartment. In a Door Car the trunk is a good place. In a Dragster, in front of the foot box is recommended.

Mark the four mounting holes using the pattern included in this kit. Use a 'H' drill bit to drill holes.


Mount the four feet to bottom of mounting plate. Install unit and tighten nuts.

Remove C02 bottle and install air line from C02 bottle to your JEGS system using the 1/4" compression fitting on top of regulator.

Wire the Red wire to 12 volt source with at least a 15 amp switch. Ground the Black wire to good ground.

Turn your unit on. Let it pump up and check complete system for leaks.

Take a spray bottle with soap and water in it and spray all fittings to check for leaks. Your system will work to its maximum performance with no leaks.

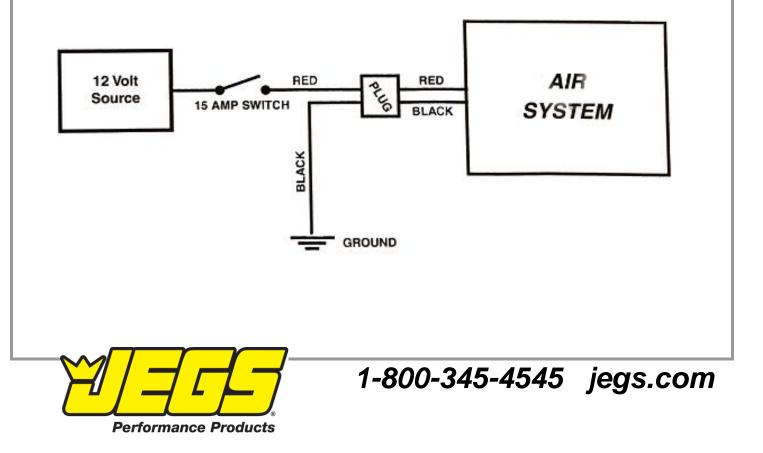

PRINT THIS PAGE AT 100% / Actual Size (Ctrl+1) WITH PAGE SCALING SET TO 'None'

