


Radiator Support Bushing Instructions

555-93099 [1965-1967 GM A-Body]

- Insert the steel sleeve (#3) into the hole in the frame until the sleeve is flush with the inside of the frame.
- Set the thin flat washer (#4) on the frame around the steel sleeve (#3).
- Slide the rubber bushing with step (#5) around the steel sleeve (#3) and flat onto the thin flat washer (#4).
- Press the thin top hat shaped washer (#6) down onto the rubber bushing (#5).
- Now set the radiator on the newly installed parts.
- Place the flat rubber bushing (#7) on top of the radiator support centered on the hole.
- Center the large diameter flat washer (#8) on top of the flat rubber bushing (#7).
- Slide the medium flat washer (#2) on the $\frac{7}{16}$ in. bolt (#1) and slide the bolt through the entire assembly.
- Attach the nut (#9) and tighten the assembly to the factory specifications.

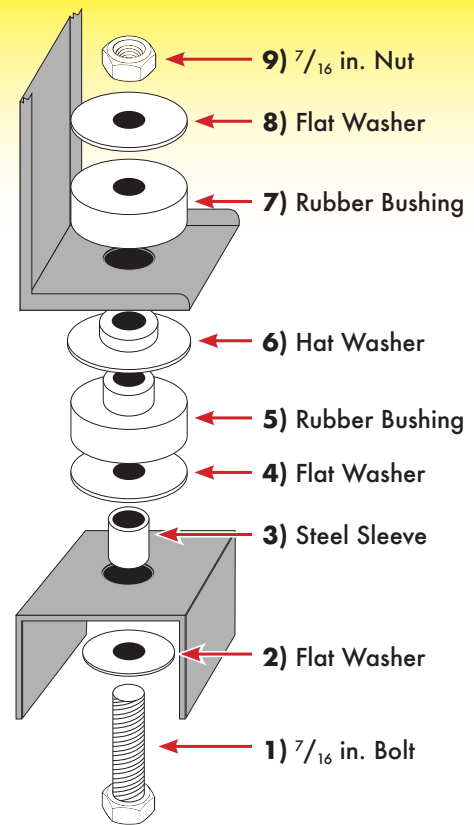

JEGS.com

1-800-345-4545