


Radiator Support Bushing Instructions

555-93100 [1968-1972 GM A-Body]

- Place bushing (#4), with installed steel insert (#3), over the hole in the frame.
- Set the radiator support on the bushing (#4).
- Place the second rubber bushing (#5) on top of the radiator support centered on the hole. Make sure that it fits around the exosed portion of the lower bushing (#4).
- Center the flat washer (#6) on top of the rubber bushing (#5).
- Slide the $\frac{7}{16}$ in. bolt (#7) through the entire assembly.
- Slide the lock washer (#2) onto the bolt and attach the nut (#1).
- Tighten the radiator support bushing assembly to the factory specifications.

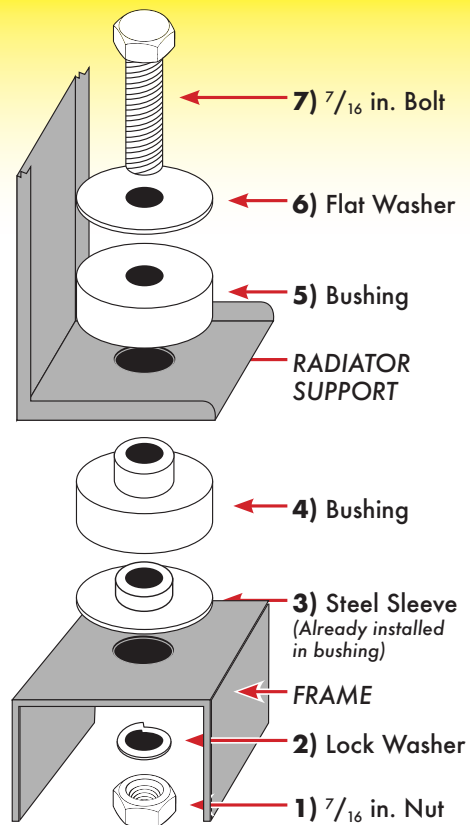

JEGS.com

1-800-345-4545