

Installation Instructions for 98000-98041

Tonneau Cover

Tri-Fold




1. Place the cover on front of truck bed.



Use orange clip to store knob when cover is folded.



2. Secure front clamps. Trucks with Utility Track see Step 9.

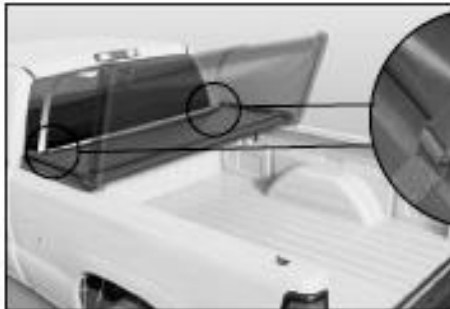

3. Undo both clips so cover can be unfolded.



4. Unfold first section.



5. Unfold second section.




6. Cover is laying down flat.

7. Secure rear clamps for a tight fit.



8. Vehicles With Utility Track

- All Toyota Tacoma or Tundra Pickups.
 - 2007 GMC/Chevy Pickups
 - 2008 Ford Pickups
 - 2008 Nissan Pickups
 - 2008 Dodge Pickups
- Use aluminum block to attach cover by sliding into place and locking clamping on to blocks.

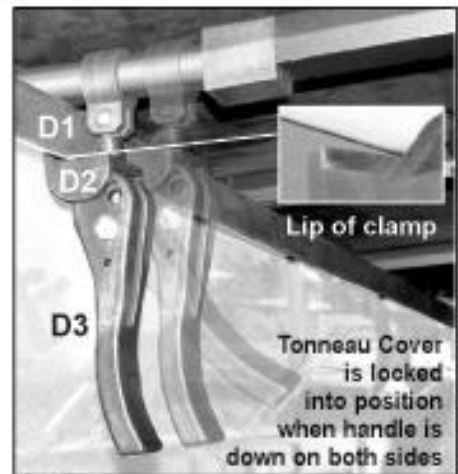

2&7. To clamp cover down, put lip of clamp under side bed rail and push handle down. (See D1, D2, D3)



Use orange clip to store clamp when cover is folded.

How To Adjust Clamps


- The clamps might need adjusted.
- To adjust, turn handle on clamp clockwise to tighten or counter clockwise to loosen.

Patent No's.
7,823,957 /
8,146,982 /
8,256,824




1-800-345-4545 jegs.com

8 GM Pickups with Utility Track

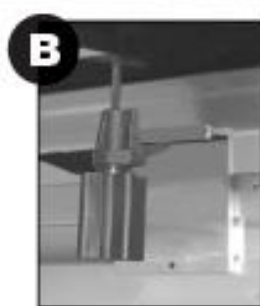


- A.** Slide aluminum blocks into track, position and tighten set-screw.
- B.** Secure front clamp on to aluminum block.
- C.** Attach rear clamps

8 Nissan Pickups with Utility Track

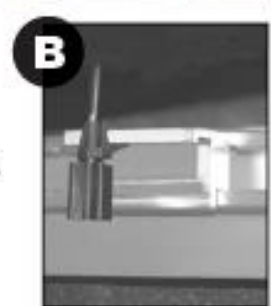



- A.** Slide aluminum blocks into track, position and tighten set-screw.
- B.** Secure front clamp on to aluminum block.
- C.** Attach rear clamps

8 Dodge Pickups with Utility Track

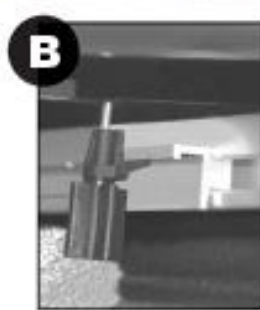



- A.** Slide aluminum blocks into track, position and tighten set-screw.
- B.** Secure front clamp on to aluminum block.
- C.** Attach rear clamps

8 Toyota Pickups with Utility Track

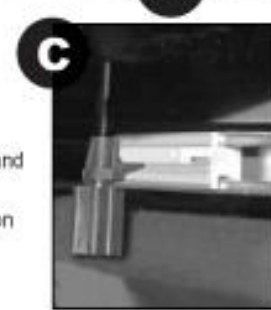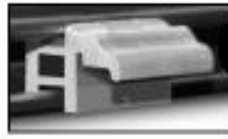

- A.** Loosen rear 2 bolt's on utility track and slide aluminum blocks into track.
- B.** Re-tighten rear 2 bolt's. Then position and tighten blocks with set-screw.
- C.** Secure front clamp.
- D.** Attach rear clamps.


8 Ford Pickups with Utility Track

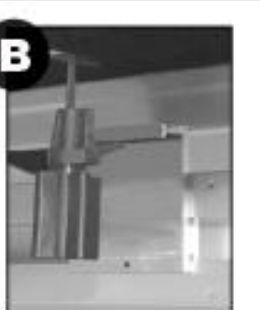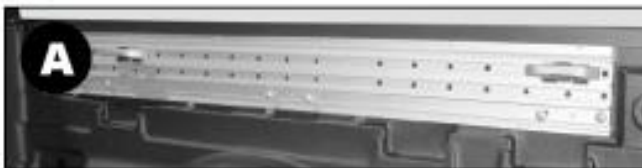

- A.** Slide aluminum blocks into track, position and tighten set-screw.
- B.** Secure front clamp on to aluminum block.
- C.** Attach rear clamps

9 Useful Information.

- A.** If there is a gap from the corner to the edge of the wing tailgate piece when the cover is fastened. (1) You can put an extra foam corner piece on the back existing corner pieces.

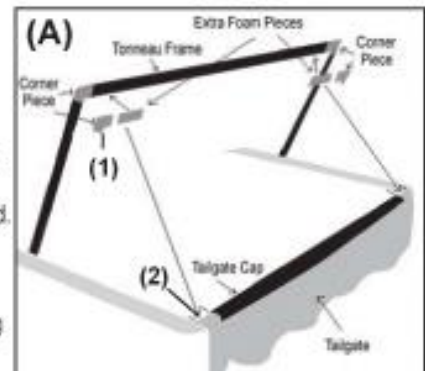

- B.** Or, Replace the Wing Style Tailgate Piece with a Flatter Style Tailgate Piece.