




***JET Power-Flo***  
**Throttle Body Spacer Installation Instructions**  
**Chevrolet & GMC T.B.I.**  
**Part #s 62104, 62105, 62108**

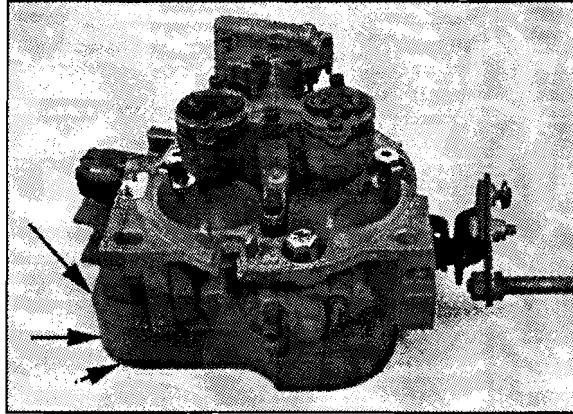

1. Remove air cleaner assembly.
2. Remove the three (3) bolts that mount the throttle body assembly to the intake manifold.
3. There is a bracket that mounts the fuel lines to the top of the transmission bellhousing. Remove the bolt that holds the bracket, do not remove the fuel lines from the throttle body.
4. Lift the throttle body, remove the gasket and clean any residue from the surfaces. Be careful not to get any material in the intake manifold.
5. Install the JET Power-Flo throttle body spacer using one gasket between the intake manifold and the spacer and one gasket between the throttle body and the spacer.
6. Replace the three bolts that mount the throttle body to the intake manifold using the new bolts and flat washers supplied in the kit.
7. Replace the air cleaner studs if necessary.
8. Verify the throttle linkage, cruise control and kick down cables are NOT binding and that the travel on the linkage is correct before you start the vehicle. **NOTE:** In some instances it may be necessary to readjust the cables for proper travel, refer to your factory service manual for correct adjustment procedures.
9. Reinstall the air cleaner assembly.
10. Reinstall the fuel line bracket on the transmission bell housing to secure the fuel lines.

***JET PERFORMANCE PRODUCTS***

17491 Apex Circle  
Huntington Beach, CA 92647

**Technical Support: (714) 848-5515**