



## **Performance Silicone Air Intake Kit**

### **Part Number: 57-1922**

**2015-2016 Audi A3 1.8T**  
**2015-2019 Audi A3 2.0T**  
**2015-2020 Audi S3 2.0T**  
**2016-2021 Audi TT 2.0T**  
**2016-2021 Audi TTS 2.0T**  
**2017-2019 Volkswagen Alltrack 1.8T**  
**2019-2020 Volkswagen Arteon 2.0T**  
**2015-2018 Volkswagen Golf 1.8T**  
**2015-2019 Volkswagen Golf R 2.0T**  
**2015-2019 Volkswagen GTI 2.0T**  
**2019 Volkswagen Jetta 2.0T**  
**2016-2019 Volkswagen SportWagen 1.8T**

## **Installation Instructions**

For technical inquiries please email us at [tech@hpsperformanceproducts.com](mailto:tech@hpsperformanceproducts.com)

In the email, please include the following information for faster response:

- Year / Make / Model / Engine of your vehicle.
- If it is a fitment issue, please include pictures showing the fitment problem.
- If there are missing parts, please list the part number(s) from the bill of materials on the 2nd page.
- Optional but recommended – Your contact phone number and preferred call back time.

You can also give us a call via 626-747-9200 for tech support Monday-Friday, 9:00am-5:00pm Pacific Time.

# Bill of Materials

**Kit Number: 57-1922**

Description	Prep	Part Number	Qty	Check
Silicone Intake Tube	1	57-1922	1	
Hose Clamp	2	EMSC-70-90	1	
Hose Clamp	2	EMSC-80-100	1	

- Before installing any parts of this intake system, please read the instructions thoroughly.
- Verify the contents of this intake kit before disassembling your vehicle.
- DO NOT INSTALL IF ANY PARTS ARE MISSING OR DAMAGED. CONTACT [tech@hpsperformanceproducts.com](mailto:tech@hpsperformanceproducts.com) IMMEDIATELY. WE ARE NOT RESPONSIBLE FOR ANY DAMAGE CAUSED DUE TO IMPROPER INSTALLATION.
- Installation requires moderate mechanical skills. A qualified mechanic is highly recommended.
- Do not attempt to install the intake system while the engine is hot.
- This installation may require removal of coolant lines that may be hot.
- For technical inquiries, please email us at [tech@hpsperformanceproducts.com](mailto:tech@hpsperformanceproducts.com)

## **PLEASE READ CAREFULLY BEFORE INSTALLATION!**


This installation is not for the novice customer. Install this product with EXTREME caution! Misuse of this product can destroy your engine! If you are not mechanically inclined, please have a professional automotive mechanic install this kit.

**NOTE: HPS holds no responsibility for any engine damage that results from misuse of this product.**

## **GETTING STARTED**

1. Turn the ignition OFF and disconnect the vehicle's negative battery cable. If the engine has run within the past two hours let it cool down.

NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicles' anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicle's anti-theft code. We also highly recommend NOT discarding any stock parts after the installation.

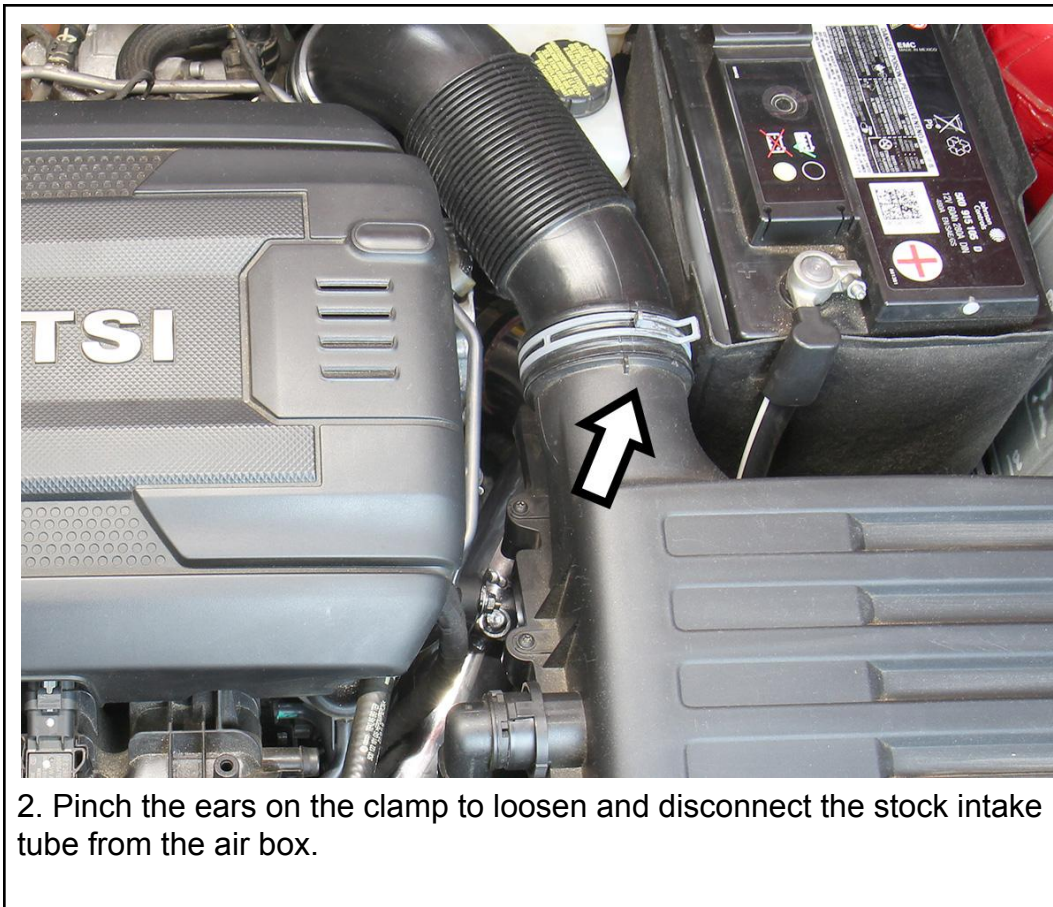

2. Pinch the ears on the clamp to loosen and disconnect the stock intake tube from the air box.




3. Loosen the hose clamp on the turbo.



4. Remove the stock intake tube from the engine bay.



5. With the provided clamps loosely fitted on the HPS intake tube, carefully attach the turbo side first.

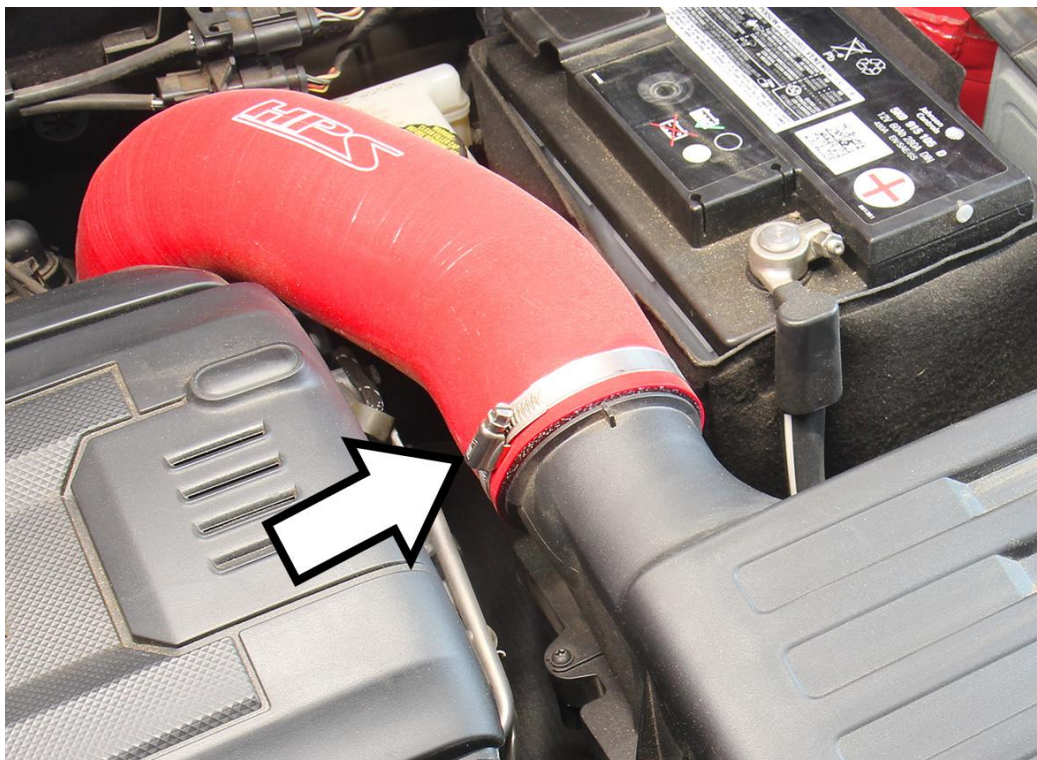

6. Connect the opposite side onto the factory air box and secure the hose clamps.

## Final Steps

Once the intake has been positioned, tighten all of the clamps and secure all of the parts.

Upon completion of the installation, reconnect the negative battery terminal before you start the engine. Double check to make sure everything is tight and properly positioned before starting the vehicle.

Start the engine. Let the car idle for 3 minutes. Perform a final inspection before driving. Listen carefully for any odd noises, rattles and/or air leaks prior to taking it for a test drive. If any problems arise go back and check the vacuum lines, hoses and clamps that may be causing leaks or rattles and correct the problem.

Periodically, recheck the alignment of the intake system and make sure there is proper clearance around and along the length of the intake. Failure to follow proper maintenance procedures may cause damage to the intake and will void the warranty.

## Also Available:

### HPS Intercooler Cold Side Charge Pipe Kit

[Part Number 17-129](#)



**HPS Intercooler Hot Side Charge Pipe Kit**

**[Part Number 17-128](#)**



**HPS Drop In Panel Air Filter**

**[Part Number HPS-457315](#)**



**Contact an authorized HPS Performance Products dealer or visit us at  
[www.hpsperformanceproducts.com](http://www.hpsperformanceproducts.com) for more details.**