

# **K&N** Installation Instructions **Part Number 33-2129**

This filter fits: Chevrolet Silverado / GMC Sierra Pickups  
with 4.3L V6, 4.8L V8 and 5.3L V8 Engines.  
Not for use in 6.0L V8 & 6.5L turbo Diesel applications. Use 33-2135.

**Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter is a direct replacement for the stock air filter, and no modifications will be required. However the following procedure MUST be followed to ensure a proper fit and seal of the K&N Filtercharger®.**

1. Loosen the hose clamp that secures the Mass Air Sensor to the airbox lid and carefully remove the Mass Air Sensor from the airbox lid. If the rubber connector that secures the Mass Air Sensor to the airbox lid comes off with the Mass Air Sensor remove it and place it onto the airbox lid making sure to align the groove on the connector with the tab on the lid. Do not tighten the hose clamp yet. (See Fig 1)
2. Loosen the 4 screws holding the airbox lid to the base and remove the lid from the vehicle.
3. Remove the dirty air filter and with a damp rag wipe off any dirt or dust from the inside of the air filter housing. The airbox must be clean and dry so that the gasket will stick to it.
4. Install the self-adhesive gasket to the air box lid making sure the gasket is seated and centered in the groove on the airbox lid. (See Fig 2)
5. Install the K&N replacement air filter into the airbox base.
6. Reinstall the airbox lid and tighten the 4 screws on the airbox lid.
7. Carefully re-install the Mass Air Sensor into the rubber connector on the airbox lid making sure it is fully inserted into the connector. Tighten the hose clamp.

**THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.**

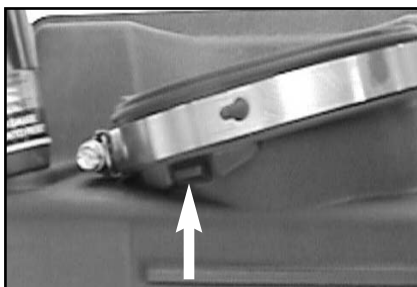


Fig. 1

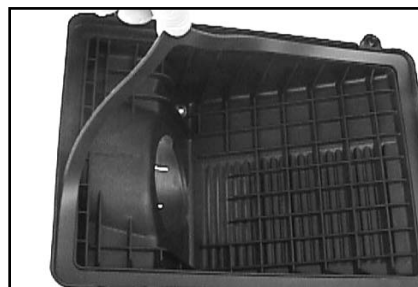


Fig. 2