



Installation Instructions

Part Number 33-2145

This filter fits: 97-00 Lexus ES300 3.0 V6
99-00 Lexus RX300 3.0 V6
97-00 Toyota Camry 2.2 I4 & 3.0 V6

99-00 Toyota Solara 2.2 I4 & 3.0 V6
97-00 Toyota Avalon 3.0 V6

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter is a direct replacement for the stock air filter, and no modifications will be required. However the following procedure MUST be followed to ensure a proper fit and seal of the K&N Filtercharger®.

1. Remove the air filter from the vehicles airbox.
2. With a damp rag wipe off any dust or dirt that may be inside the airbox.
3. Install the K&N FILTERCHARGER into the airbox base making sure that the end of the filter that is narrower is installed facing the hinged side of the airbox. (See Fig 1)
4. Re-install the airbox lid by inserting the two tabs that are on the airbox lid into the two slots that are on the airbox base (See Fig 2) while holding the airbox lid up as high as possible at the angle shown (See Fig 3).

On some vehicles the pressure needed to do this may be slightly more that with the stock air filter. Take care while doing this; if you do not have the tabs properly aligned first there is the possibility that you could snap off the tabs by using too much force. Make sure that the tabs are properly seated.

5. Next fasten the two clips that hold the airbox lid closed. Note. It is easier to fasten the clips by applying pressure to the center of the clip rather than trying to pull up on the clip to close it. (See Fig 4).

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

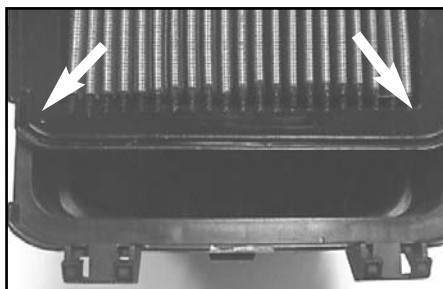


Fig. 1

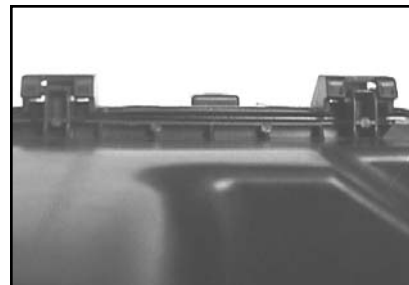


Fig. 2

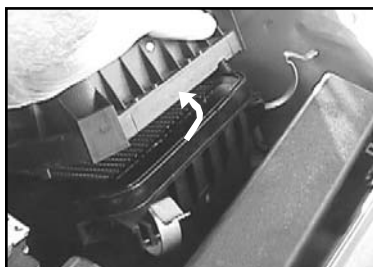


Fig. 3



Fig. 4