


2007- FORD EXPLORER SPORT TRAC 4.6L V8

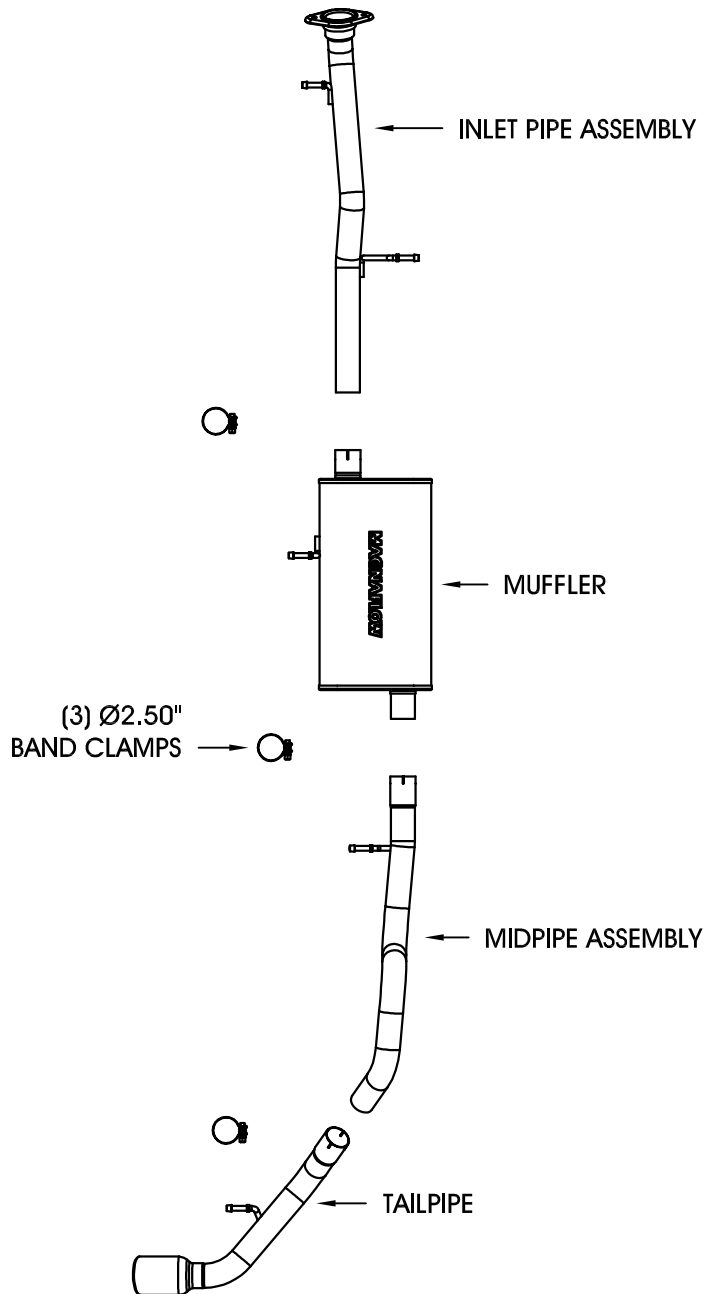

Warning: When working on, under, or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure a safe work area. Serious injury or death could occur if safety measures are not followed.

Step 1: (Carefully read all instructions before installation) Disconnect the vehicle's battery before removal of the OEM exhaust. This will allow the computer to reset itself with the new system, and prevent electrical accidents. Begin by cutting the OEM exhaust approximately 6" behind the catalytic converter flange, just in front of the cross-brace. Unbolt the flange and remove the cut section from the vehicle. Unbolt the clamp on the over-axle pipe, disengage all of the hangers from the rubber insulators, and remove the muffler section and tailpipe.

Step 2: Begin installing the new exhaust system by bolting the inlet pipe assembly to the catalytic converter using the provided nuts and bolts, and by fitting the hangers into the rubber insulators. Leave all clamps and fasteners loose for final adjustment of the complete system. Connect the muffler next using a provided 2.5" band clamp, and by fitting the hanger into the rubber insulator. Install the midpipe and tailpipe in a similar fashion.

Step 3: With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2" of clearance between the exhaust system and any body panels to prevent heat-related body damage or fire.)

Step 4: Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear. The supplied band clamps must be VERY tight to properly align the pipes and prevent leaks (Approximately 65ft-lbs). U-bolt clamps should be tightened to approximately 30-35ft-lbs. Inspect all fasteners after 25-50 miles of operation and retighten if necessary.

*MAGNAFLOW Performance Exhaust recommends professional installation on all their products

Technical support: 1-800-959-9226 ext. 4500

MAGNAFLOW Performance Exhaust - 22961 Arroyo Vista - Rancho Santa Margarita, CA 92688