

# PLEASE READ BEFORE STARTING INSTALLATION


While MBRPinc. has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust:

- that ALL components shown in the illustration on page 2 are present.
- that ALL mating components fit together.
- that there are no damaged components.
- that the system you have purchased is appropriate for your vehicle year, model and configuration.
- that the system will not interfere with any modifications previously installed.
- that you have read and understand these instructions.

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

## Installation Instructions for Systems; S6108304, S6108409, S6108AL

### 2004.5-2006 Dodge Cummins "600/610" Cat Back Single

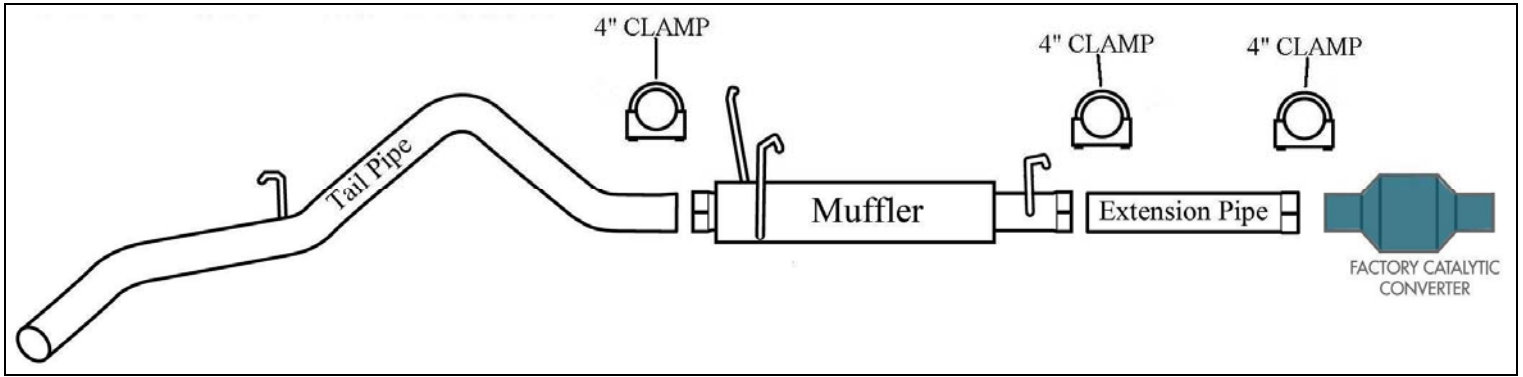

**S6108304 "PRO SERIES"**

- 1 PC - Extension Pipe
- 1 PC - High Flow Muffler
- 1 PC - Tail Pipe
- 3 PCS - 4" Clamps
- 1 PC - 5" Stainless Steel Tip

**S6108AL "Installer Series"**  
**S6108409 "XP SERIES"**

- 1 PC - Extension Pipe
  - 1 PC - High Flow Muffler
  - 1 PC - Tail Pipe
  - 3 PCS - 4" Clamps
- Tips Sold Separately**

**Removal of stock system:**

1. Apply a penetrating lubricant liberally to all exhaust fasteners, hangers and rubber insulators.
2. Remove the exhaust system from the rubber insulators and remove all of the clamps from the catalytic converter back.
3. Separate the slip joint behind the muffler and remove the tail pipe. Next, separate the slip joint located behind the catalytic converter and remove the muffler and extension pipe.

**Installation of MBRP Inc. Performance Exhaust:**

1. Install the **Extension Pipe** onto the catalytic converter. The **Extension Pipe** will require cutting to accommodate vehicles other than the Quad Cab long bed or Mega Cab truck.  
(**Installation tip:** Temporarily hang the muffler in place using the three OEM rubber hangers and measure from the muffler to the catalytic converter to determine the length required.)
2. Install the **Muffler** over the **Extension Pipe** and into the OEM rubber hangers.
3. Remove the factory rubber insulator for the factory tail pipe and install it onto the **Tail Pipe** hanger. Install the **Tail Pipe** from the rear of the truck, over the axle and attach to the outlet of the **Muffler**. Finish hanging the **Tail Pipe**.
4. Install the provided **Clamps** around the pipes where required. Adjust the **Tail Pipe** and check along the whole length of the exhaust system to ensure that there is adequate clearance around the fuel and brake lines or any wiring. If any interference is detected relocate or adjust.
5. Ensure that the exhaust is in place before tightening clamps. Start at the front of the exhaust system and begin tightening all connections.
6. Install and adjust the **Tip** to suit. Using a 17mm wrench tighten lock bolt located on the **Tip**. **A Tip is not included with "INSTALLER" or "XP SERIES" kits.** A Tip may be purchased separately, check with your dealer.

**Congratulations!** You are ready to begin enjoying the improved performance and driving experience of your MBRP Inc. performance exhaust system. We hope you enjoy your purchase.