



INSTALLATION INSTRUCTIONS
P/N 64925 –SBC and 90° V-6
P/N 64926 – BIG BLOCK CHEVROLET
MOROSO THROTTLE RETURN SPRING KITS

To install, first remove the two left front manifold bolts at the water passage. Large spring mounting bracket will straddle this water passage and match up to the existing bolt holes in the intake manifold. Re-install existing bolts in manifold and tighten to proper torque.


At carburetor side of installation, attach small spring mounting bracket and spacers as shown below. It is recommended that anti-seize be used on inside diameter of small spring bracket to ensure smooth operation.

Clip extension springs to brackets as shown. After springs are installed, check throttle action for binds. Throttle should return to closed position sharply and smoothly.

Moroso rod end P/N 90300 is recommended for this application.

PARTS LIST

P/N 64925	P/N 64926
1 1/4-20 X 1.75 HHCS GR 5 CLR ZINC	1 1/4-20 X 1.75 HHCS GR 5 CLR ZINC
1 1/4-20 NYLON INS. LOCKNUT	1 1/4-20 NYLON INS. LOCKNUT
1 OUTSIDE BUSHING	1 OUTSIDE BUSHING
3 INSIDE BUSHING	3 INSIDE BUSHING
1 SPRING BRACKET, MANIFOLD, CHROME	1 CARB SPRING BRACKET (CHROME)
1 CARB SPRING BRACKET (CHROME)	2 5" EXTENSION SPRING
2 5" EXTENSION SPRING	1 SPRING BRACKET CHROME

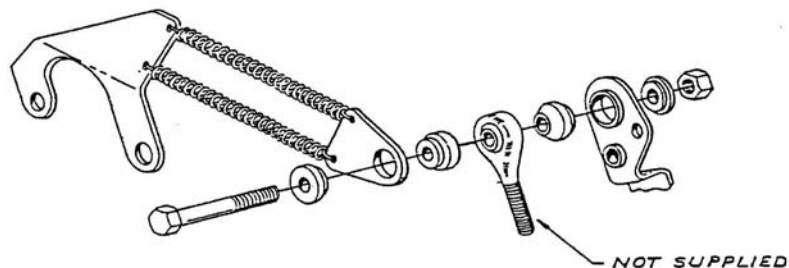

**For Technical Assistance, Call Moroso's Tech Line at
 (203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
 80 CARTER DR • GUILFORD, CT 06437
 Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com

64925INST

Rev.B
022811



INSTALLATION INSTRUCTIONS
P/N 64925 –SBC and 90° V-6
P/N 64926 – BIG BLOCK CHEVROLET
MOROSO THROTTLE RETURN SPRING KITS

To install, first remove the two left front manifold bolts at the water passage. Large spring mounting bracket will straddle this water passage and match up to the existing bolt holes in the intake manifold. Re-install existing bolts in manifold and tighten to proper torque.


At carburetor side of installation, attach small spring mounting bracket and spacers as shown below. It is recommended that anti-seize be used on inside diameter of small spring bracket to ensure smooth operation.

Clip extension springs to brackets as shown. After springs are installed, check throttle action for binds. Throttle should return to closed position sharply and smoothly.

Moroso rod end P/N 90300 is recommended for this application.

PARTS LIST

P/N 64925	P/N 64926
1 1/4-20 X 1.75 HHCS GR 5 CLR ZINC	1 1/4-20 X 1.75 HHCS GR 5 CLR ZINC
1 1/4-20 NYLON INS. LOCKNUT	1 1/4-20 NYLON INS. LOCKNUT
1 OUTSIDE BUSHING	1 OUTSIDE BUSHING
3 INSIDE BUSHING	3 INSIDE BUSHING
1 SPRING BRACKET, MANIFOLD, CHROME	1 CARB SPRING BRACKET (CHROME)
1 CARB SPRING BRACKET (CHROME)	2 5" EXTENSION SPRING
2 5" EXTENSION SPRING	1 SPRING BRACKET CHROME

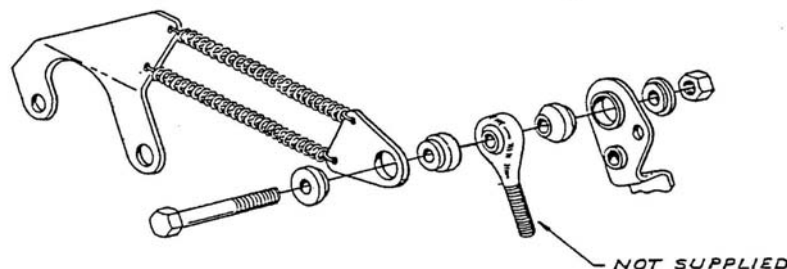

**For Technical Assistance, Call Moroso's Tech Line at
 (203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
 80 CARTER DR • GUILFORD, CT 06437
 Phone: (203) 453-6571 • Fax: (203) 453-6906

Visit Us At www.moroso.com

64925INST

Rev.B
022811