


RESISTOR INSTALLATION INSTRUCTIONS

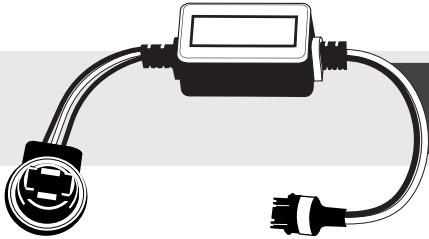

240002-240008


NOTE: Each part# is comprised of different plugs and sockets to accommodate your vehicle. The following instructions apply to part#'s 240002, 240003, 240004, 240005, 240006, 240008

Common tools

NOTE: Specific tools will vary for based on vehicle make and model

- Flat Head Screw Drivers
- Phillips Screw Drivers
- Torx Bits T10-T25
- Needle Nose Pliers

240002-194/921



240003-1156



240004-1157



240005-3156



240006-3157



240007-7440



240008-7443




INSTALLATION INSTRUCTIONS

Step 1

Locate your existing brake plug


Pull to remove the factory bulb from the bulb socket.
Twist and pull for #1156/1157

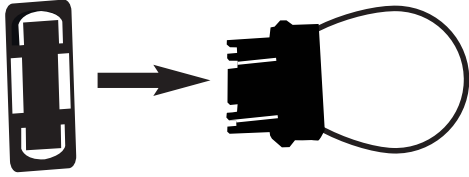

Step 2

Insert your new resistor


Push the plug end of the new resistor into the factory socket

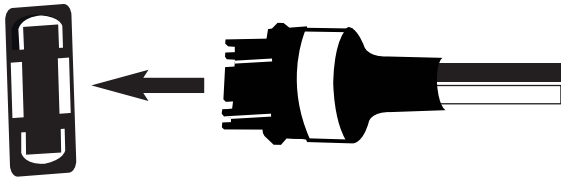

Step 3

Insert the new LED bulb into resistor

Push the new LED bulb into resistor socket.

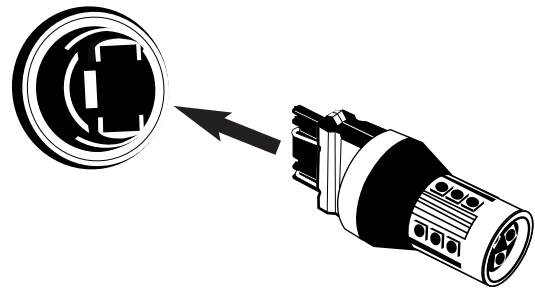

Step 4

Re-assemble light housing

Now with your new LED bulb and resistor in place insert the bulb into its original housing.

Thank you for purchasing this Putco product, see our entire line of quality products at www.Putco.com

For additional information please contact our customer service at 1-800-247-3974 or email us at Support@putco.com

PARTS INFORMATION

PART #	BULB TYPE	DESCRIPTION	JOBBER	UMAP
240002	194/921	SET OF TWO PLUG & PLAY RESISTOR KIT	\$19.78	\$23.99
240003	1156	SET OF TWO PLUG & PLAY RESISTOR KIT	\$26.81	\$32.99
240004	1157	SET OF TWO PLUG & PLAY RESISTOR KIT	\$26.81	\$32.99
240005	3156	SET OF TWO PLUG & PLAY RESISTOR KIT	\$26.81	\$32.99
240006	3157	SET OF TWO PLUG & PLAY RESISTOR KIT	\$26.81	\$32.99
240007	7440	SET OF TWO PLUG & PLAY RESISTOR KIT	\$26.81	\$32.99
240008	7443	SET OF TWO PLUG & PLAY RESISTOR KIT	\$26.81	\$32.99