

2017+ Super Duty LED Emblem Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974

Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and verify that all parts are included.

FRONT AND REAR KITS ARE SOLD SEPARATELY.

Tools Needed:

- Sockets: 8mm, 10mm
- Torx T25 and T30 drivers
- Flat head screwdriver
- Plastic Pry Bar
- Pliers

KIT #92701 CONTENTS	
Description	Qty.
Front Emblem (no front camera)	1
Threaded Rod	2
M5x0.8mm Flange Nuts	2
Add-a-Fuse Tap	1
5A Micro2 Fuse	1

KIT #92801 CONTENTS	
Description	Qty.
Front Emblem (with front camera)	1
Threaded Rod	3
M5x0.8mm Flange Nuts	3
Add-a-Fuse Tap	1
5A Micro2 Fuse	1
Black Washer Nozzle Cover w/ Tape	1
3M Foam Tape	1

KIT #92751 CONTENTS	
Description	Qty.
Rear Emblem	1
Threaded Rod	2
M5x0.8mm Flange Nuts	2
Add-a-Fuse Tap	1
5A Micro2 Fuse	1
3M ScotchLok Connector	2

2017+ Super Duty Front Emblem Installation Instructions:




1. Remove plastic cover by removing 13 retaining clips (number of retaining clips may vary) with flat head screw driver (locations shown above).




2. Once cover is removed, remove the top 8 grille screws with 10mm wrench (location shown above).




3. Pull upper grille forward to release upper grille clips. Once out, release 4 bottom clips with a flat head screwdriver. Passenger side locations are shown. Repeat on driver's side.

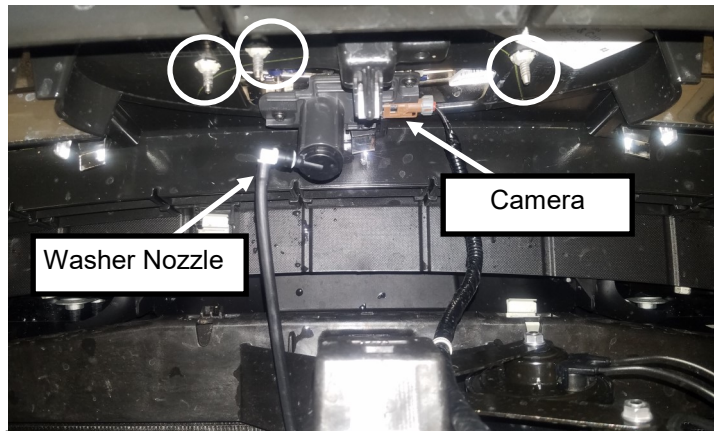


4. Disconnect camera harness and washer nozzle, if equipped. Remove grille and place on flat surface. Be careful not to damage the front of the grille. Remove (3) 10mm nuts to release emblem.

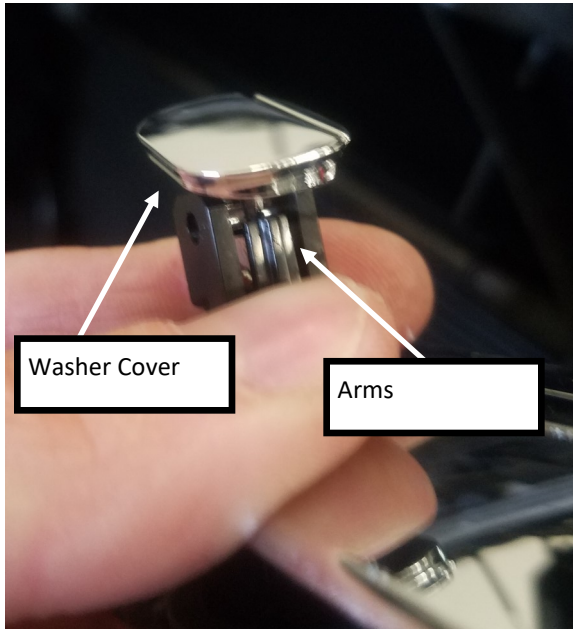


5. **Front camera equipped trucks:** Remove (2) T25 torx screws mounting camera assembly to emblem. Remove spray nozzle cover by gently prying arms with flat head screwdriver.

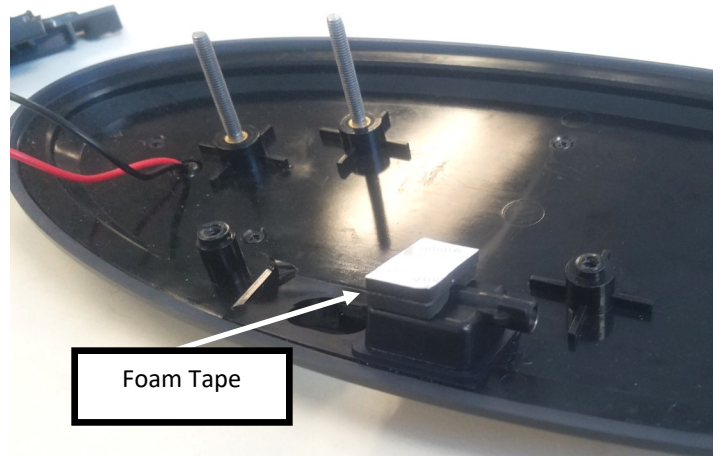

6. **Front camera equipped trucks:** Apply 3M foam tape to back of camera to prevent vibration in housing. Reinstall camera and washer nozzle mounting assembly using original T25 torx screws.

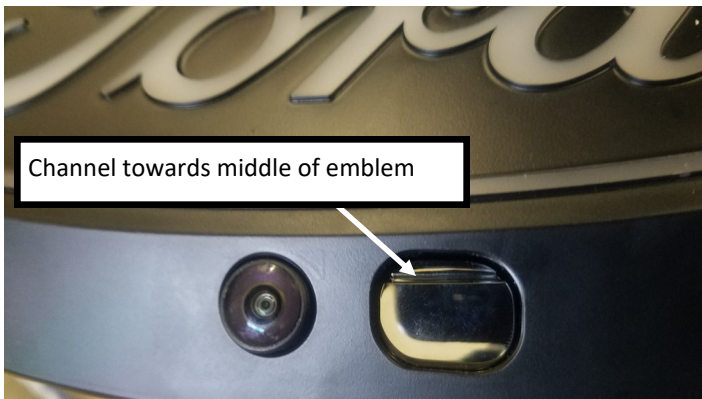


7. **Front camera equipped trucks:** Reinstall nozzle cover, ensuring proper orientation. Needle nose pliers may be needed to pull nozzle arm through opening when installing nozzle cover.

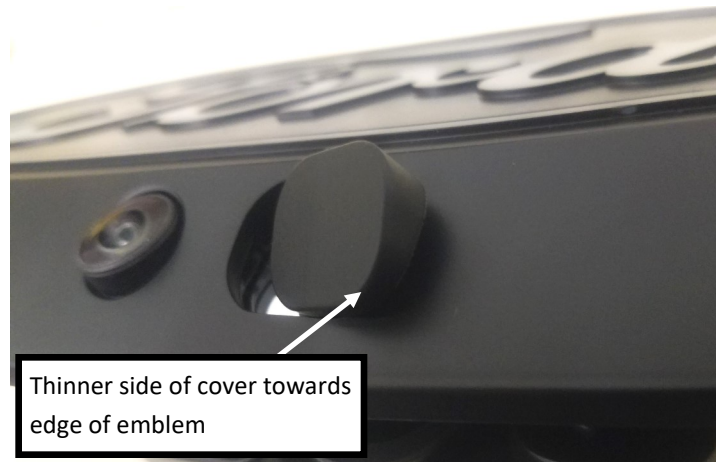


8. **Front camera equipped trucks:** Apply 3M tape to back of included washer cover. Peel backing off and press onto factory washer cover. Make sure orientation is correct!





9. Install emblem onto grille with provided (3) flange nuts. Tighten with 8mm wrench, being careful not to overtighten.

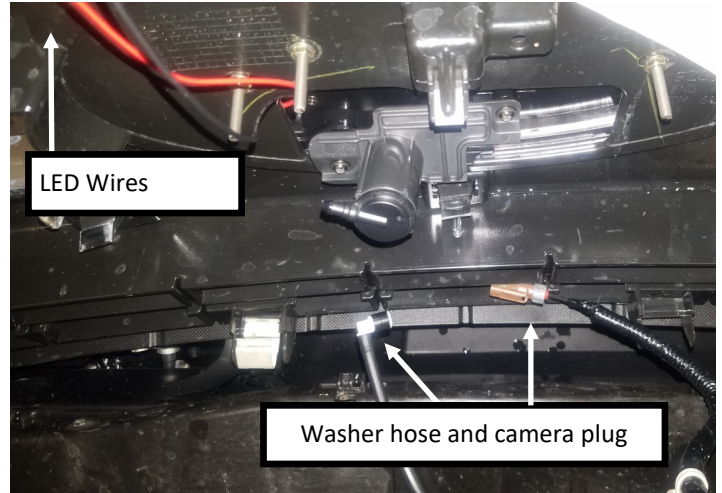

10. Reconnect any plugs for camera system and washer nozzle, if applicable. Feed LED emblem wires towards top of grille to finalize connections. Push grille into place, but do not install fasteners until emblem has been fully installed and tested.

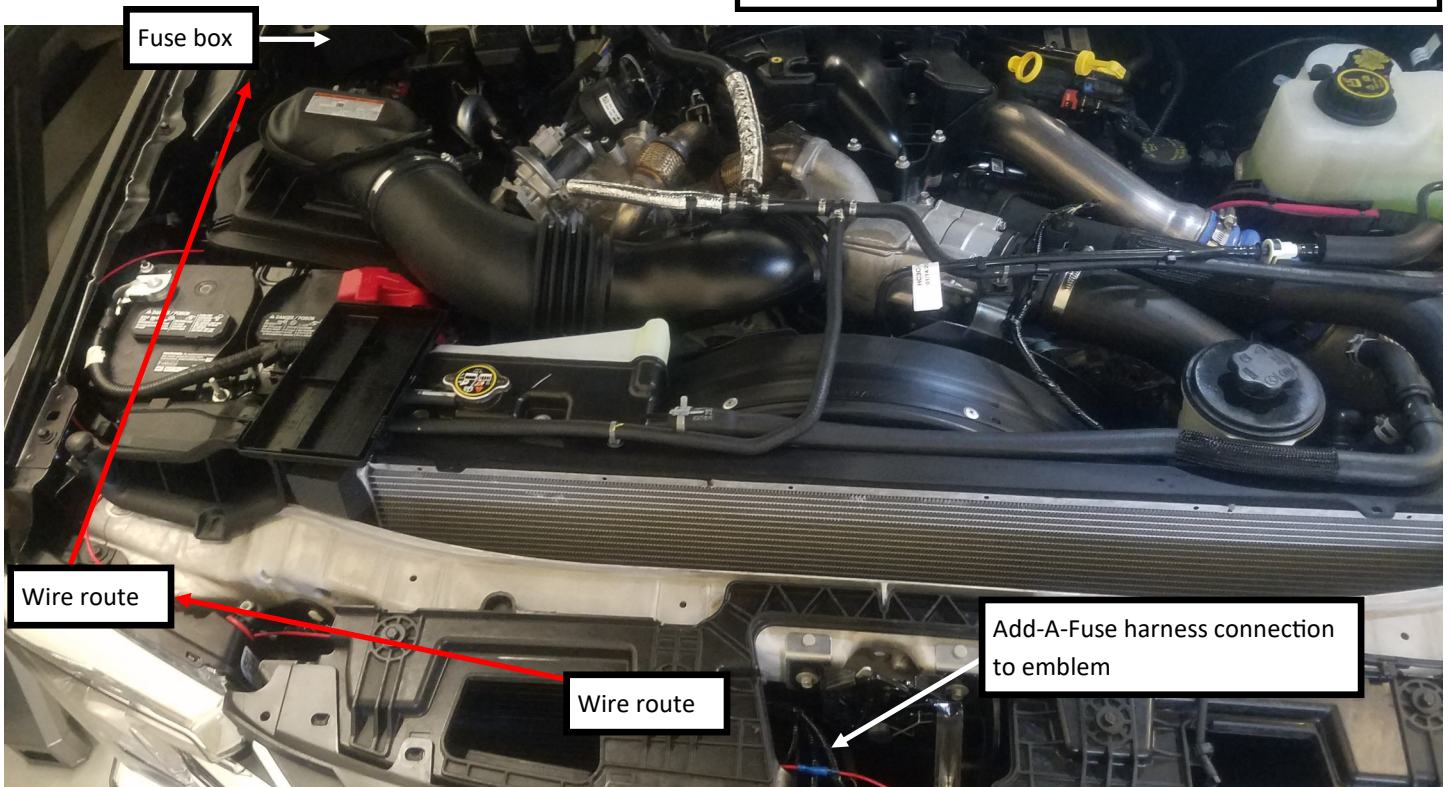

11. Connect the Add-A-Fuse tap to the LED emblem and route it to the fuse box. Be careful to avoid sharp edges and moving parts. Zip-tie wire in place when installation is complete.

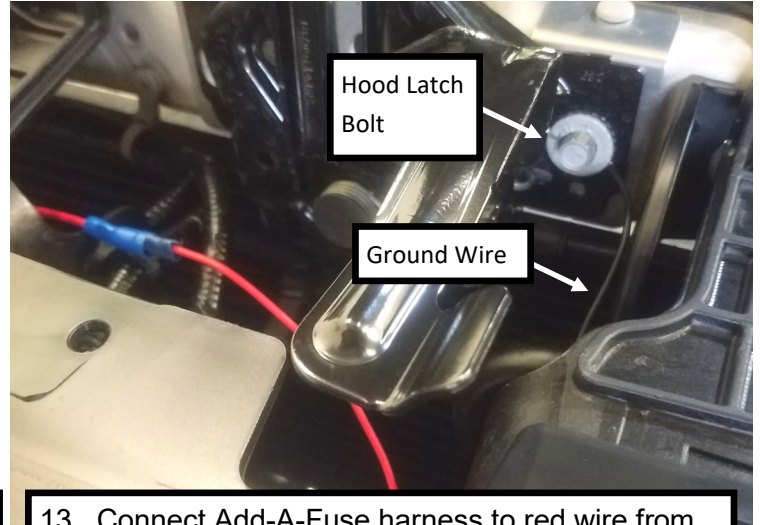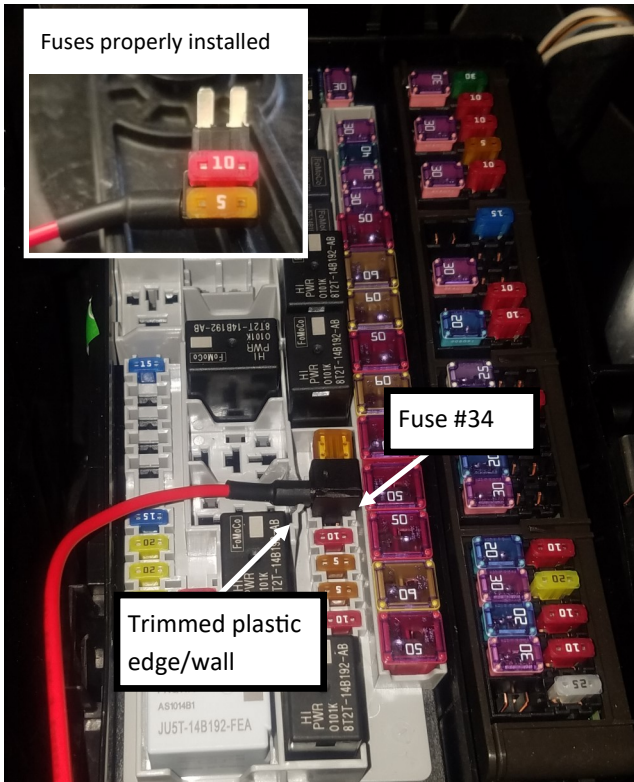

12. Remove Fuse #34 (10A fuse). Insert it in Add-A-Fuse tap and install provided 5A fuse on the wire side of Add-A-Fuse tap, as pictured. Install assembly into Fuse #34 slot. Some trucks may require use of wire cutters to trim off plastic edge in fuse box to allow wire to pass out.

13. Connect Add-A-Fuse harness to red wire from LED emblem. Strip ~1/2" of insulation from black wire, and ground to chassis. For example, loosen (do not remove) the 10mm bolt holding hood latch enough to wrap black ground wire around bolt. Tighten bolt, making sure wire is secured.



14. Test the emblem (key on or vehicle running). Make sure to zip-tie wires safely in place before final reassembly.

Rear Emblem Installation:



1. Lower tailgate and remove the eight T-30 screws from the access cover. Remove access cover.




2. Remove (2) 10mm bolts and shift latch assembly out of the way. This allows for better access to the back side of the emblem.



3. The emblem is held by 2 plastic clips and adhesive tape. Carefully pry on emblem and push the clips from inside the tailgate. **BE CAREFUL NOT TO DAMAGE THE PAINT OR SHEET METAL.**




4. Install threaded rods and tighten by hand. **BE CAREFUL NOT TO OVERTIGHTEN.**

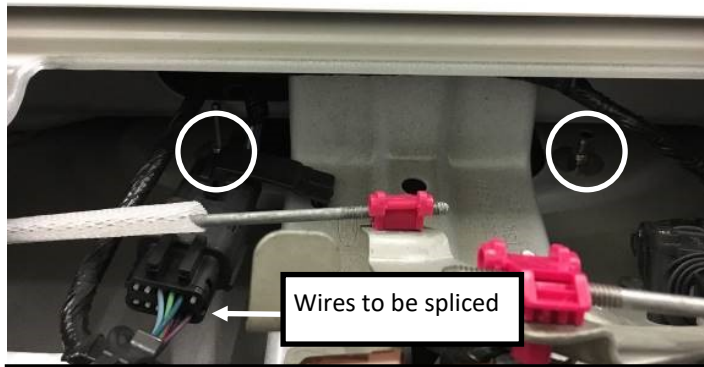

5. Install the emblem into the tailgate using the provided flange nuts. **Be careful not to overtighten the fasteners and damage the tailgate.**

Detailed View of Plug

-Wires vary by trim level

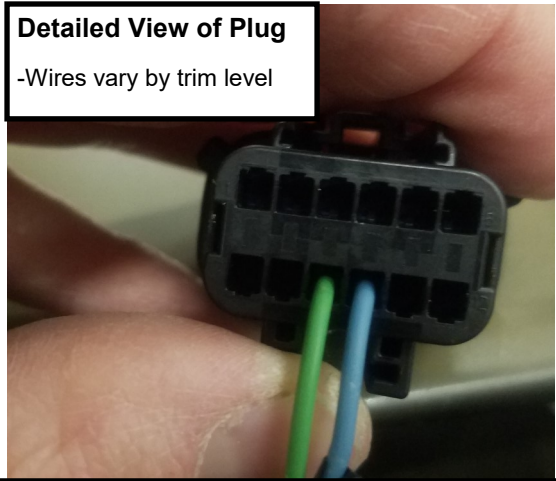


6. Using provided ScotchLoks, splice the emblem red wire into blue wire of the harness (pin 10). Splice the emblem black wire into the green wire of the harness (pin 9). This is easier with the plug disconnected.




7. Test the emblem (key on or vehicle running) before reassembling. Zip-tie wires to existing wiring harness. Keep the wire clear of sharp edges and from interfering with latch mechanism.

Alternate Wiring Instructions:


If your vehicle is not equipped with the wires listed above, wire to tail lamp.

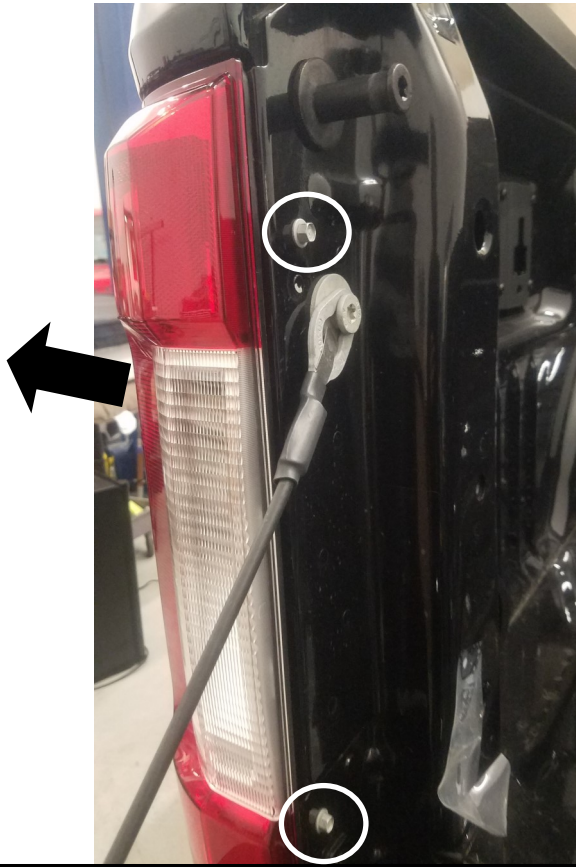

6a. Remove (2) 8mm bolts from driver's tail lamp. Pull out on tail lamp (away from fender) to remove from vehicle.

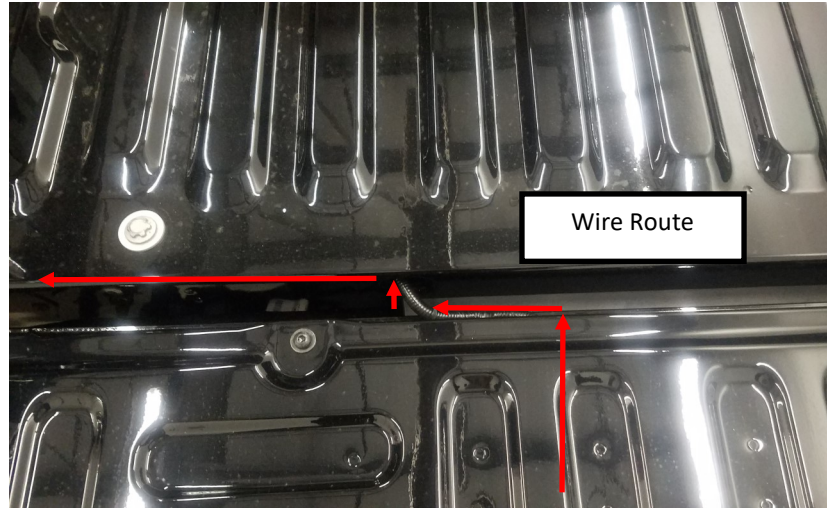

7a. Feed LED emblem wires to driver's tail lamp harness. Follow existing harness coming out of tailgate. Route the wire under the vehicle, behind the bumper, and up into the tail lamp cavity. Protect the wire with split loom or abrasion resistant sleeving.

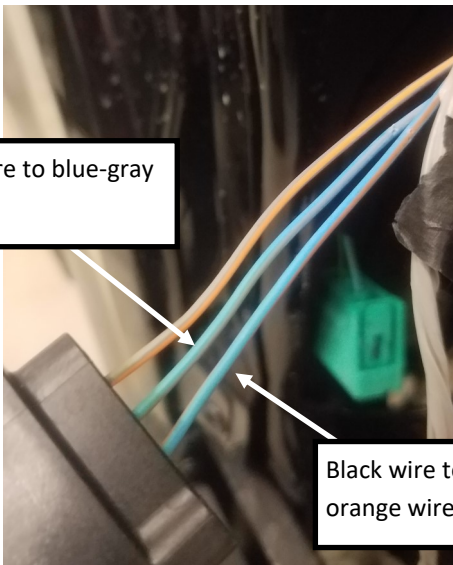

Red wire to blue-gray wire

Black wire to blue-orange wire

8a. Using provided ScotchLoks, splice the wires into tail lamp harness. Hook the emblem red wire to the blue gray wire, and the emblem black wire to blue orange wire.



9a. Test the emblem. It is tied to the running lamps and should be on when the Daytime Running Lamps or head lights are on. Zip-tie wires into place, making sure the wire is protected from pinch points and sharp edges.