



**Catalog #692370**  
**Russell Brake Hose Kit**  
**for 1989-1992 Chevrolet Camaro & Pontiac Firebird**  
**with 4-Wheel Disc Brakes**

**INSTALLATION INSTRUCTIONS**

Please study these instructions carefully before installing your new Brake Hose Kit. If you have any questions or problems, please call our **Technical Hotline at: 1-800-416-8628**, 7:00 am to 5:00 pm, Monday - Friday, Pacific Standard Time or e-mail us at **Edelbrock@Edelbrock.com**. Please fill out and mail your warranty card.


**IMPORTANT NOTE:**

**Proper installation is the responsibility of the installer. Improper installation will void warranty and may result in poor performance and engine or vehicle damage.**

**INSTALLATION PROCEDURE**

**IMPORTANT NOTE:** Do not allow the master cylinder to completely drain of brake fluid at any time during this process. Doing so may require removing the master cylinder from the vehicle for bench bleeding. Also, use care when handling brake fluid, as it can quickly damage finished surfaces (paint, plating, etc.).

1. Replace factory front hoses with Russell stainless braided hoses, duplicating factory routing.
2. Replace factory rear center hose with Russell hose, duplicating factory routing and mounting. NOTE: Install female hose end to chassis hard tube with suspension at ride height.
3. Replace factory rear outer hoses with Russell hoses, routing so that loop is formed (**See Fig. 1**).
4. Check hose clearance throughout entire steering and suspension travel range.
5. Bleed the system and check for leaks while applying pressure.

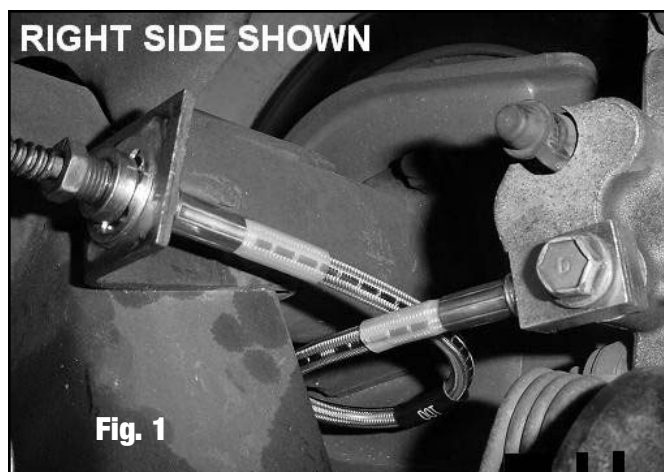

**Edelbrock Corporation, 2700 California St., Torrance, CA 90503**

**Tech Line: 800-416-8628**

**Office: 310-781-2222**

**E-Mail: Edelbrock@Edelbrock.com**