

HOW TO ASSEMBLE TWIST-LOK HOSE & HOSE ENDS



Step One: Cut hose to length using a sharp knife or shears.




Step Two: Oil inside of hose & barbed end of hose end. Insert barbed end into hose using a twisting action. Put the swivel end at center hex in a vise. Use a twisting motion make bottom of hex even with hose edge, rubber insulator will cover end of hose.




Step Three: Completed hose assembly.


HOSE INSTALLATION TIPS

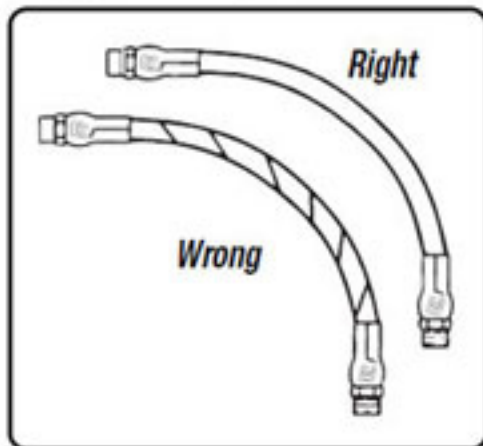

Avoid installing the hose in a twisted position.

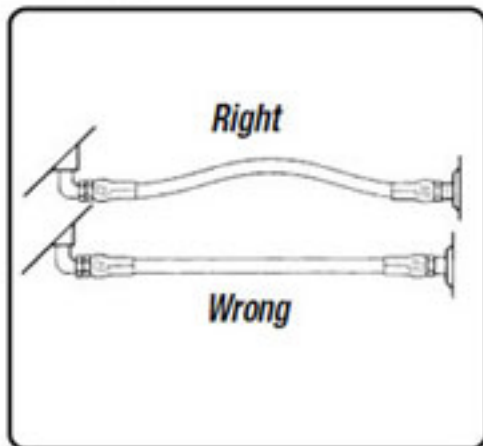

Allow slack in your hose assembly for changes in length that occur under pressure.

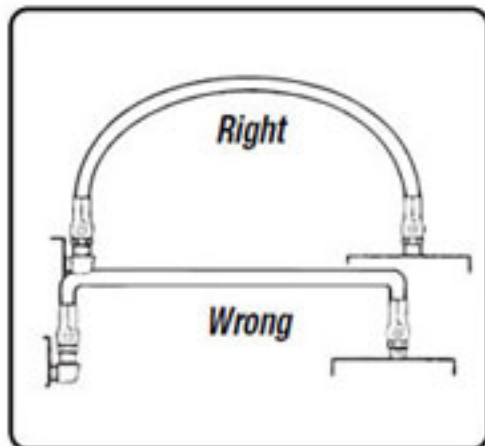

When routing the hose assembly, provide a smooth bend radius. Avoid sharp bends, which will collapse the hose I.D. and could restrict flow.