



01-02 GM 2500 HD Dual Steering Stabilizer Part # 7298

PARTS LIST		
ITEM#	DESCRIPTION	QTY
7500WS	WHITE STEERING DAMPER	2
HB-7298	HARDWARE BAG FOR 7298	1
B12RS	RED BOOT, SMALL/FOR 7500WS	2
BTIE	RED BOOT TIE	2
HSS	HYDRO SHOCK DECAL	2
I-7298	INST. SHEET FOR 7298	1

HARDWARE BAG LISTING		
ITEM#	DESCRIPTION	QTY
7298-MB	GM 3/4T,7298 MAIN STAB BRKT	1
7298-DT	GM 3/4T,7298 DRIVER TAB BRK	1
7298-PT	GM 3/4T,7298 PASS. TAB BRKT	1
140629	EB6 STUD BAG - P932/140629	2
142120	STAB WASH PKG - P889/145098	2
HOURGLASS 5/8	HOURGLASS 5/8 SHOCK BUSHING	2
STEM BUSH-SST	STEM BUSHING-STEERING STAB.	4
516X114X134U	5/16 X 1 1/4 X 1 3/4 U-BT R	2
516CTN	516-18 COARSE N/I LOCK NUT	4
516SAEW	5/16 SAE WASHER	4

(Park the vehicle on level ground with the tires pointing straight forward).

1. While supporting the front cross member with floor jack, remove the front lower A-Arm bolt at the frame. (If installing on a vehicle with 4" or more lift, it will be the upper front bolt on the after market cross member. Remove the bolt using 15/16 socket.
2. Once bolt is removed, reinstall with new outer stabilizer bracket. Be sure to install bolt pointing toward the front. Mount bracket so that the tab sticks back and outward toward the wheel. Also attach steering stabilizer stud to bracket as shown in photo #1. Repeat this process on Passenger Side.
3. Mount the center main bracket to the center link using the 4 u-bolts supplied. Do not tighten u-bolts at this time. (See Photo #2).
4. Attach cylinders to the main bracket and outer bracket. (See Photo #3). Center the main bracket so that both cylinders are pulled out equal distances. (See Photo #4).
5. Once steering stabilizer is installed, check all brackets and bolts for proper installation. Cycle steering left to right and check all parts for adequate clearance.
6. Retighten all hardware after the first 100 miles.



Photo #1

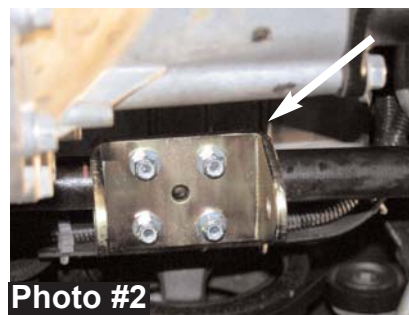


Photo #2

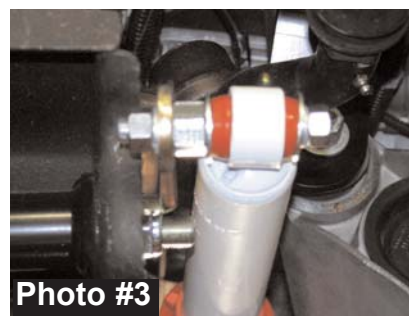


Photo #3



Photo #4

Seat Belts Save Lives, Please Wear Your Seat Belt.

* This steering stabilizer kit is designed for the 01-02 GM 2500 HD 4WD. It will fit lift heights 4-6". This kit will **NOT** work on vehicles with a lift kit that relocates the upper A-Arms.