

# ROUGH COUNTRY

## SUSPENSION SYSTEMS®

### Can-Am Defender 2" LED Rear Cab Mount


Thank you for choosing Rough Country for all your off road needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @ 1-800-222-7023. We will be happy to answer any questions concerning the design, function, and correct use of our products.

#### Tools Needed:

T40 Torx  
14mm Wrench  
Torque Wrench

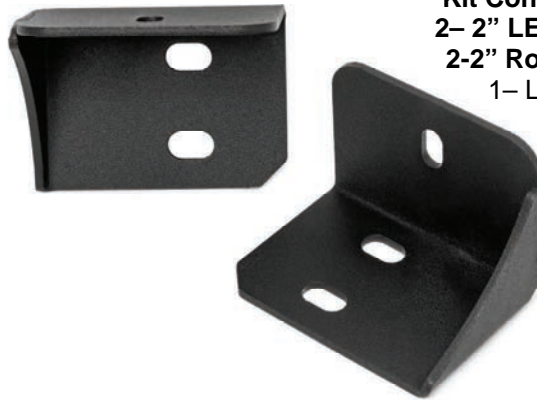

#### Kit Contents:

2- 2" LED Mounting Brackets  
2- 2" Rough Country LED Light:s  
1- LED Light Wiring Harness

#### INSTALLATION INSTRUCTIONS

1. Using a T40 Torx, remove the Torx bolts and plates from the top rear of the cab. **See Photo 1.**
2. Using the factory hardware, mount the 2" light mounting brackets to the rear of the cab. Tighten using a T40 Torx. Torque to factory spec. **See Photo 2.**
3. Attach the lights to the brackets using the supplied hardware. Tighten using a 14mm wrench. **See Photo 3.**
4. Wire the light according to the supplied instructions.

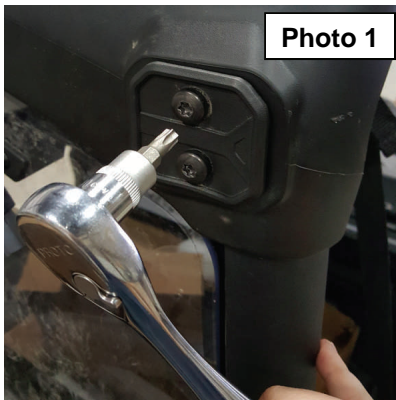


Photo 1



Photo 2



Photo 3

**Thank You for choosing Rough Country for your lighting needs!!!**

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable Federal, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

