



www.vintageair.com

# Packing List: 1969-72 Chevrolet Nova Standard Hose Kit (526674)


No.	Qty.	Part No.	Description
1.	1	096066	Hose, #6 A/C, Drier/Evaporator
2.	1	090166	Hose, #8 A/C, Condenser/Compressor
3.	1	096073	Hose, #10 A/C, Compressor/Evaporator
4.	2	33857-VUF	O-ring, #6
5.	2	33858-VUF	O-ring, #8
6.	2	33859-VUF	O-ring, #10
7.	1	41117-VUP	Refrigerant Oil
8.	1	31601-VUD	Adel Clamp, #10
9.	5	21300-VUP	Tie Wrap, 11"
10.	1	18250-VUB	Screw, 10-32 x 1/2"
11.	1	18251-VUB	Nut with Star Washer, 10-32

Checked By: \_\_\_\_\_  
Packed By: \_\_\_\_\_  
Date: \_\_\_\_\_

1



2

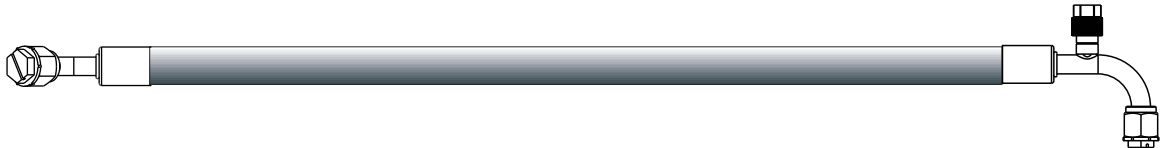

3



4




5



6




7

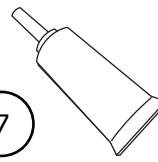

8



9

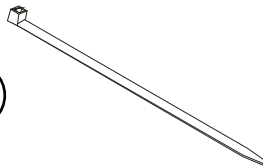

10



11



**NOTE: Images may not depict actual parts and quantities.  
Refer to packing list for actual parts and quantities.**