

Installation Instructions for 93500-93569


Tape-On Side Window Visors

Important Safety Information


- **CAUTION** - Before driving, insure that the vent visor is properly secured to vehicle.
- Do not use automatic "brush-style" car washes.
- Do not use cleaning solvents of any kind.
- Periodically check all components to make sure they are secure

Contents – 2 Piece Set

Front Driver Side Visor

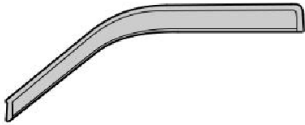


Front Passenger Side Visor

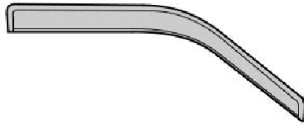

Alcohol Pad x2




Scuff Pad




Contents – 4 Piece Set

Front Driver Side Visor

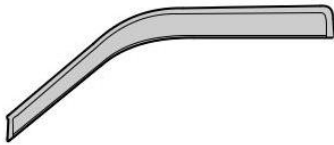

Front Passenger Side Visor

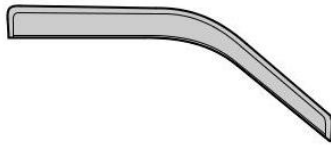


Rear Driver Side Visor



Rear Passenger Side Visor



Alcohol Pad x4




Scuff Pad

Preparation Before Painting/ Installation

- A trial fit is recommended to ensure proper positioning and fit
- Check fit of parts before painting as we will not accept the return of modified or painted parts
- Wash your vehicle to remove any debris and/or dirt from installation area.
- Dry the installation area with a clean towel

2 Piece Set

NOTE: Actual application may vary slightly from illustrations.




Scuff rubber trim with scuff pad. Clean trim/mirror cap with alcohol pad.



rubber window trim


mirror cap

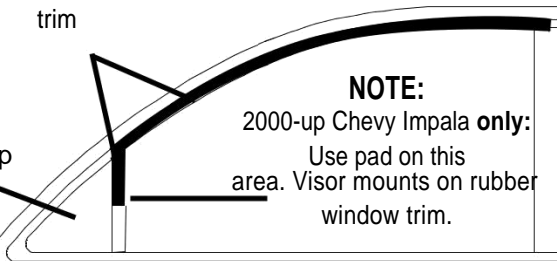

NOTE:
2000-up Chevy Impala **only:**
Use pad on this area. Visor mounts on rubber window trim.

1


Peel back tape liner 2" on front and rear end

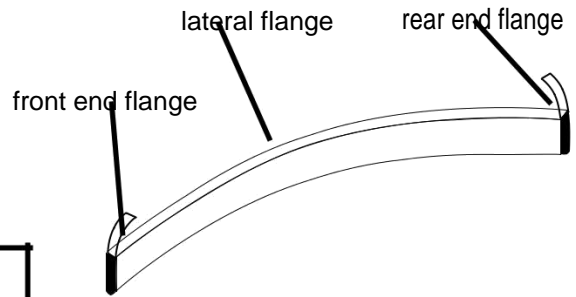

2


Align driver side vent visor with previously cleaned area and apply pressure to exposed tape

Position over mirror cap

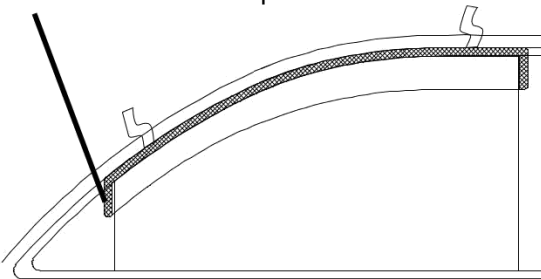


3

Remove remaining tape liner.

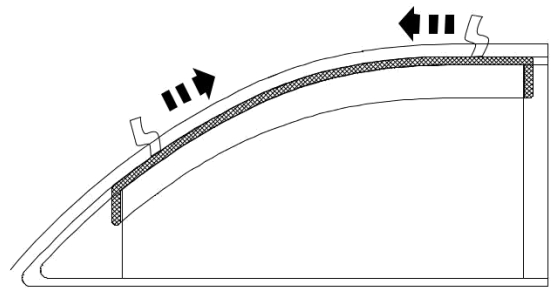

4

Apply pressure along length of vent visor to secure.

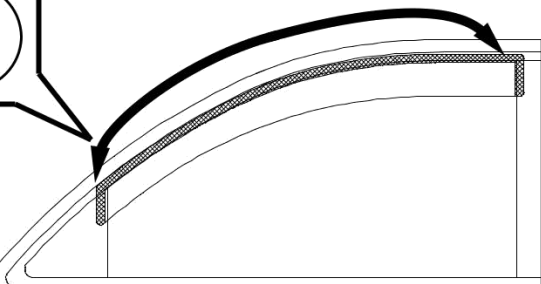

5


Repeat installation procedure for passenger side front vent visor.

4 piece set



Scuff rubber trim with scuff pad.
Clean trim along top of door with alcohol pad.

Alcohol Pad

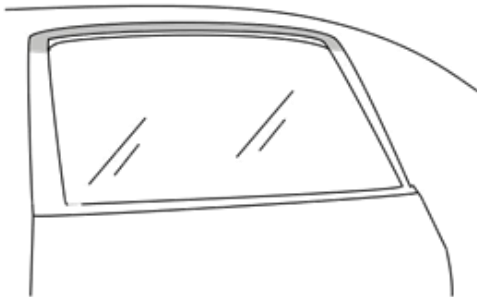


6

Remove tape liner from front and rear flanges. Peel back 2" of tape liner from each end.



7

Align vent visor with previously cleaned area and apply pressure to exposed tape. Remove remaining tape liner

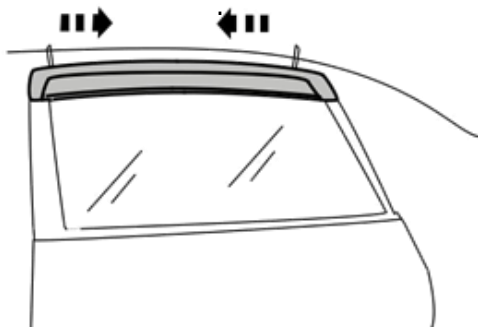

8

Apply pressure along length of vent visor to secure.



9

Repeat installation procedure for passenger side rear window visor.

Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.

Congratulations!

We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



1-800-345-4545 jeps.com