


01

THERE ARE QTY (4) RESISTORS IN THE PROVIDED ACCESSORY BAG. EACH HEADLIGHT WILL NEED QTY (2) RESISTORS.




02

CONNECT EACH RESISTOR TO THE BLACK CONNECTOR ON THE BACK OF THE NEW HEADLIGHT.

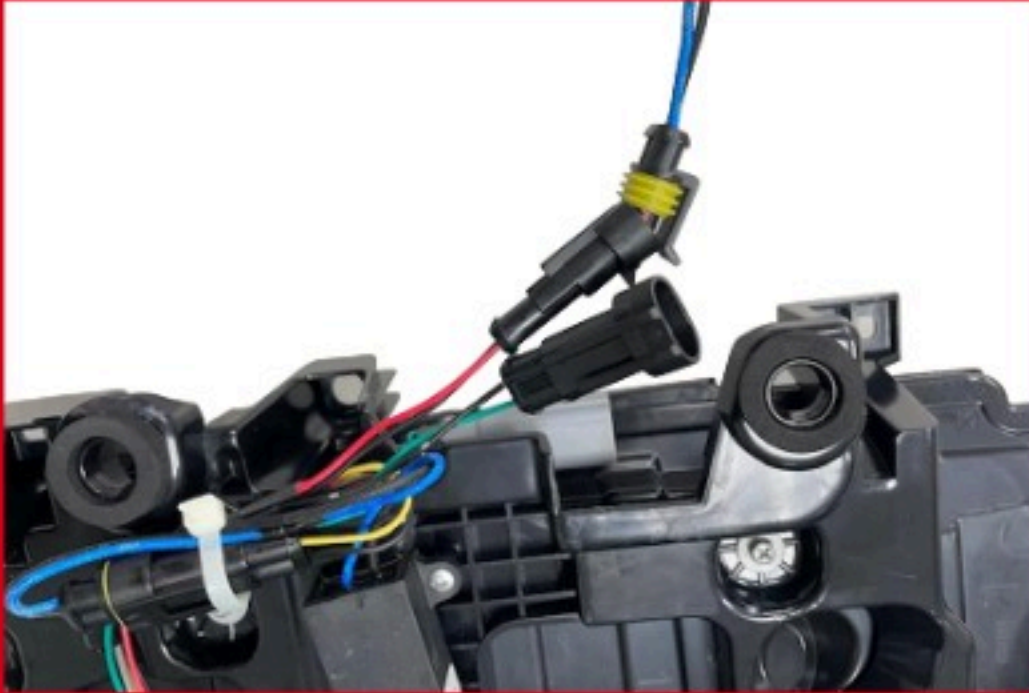


03

CONNECT THE OTHER RESISTOR TO THE OTHER BLACK CONNECTOR ON THE BACK OF NEW HEADLIGHT.

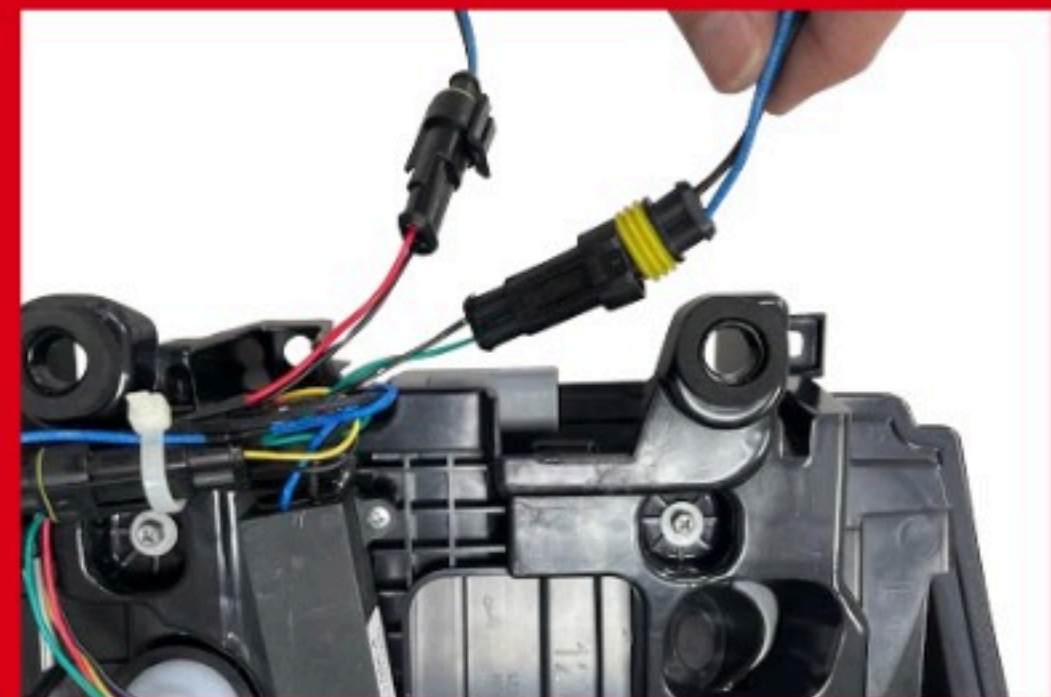

04

AFTER CONNECTING ALL (4) RESISTORS TO THE NEW HEADLIGHTS, INSTALL THE HEADLIGHTS.

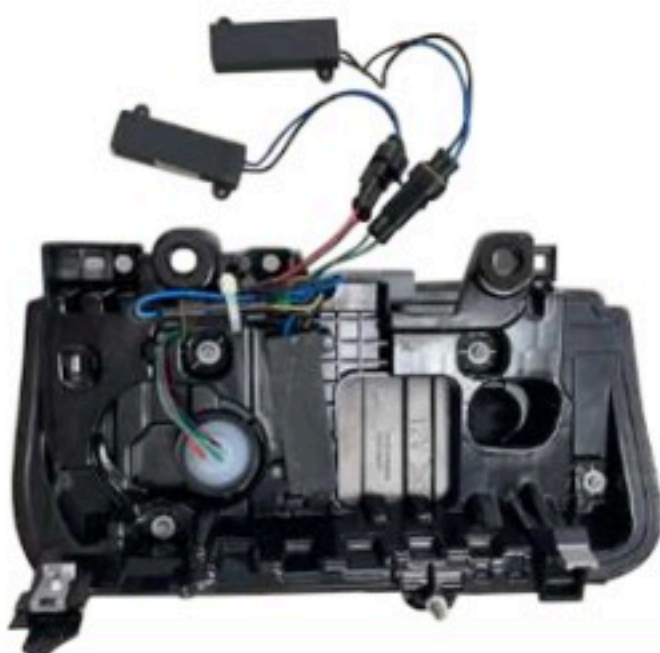

05

TEST ALL FUNCTIONS BEFORE DRIVING ON THE ROAD.

