




Part # TABLB9013

1980-86 Ford Bronco

Full Insulation and Sound Dampening Kit

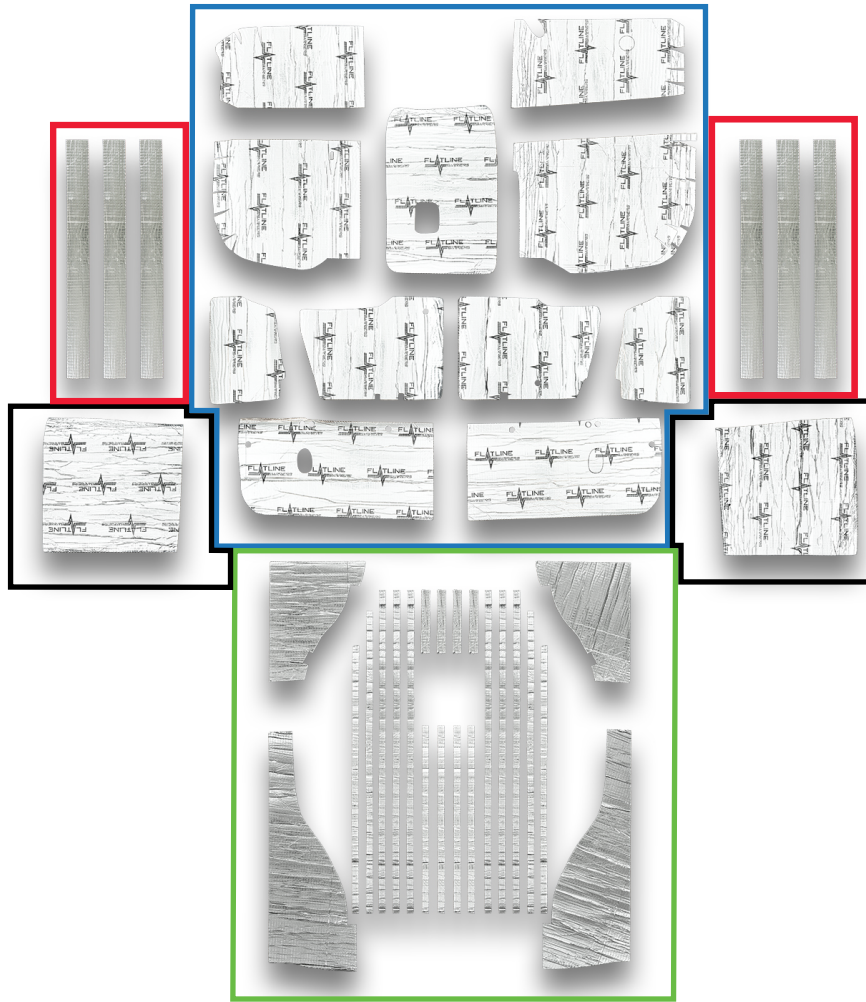

TABLB9012 - 1980-86 Ford Bronco Roof Insulation and Sound Dampening Kit

TABLB9011 - 1980-86 Ford Bronco Cargo Area Insulation and Sound Dampening Kit

TABLB9010 - 1980-86 Ford Bronco Door Insulation and Sound Dampening Kit

TABLB9009 - 1980-86 Ford Bronco Floor Insulation and Sound Dampening Kit

Installation Directions:

1. Clean any dirt, debris, or grime from the intended installation area using a degreasing agent.
2. Allow intended installation area adequate time to dry.
3. Remove the kit from its packaging, and dry fit the components allowing you to see exactly how the product will be placed for final installation.
4. Now you are ready to install. Remove the protective layer exposing the adhesive on your first piece applying it to its final position, using light pressure.
5. Repeat step 4 for each individual component until the full kit is installed.

***Note:** Flatline Barriers will NOT adhere to rubberized undercoating.

For further information please contact sales@flatlinebarriers.com