## Installation Instructions for 11005, 11006, 11007 & 11008 Ignition Panel, 2-1/2" x 6-1/4"

## **Installation Instructions:**


- 1. Using the panel as a template, mark the location of the four mounting holes.
- 2. Carefully drill four holes in the locations you marked using a 13/64" drill bit.
- 3. Install four(4) supplied flat head screws, washers & lock nuts.
- 4. Tighten and secure the panel in place.

## If you have purchased part #555-11006 (standard toggle kit) or #555-11007 (lighted toggle kit), please continue the following steps:

- 5. Slide the toggle switches through the 1/2" holes from behind. Be sure the keyway in the switch is facing down.
- 6. Tighten down using the toggle switch nut or bezel.

## Ignition panel components cans be purchased separately from JEG'S:

#555-11020
#555-11022
#555-11024
#555-11025

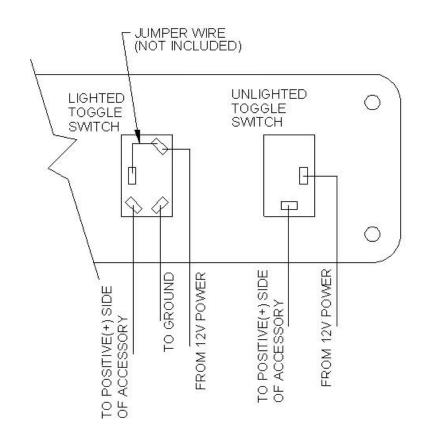



1-800-345-4545 jegs.com