




**Oil Separator / Breather
P/N 68785**

Refer to the assembly drawing for installation procedure:

1. Install the Mounting Stud through the inside of the Valve Cover. The recommended sized hole for the Mounting Stud is 1-1/8" to 1-1/4".
2. On the outside, install the Gasket, Washer and one of the Locknuts. Tighten the Locknut to compress the Gasket so that it conforms to the Valve Cover. (Do not over-tighten)
3. WE RECOMMEND USING A THREAD LOCKING FLUID SUCH AS BLUE LOCTITE.
4. Install the second Locknut and then the Breather. Thread each piece down until they contact the first Locknut. Point the breather tube in the desired direction and tighten the second Locknut against the bottom of the breather.

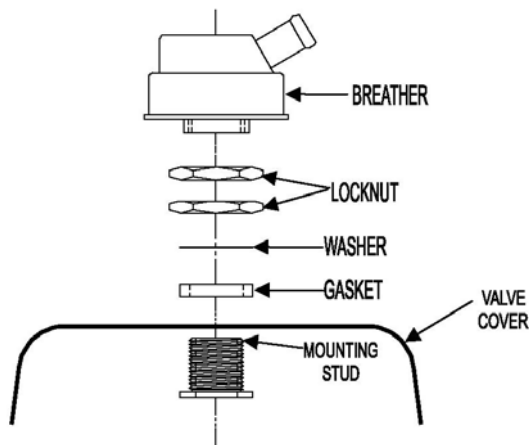

For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906


VisitUsAtwww.moroso.com



**Oil Separator / Breather
P/N 68785**

Refer to the assembly drawing for installation procedure:

1. Install the Mounting Stud through the inside of the Valve Cover. The recommended sized hole for the Mounting Stud is 1-1/8" to 1-1/4".
2. On the outside, install the Gasket, Washer and one of the Locknuts. Tighten the Locknut to compress the Gasket so that it conforms to the Valve Cover. (Do not over-tighten)
3. WE RECOMMEND USING A THREAD LOCKING FLUID SUCH AS BLUE LOCTITE.
4. Install the second Locknut and then the Breather. Thread each piece down until they contact the first Locknut. Point the breather tube in the desired direction and tighten the second Locknut against the bottom of the breather.

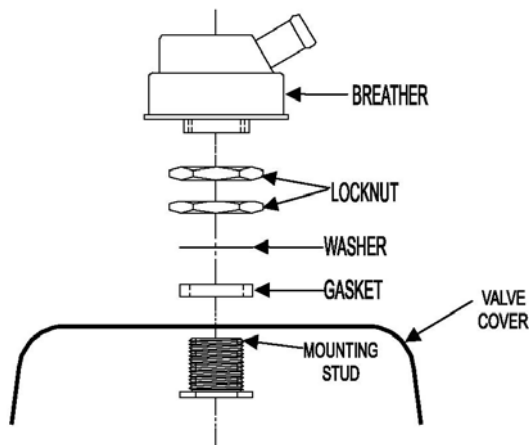

For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906


VisitUsAtwww.moroso.com



**Oil Separator / Breather
P/N 68785**

Refer to the assembly drawing for installation procedure:

1. Install the Mounting Stud through the inside of the Valve Cover. The recommended sized hole for the Mounting Stud is 1-1/8" to 1-1/4".
2. On the outside, install the Gasket, Washer and one of the Locknuts. Tighten the Locknut to compress the Gasket so that it conforms to the Valve Cover. (Do not over-tighten)
3. WE RECOMMEND USING A THREAD LOCKING FLUID SUCH AS BLUE LOCTITE.
4. Install the second Locknut and then the Breather. Thread each piece down until they contact the first Locknut. Point the breather tube in the desired direction and tighten the second Locknut against the bottom of the breather.

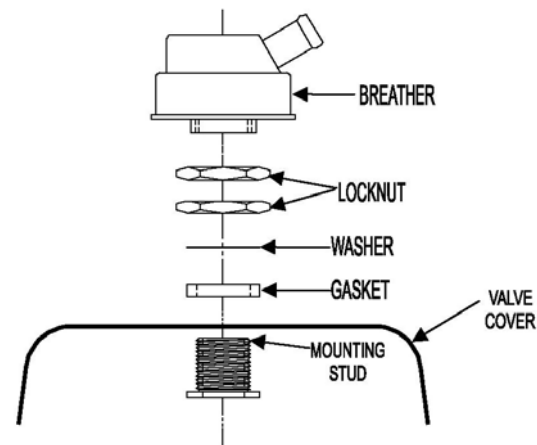

For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

VisitUsAtwww.moroso.com