

886 Bracket Instructions



Tech Dept.
(630) 957-4019

Tech@powermasterperformance.com


886 Bracket

Fits: SBC with long water pump

- Passenger side mount only
- 6.61" Mounting Bolt Spacing

<u>Includes:</u>	<u>QTY.</u>
A) Bracket	(1)
B) 3-3/16" Spacer	(1)
C) 3/8-16 x 6" Bolt	(1)
D) 3/8-16 x 1" Bolt	(2)
E) 3/8" Washer	(3)
F) 5/16" Washer	(1)
G) 5/16-18 x 1" Bolt	(1)

**Note: Typically Uses Gates Belt
7425(43")-7435(44")**

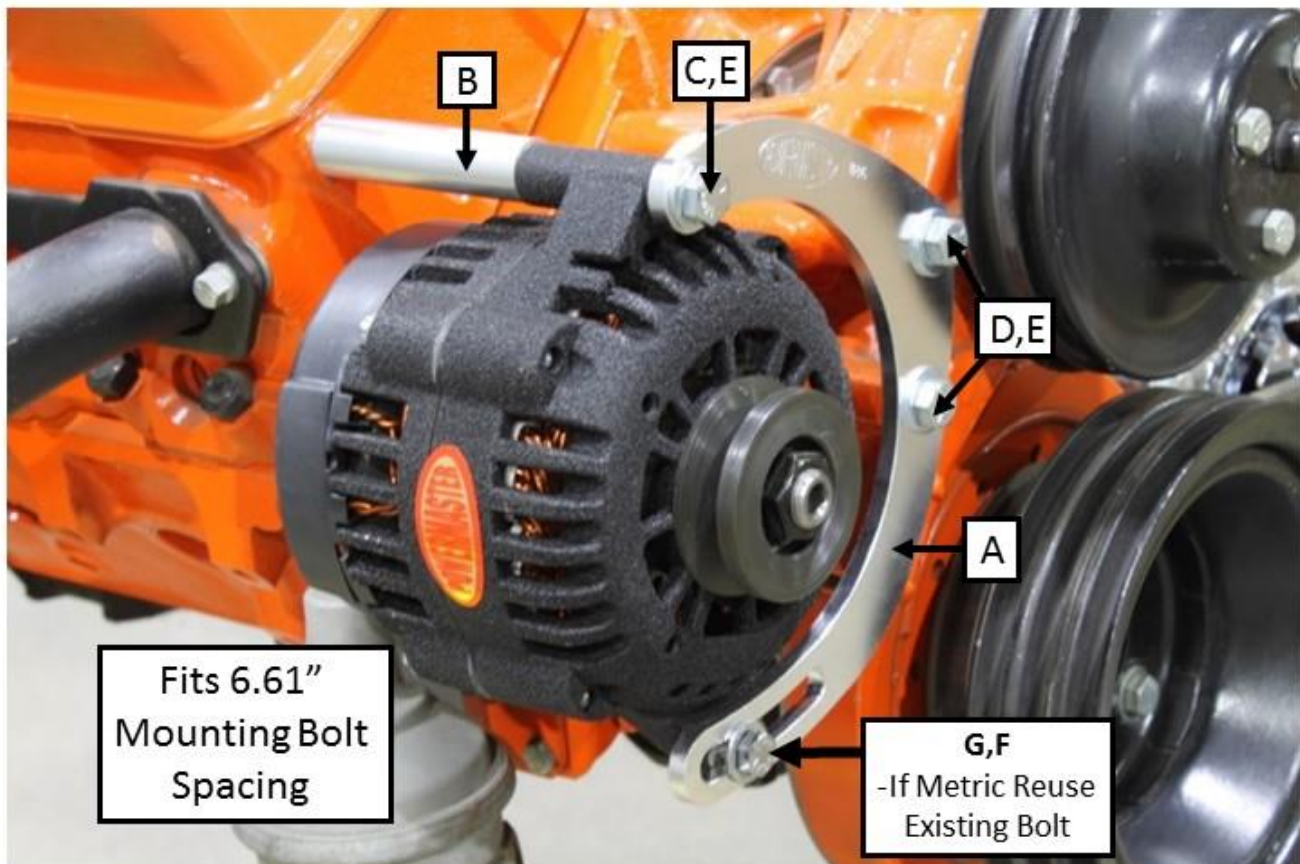

- Clean all paint and debris from mounting surfaces before installation
- Always ensure Alternator has a clean and direct ground to the battery
- Check belt tension before startup