


INSTALL GUIDE FOR FORD MUSTANG LED PROJECTOR HEADLIGHTS '10-'12(HID MODEL)/'10-'14(HALOGEN MODEL)



STEP 1

LOCATE DRL HARNESS SHOWN
AS ITEM A.
NOTE: SHORT SIDE GOES TO
PASSENGER SIDE AND LONG
SIDE GOES TO DRIVER SIDE
HEADLIGHT.

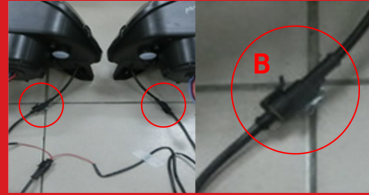

STEP 2

CONNECT DRL HARNESS TO
EACH SIDE HEADLIGHT AS
SHOWN ITEM B.




STEP 3

CONNECT SPADE CONNECTOR
TO BATTERY. RED WIRE TO
POSITIVE(+) AND BLACK WIRE
TO NEGATIVE(-). SHOWN AS
ITEM C.



STEP 4

OPEN HOOD AND DISCONNECT
NEGATIVE LEAD CABLE FROM
BATTERY

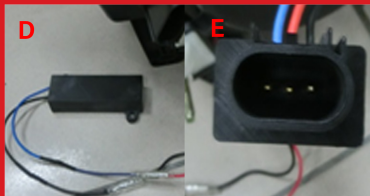

STEP 5

ITEM D: RESISTOR FOR TURN
SIGNAL

ITEM E: MAIN HALOGEN BULB
CONNECTOR FOR
10-14 MUSTANG


HARNESS INSTALLATION FOR HID MODEL:

THE HEADLIGHTS ARE PRE-INSTALLED
WITH HARNESSES FOR THE MUSTANG
MODELS WITH HALOGEN BULB.
STEPS 1-2 SHOW HOW TO SWAP THE
HARNESS FOR MUSTANG MODELS
WITH HID BULBS.



PARTS PROVIDED IN WITH
HEADLIGHTS:


1. SET OF BULB/DUST COVERS FOR
'10-'12 MUSTANG HID MODELS
2. DRL HARNESS FOR HALOGEN AND
HID TRIM.
3. ZIP TIES TO ROUTE AND SECURE
DRL HARNESS.

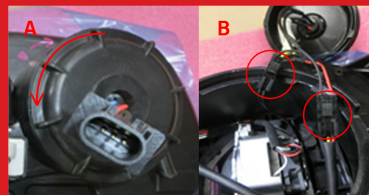

STEP 1

TO SWAP THE HARNESS FOR
HALOGEN MODEL, YOU WILL NEED TO
CHANGE THE BULB/DUST COVER ON
THE BACK

- A. TWIST THE BULB/DUST COVER
COUNTER-CLOCKWISE TO REMOVE.
- B. TO FULLY REMOVE THE BULB/DUST
COVER FROM THE HEADLIGHT
DISCONNECT THE CIRCLED 2-PIN
AND 3-PIN CONNECTORS.

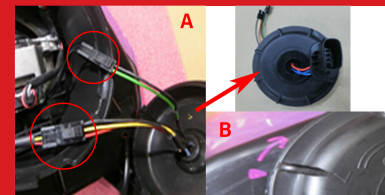

STEP 2

REPLACE THE BULB/DUST COVER
HARNESS REMOVED IN STEP 1 WITH
PROVIDED NEW HID BULB/DUST
COVER

- A. CONNECT THE 2-PIN AND 3-PIN
CONNECTORS OF NEW HID BULB/DUST
COVER HARNESS AS SHOWN.
- B. TWIST THE NEW HID BULB/DUST
COVER CLOCKWISE ONTO HEADLIGHT.
- C. TEST EVERY FUNCTION BEFORE
DRIVING ON THE ROAD.