

PLEASE NOTE: IF YOUR LIGHTS ARE NOT SYNCING WITH THE SAME COLOR ON BOTH SIDES, IT DOES NOT MEAN THE LIGHTS ARE DEFECTIVE. PLEASE PRESS THE BLUE SWITCH TO SELECT THE COLOR OF YOUR CHOICE AND THEN DISCONNECT NEGATIVE BATTERY TERMINAL FOR 20 MINUTES. THIS WILL ALLOW THE CAN BUS SYSTEM TO RESET. THE LIGHTS SHOULD BE SYNCHRONIZED AFTER YOU RECONNECT THE NEGATIVE BATTERY TERMINAL.

PLEASE CONTACT TECH SUPPORT SHOULD YOU NEED FURTHER ASSISTANCE:
EMAIL: TECHSUPPORT@ANZOUSA.COM CALL (909) 590-8618


STEP 1

AFTER REMOVING BUMPER,
REMOVE THE OE/FACTORY AIR DUCT COVER TO
BEGIN INSTALLATION OF YOUR NEW DRL AIR VENT LIGHTS.




STEP 2

ATTACH THE AIR VENT LIGHTS LED DRIVER USING
DOUBLE-SIDED TAPE AT THE LOCATION ON THE INNER SIDE
OF BUMPER (CIRCLED IN RED). USE RUBBING ALCOHOL TO
REMOVE ANY DIRT OR GRIME BEFORE ATTACHING. ROUTE
AND SECURE DRL AIR VENT LIGHT HARNESS WITH ZIP TIES
AT THE 4 LOCATIONS CIRCLED IN YELLOW.

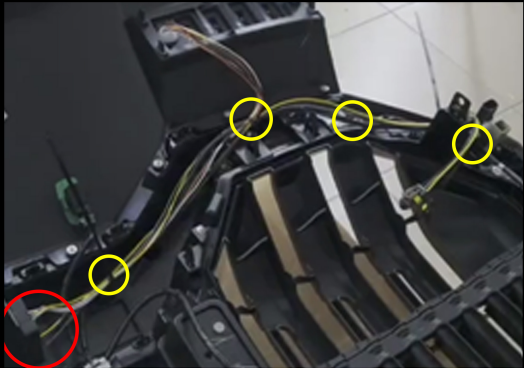


STEP 3

LOCATE PROVIDED 3-PIN DOUBLE-CONNECTOR HARNESS.
CONNECT A TO THE HEADLIGHT CONNECTOR
CONNECT VB TO OE VEHICLE SIDE CONNECTOR

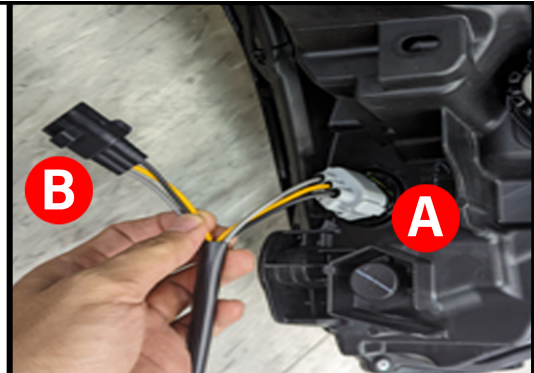

STEP 4


LOCATE PROVIDED
WHITE DOUBLE-CONNECTOR HARNESS AS SHOWN.
CONNECT C TO HEADLIGHTS CONNECTOR,
AND D TO OE VEHICLE SIDE CONNECTOR.
F WILL BE USED IN NEXT STEP.

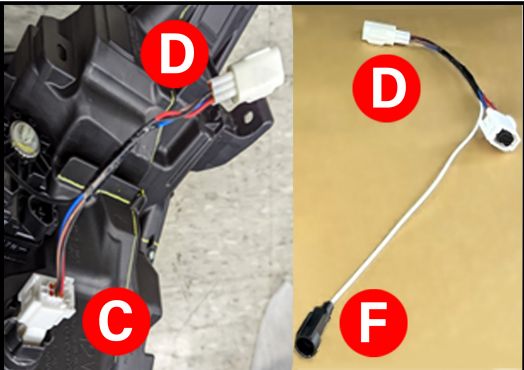

STEP 5

INSTALL AND FINISH BUMPER INSTALLATION.
CONNECT THE REST OF THE CONNECTORS FROM THE
HARNESSES IN STEP 3 AND 4 TO THE CONNECTORS
OF NEW DRL AIR VENT LIGHT HARNESS.


E1 DRL AIR VENT LIGHT TO **E2** TURN SIGNAL HARNESS,
F1 AIR VENT LIGHT FEMALE CONNECTOR TO **F2** HEADLIGHT
HARNESS MALE CONNECTOR.

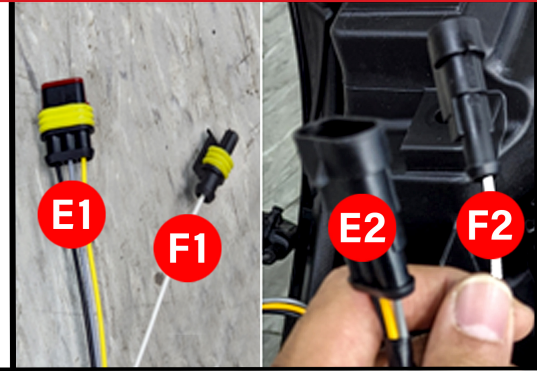

STEP 6

IF YOU HAVE OUR NEW TUNDRA HEADLIGHTS
IGNORE STEP 6 AND CONTINUE TO STEP 7.


LOCATE PROVIDED BATTERY FUSE HARNESS AND
CONNECT FEMALE CONNECTOR TO SINGLE-WIRE MALE
CONNECTOR OF NEW DRL AIR VENT LIGHT AS SHOWN.
CONNECT FORK SPADE CONNECTOR
TO POSITIVE(+) SIDE OF BATTERY.

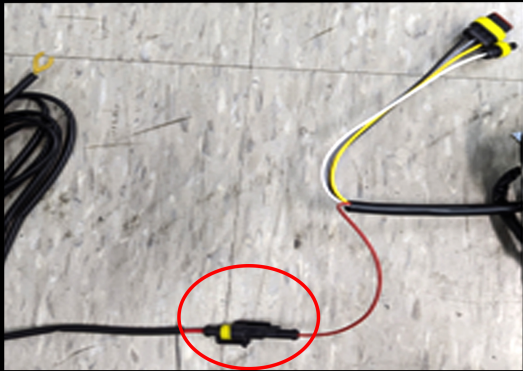

STEP 7


IF YOU HAVE 111593X (ANZO TUNDRA HEADLIGHTS)
LOCATE THE PROVIDED 5-CONNECTOR HARNESS IN THE PACKAGING FOR
THE HEADLIGHTS AND CONNECT ACCORDING TO BELOW INSTRUCTIONS:

- G1** DRIVER'S SIDE HEADLIGHT
- G2** DRIVER'S SIDE DRL AIR VENT LIGHT
- H1** PASSENGER'S SIDE HEADLIGHT
- H2** PASSENGER'S SIDE DRL AIR VENT LIGHT
- I** POSITIVE (+) SIDE OF BATTERY

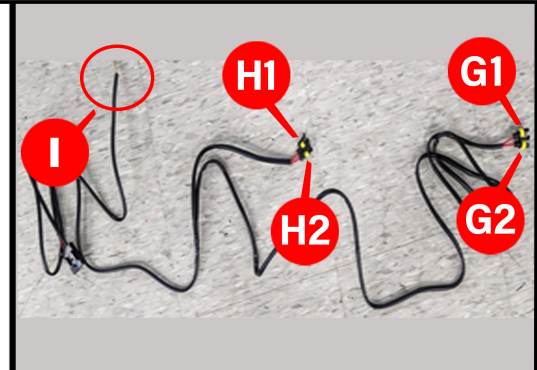

STEP 8

ROUTE AND SECURE DRL HARNESS
AT LOCATIONS CIRCLED IN RED
USING PROVIDED ZIP TIES.

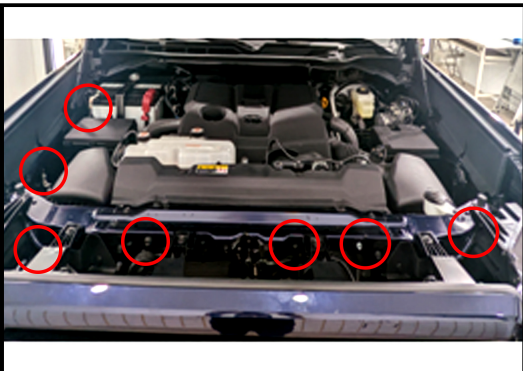

STEP 9

WIPE THE AREA CIRCLED IN RED OF BUMPER CLEAN USING
RUBBING ALCOHOL AND USE DOUBLE-SIDED TAPE TO ATTACH THE
WATER-RESISTANT AMBER/WHITE LIGHT SWITCH OF DRL/PARKING
LIGHT ONTO IT. REPEAT FOR OPPOSITE SIDES.

BLUE BUTTON POPPED UP: WHITE DRL/PARKING LIGHT MODE
BLUE BUTTON PRESSED DOWN: AMBER DRL/PARKING LIGHT MODE

