



advanced FLOW engineering™
P.O. Box 1719
Corona, CA 92878
Support: 951-493-7100
aFePower.com

Turbo Inlet Tube Upgrade Installation Instructions: 2006-2010 GM DURAMAX V8-6.6L (td)


Kit Part Number: 46-60039			Tools Required: 1/4" socket driver 5/16" socket driver T30 torq bit driver Flat tip screw driver Pliers 10mm socket driver		46-60039 Parts list 1 - Turbo Inlet Tube 1 - Inlet Adapter Tube 1 - Coupling, Reducer (4"x3.65")ID x 2.35"L 1 - Coupling, CCV 1 - Coupling, Copper 1 - Hose Clamp, 072 1 - Hose Clamp, 060 2 - Hose Clamp Mini, 016		Complete Kit P/N: 46-60039 
Make	Chevrolet						
Model:	Year:	Engine:					
Silverado HD	'06-'07	V8-6.6L (td) LLY/LBZ					
Silverado HD	'07.5-'10	V8-6.6L (td) LMM					
Make	GMC						
Model:	Year:	Engine:					
Sierra HD	'06-'07	V8-6.6L (td) LLY/LBZ					
Sierra HD	'07.5-'10	V8-6.6L (td) LMM					

Step 1




Stock turbo inlet tube.

Step 2

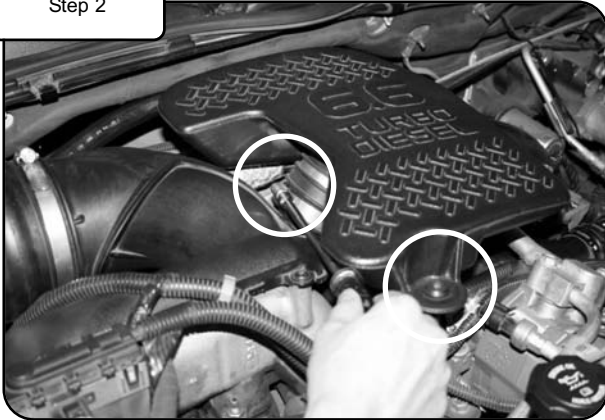


To remove resonator plenum: remove mounting screw with T30 Torx driver. Next, loosen clamp with flat tip screw driver or 1/4" socket driver.

Step 3

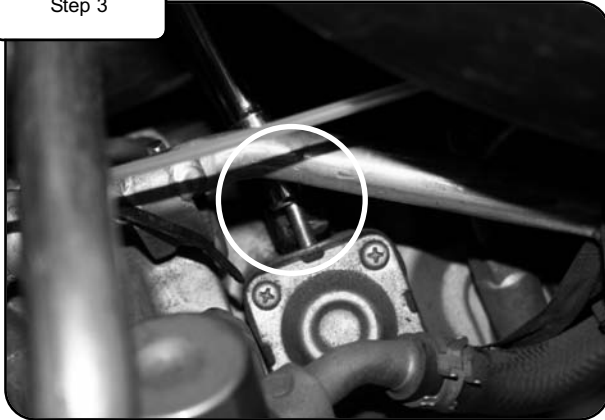


Use 10mm socket driver with long extension to remove CCV hose end on passenger side of truck.

Step 4

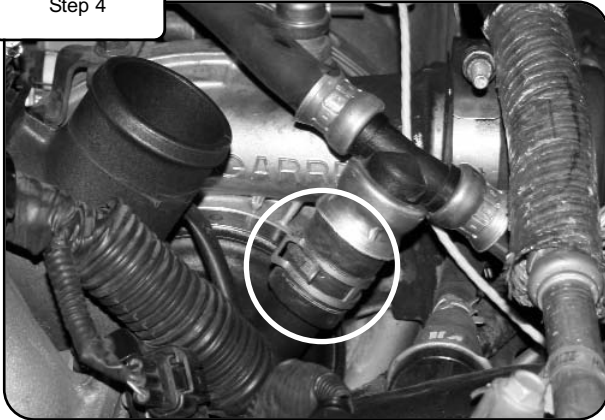

Open clamp on CCV hose coupling with pliers and remove hose coupling from the stock turbo inlet tube.

Step 5

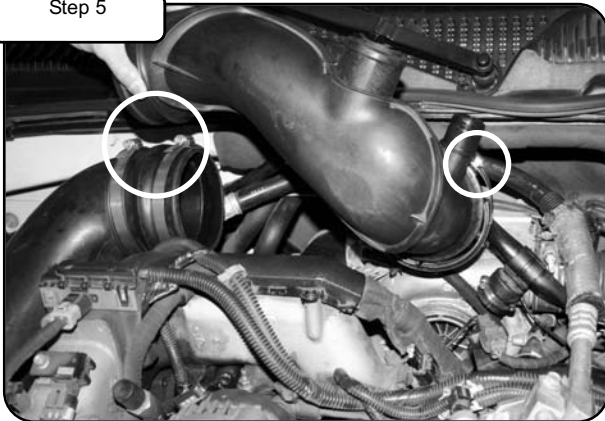


Loosen air intake coupling clamp at stock turbo inlet tube with flat tip screwdriver or 5/16" socket driver. Also loosen turbo inlet flange clamp with 5/16" socket driver. Remove stock turbo inlet tube from truck.

Step 6



Install supplied CCV coupling adapter and mini hose clamp on aFe turbo inlet tube. Tighten with flat tip screwdriver or 1/4" socket driver. Insert supplied copper coupling into CCV coupling adapter as shown.

Step 7

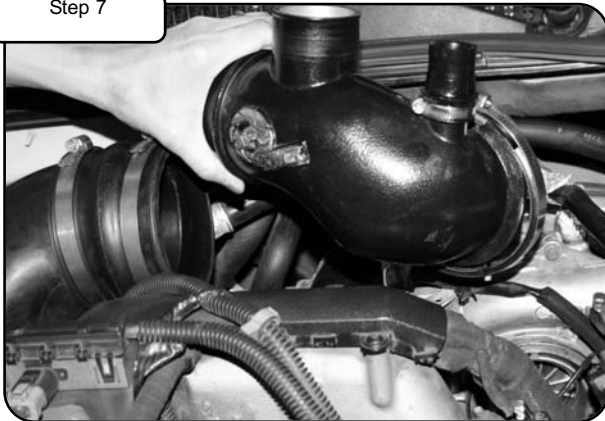


Install aFe turbo inlet tube. Ensure flange clamp fits correctly on aFe turbo inlet tube and turbo compressor housing. Do not tighten flange clamp.

Step 8




Re-attach CCV hose coupling on aFe turbo inlet tube using supplied mini hose clamp. Tighten with flat tip screwdriver or 1/4" socket driver. Re-attach CCV hose end on passenger side of truck.

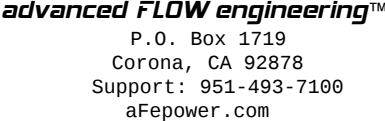

Kit Part Number: 46-60039			Tools Required: 1/4" socket driver 5/16" socket driver T30 torq bit driver Flat tip screw driver Pliers 10mm socket driver	46-60039 Parts list 1 - Turbo Inlet Tube 1 - Inlet Adapter Tube 1 - Coupling, Reducer (4"x3.65")ID x 2.35"L 1 - Coupling, CCV 1 - Coupling, Copper 1 - Hose Clamp, 072 1 - Hose Clamp, 060 2 - Hose Clamp Mini, 016	Complete Kit P/N: 46-60039
Make Chevrolet Model: Year: Engine: Silverado HD '06-'07 V8-6.6L (td) LLY/LBZ Silverado HD '07.5-'10 V8-6.6L (td) LMM					
Make GMC Model: Year: Engine: Sierra HD '06-'07 V8-6.6L (td) LLY/LBZ Sierra HD '07.5-'10 V8-6.6L (td) LMM					



Step 9

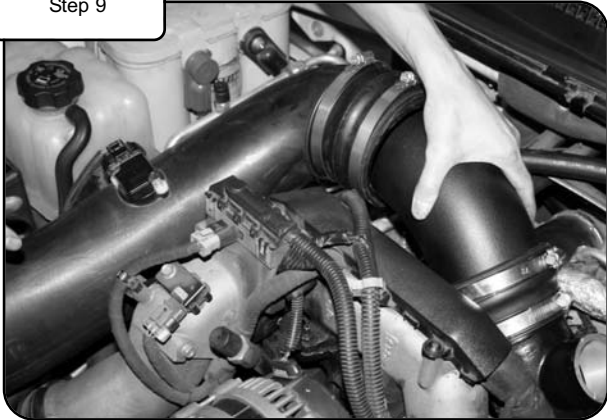

Install supplied reducer coupling and inlet adapter tube in-between aFe turbo inlet tube and air intake coupling. Use supplied hose clamps and tighten with flat tip screwdriver or 5/16" socket driver. Tighten flange clamp from Step 7.

Step 10



Re-attach resonator plenum on aFe inlet tube. Tighten clamp with flat tip screwdriver or 1/4" socket driver. Re-install mounting screw with T30 Torx driver.

Step 11



Your installation is now complete. Thank you for choosing aFe Power!