




INSTALLATION INSTRUCTIONS

MAKE: Nissan
MODEL: Patrol (Y61)
YEAR: 2002-2016
ENGINE: I6-4.8L
FITS: 4-Door Models

409 Stainless Steel
3" Cat-Back Exhaust (Hi-Tuck)
49-46119

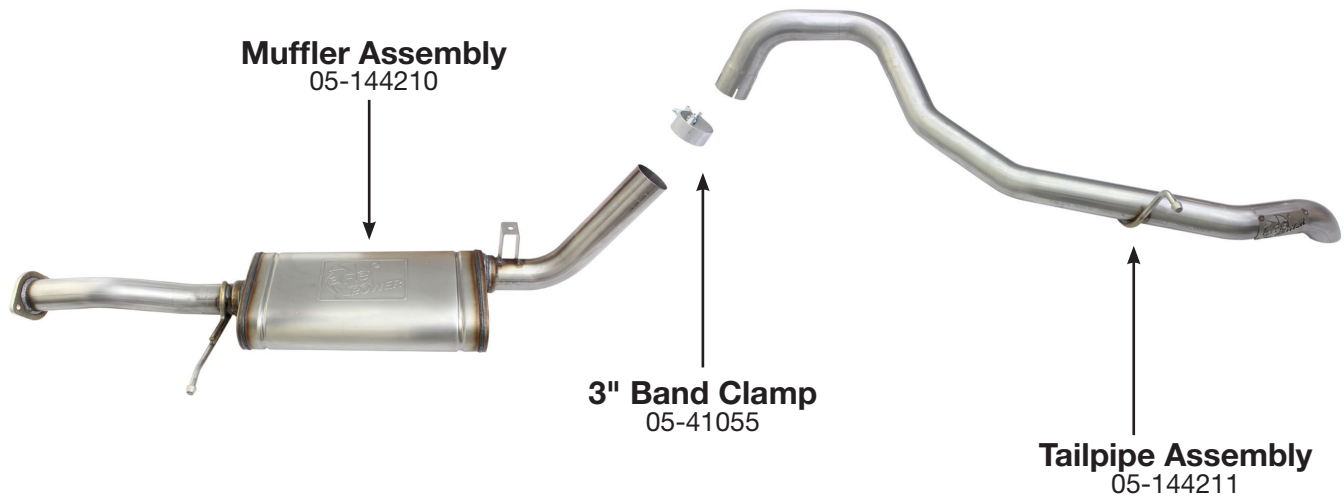

Caution: aFe recommends professional installation on our products. Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

Step 1: Read Instructions prior to installation. Professional Installation is highly recommended.

Step 2: Secure vehicle on jack stands (refer to your manual for specified jack stand positions.)

Step 3: First, remove tail-pipe section connected to the muffler assembly flange.

Step 4: Now remove the muffler assembly. Be sure to place jack/stand under muffler to support weight. Save stock hardware as it will be used when installing the aFe Power Exhaust.

Installing aFe Power Exhaust

Step 1: Install the muffler assembly using stock flange gasket and stock hardware. Place jack/stand under muffler assembly to support weight.

Step 2: Place the 3" band clamp over the expanded side of tail-pipe tube and slip over the muffler assembly tube. Slide hanger rod into stock hanger mount.

Step 3: Begin to tighten down front flange bolts, and then continue with muffler support bracket. Align tail-pipe tube finish by tightening down the 3" band clamp.

Step 4: Make sure everything is tight and clearance is good.

Step 5: Your installation is now complete. It is recommended to re-tighten all exhaust components after 50 - 100 miles.

Caution: aFe recommends that the tailpipe be at least 1/2"-1" away from any body panels to avoid heat related body damage. Tighten and secure.