

Intake Kit Installation Instructions: 07.5-10 GMC Sierra/Chevrolet Silverado 2500HD/3500HD V8-6.6L (td) LMM








P.O. Box 1719
Corona, CA 92878
Support: 951-493-7100
aFepower.com

Kit Part# Stage 2 51/54/75-11332 & 75-11332-0V			Tools Required:	
Make:	GMC GMT 900		5/16 Nut Driver	
Model:			Phillips Screwdriver	
	Year	Engine	10mm Wrench/Socket	
Sierra 2500HD	'07-'10	V8-6.6L (td) LMM	5/32 Allen Wrench	
Sierra 3500HD	'07.5-'10	V8-6.6L (td) LMM	7/16 Wrench/Socket	
Make:			Chevrolet GMT 900	
Model:	Year	Engine		
Silverado 2500HD	'07.5-'10	V8-6.6L (td) LMM		
Silverado 3500HD	'07.5-'10	V8-6.6L (td) LMM		
Part List: Stage 1 Components			Part List: Stage 2 Components	
			1 Air filter (Pro5R™ 24-91035 & Pro Dry S™ 21-90038)	
			1 Housing Cover	
			1 Gasket Sensor	
			2 Screw, Phillips 8-32x 5/8	
			2 Screw, hex flange, 1/4-20x1 Tube (05-00890)	
			2 Nut, Self Locking, 1/4-20	
			3 Screw, Button Head, 1/4-20	
			1 Intake Housing	
				1 Torx Bit, T-20
				2 Spacer Nylon 1/2 OD x 1/4 x 1/8
				2 Washer, Flat
Stage 2 Components				
			1 Air filter (Pro5R™ 24-91035 or Pro-GUARD 7™ 72-90038 or Pro Dry S™ 21-90038)	
			1 Tube (05-00749)	
			1 Coupling, hump, 4 1/4 x 4 1/4 x 3, Black	
			1 Coupling, hump, 4 3/4 x 4 3/4 x 3, Black	
			2 Clamp 072	
			2 Clamp 080	
			Included in P/N 75-11332-0V Value Pack Only:	
			1 Span Filter P/N 21-90038	
			1 Pre-filter P/N 28-10051	
			1 Cleaning Kit 90-50500	
				



Complete Stage 2 kit Shown. (Stage 1 kit, no torque booster tube, couplers and clamps!)

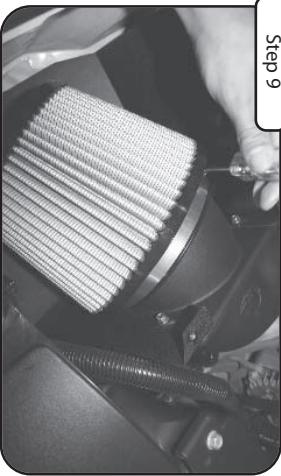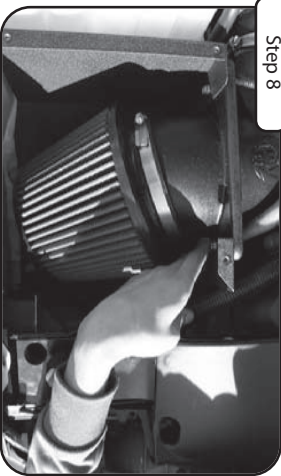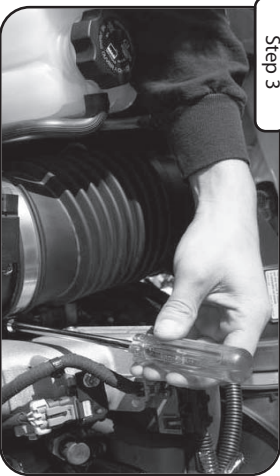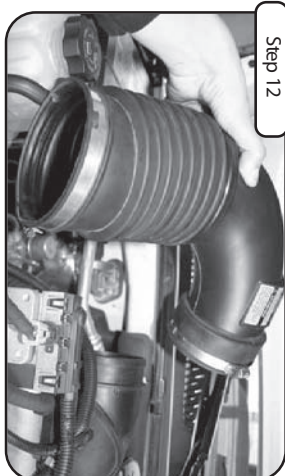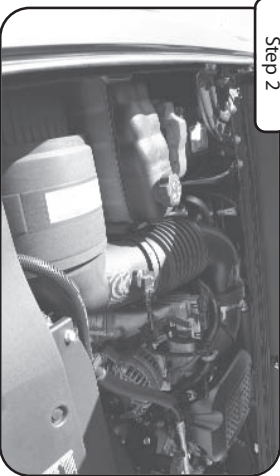

Note: Filter Cleaning and Re-oiling: When cleaning your afe filter, be sure to use only afe's "Restore Kit" (afe P/N: 90-50001) or ***Pro Dry S***™ cleaner only). Filter Replacement: ***Pro-SF***™ 24-91035 (black w/blue media) or 72-90038 F.

Pro Dug 5™ Cleaner only). Filter Replacement: **Pro-SM 24-91035** (black/white media), or **72-90038 Pro-SLAND 7™** (black w/gout media), **Pro Dug 5™ P/N 21-90038** (black w/ white media) **Pro Dug 5™** cleaning, see cleaning instruction sheet 06-00074.

Check clamps and tighten periodically.

Place the included CARB EO Sticker on or near the intake system on a smooth, clean surface. E.O. Identification label is required in passing the Smog Check Inspection. Stage 2 installation is now complete. Check clamps and tighten periodically.