



advanced FLOW engineering™
P.O. Box 1719
Corona, CA 92878
Support: 951-493-7100
aFepower.com

Intake Kit Installation Instructions: '07-'09 GM Silverado/Sierra 2500HD/3500HD Duramax GMT 900 LMM V8-6.6L (td)

Kit Part #: 51/54/75-81332 75-81332-0V			Tools Required: 5/16" nut driver 10mm socket or wrench 7/16" socket or wrench Flathead screwdriver Phillips screwdriver Ratchet and extension T-20 torx bit (included) 5/32" allen key		Part List: 1 Air filter P/N (Pro-GUARD 7 ™72-90038) 1 Housing, rotomold 1 Tube, rotomold 1 Cover, housing 1 Coupler, hump 4-1/4" x 3"L 2 Clamp, #072 4 Screws, button head M6 2 Spacer, nylon 1/2" 2 Screws, #8-32 x 5/8"L		1 Gasket, MAF sensor 2 Screws, Hex 1/4-20 2 Nut, self locking 1/4-20 4 Washers, flat 1/4-20 1 T-20 torx bit Value Pack Part List (75-81332-0V: 1 Air filter P/N (Pro Dry S ™ 21-90038) 1 Restore kit, gold squeeze 1 Pre-filter			
Make:	GMC									
Model	Year	Engine								
Sierra 2500HD	'07-'09	V8-6.6L LMM								
Sierra 3500HD	'07-'09	V8-6.6L LMM								
Make:	Chevrolet									
Model	Year	Engine								
Silverado 2500HD	'07-'09	V8-6.6L LMM								
Silverado 3500HD	'07-'09	V8-6.6L LMM								

Step 1



Complete kit components

Step 2




Complete stock Intake.

Step 3



With 5/16" nut driver, loosen the clamp @ turbo end.

Step 4

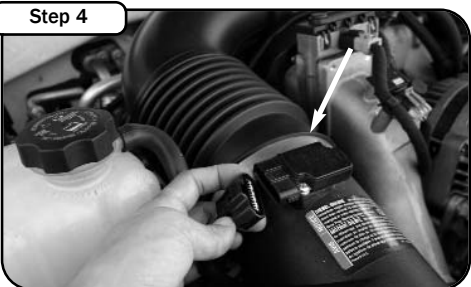


Disconnect MAF sensor harness .

Step 5



Carefully grab and pull out OE intake system from vehicle.

Step 6

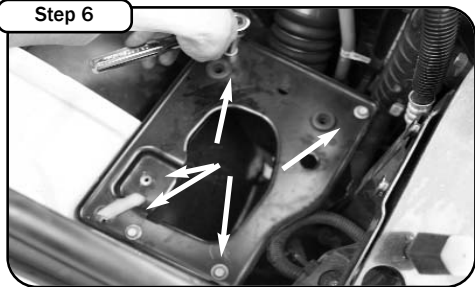


With 10mm socket, loosen the 5 screws holding the OE intake bracket and remove. Save 4 screws for later install.

Step 7



Remove plastic cover behind passenger head light.

Step 8

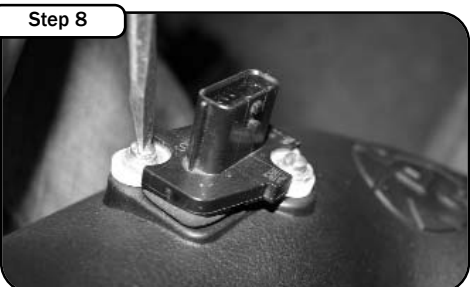

Remove MAF sensor from OE intake with T-20 torx bit. Insert MAF sensor into new tube with gasket, nylon spacer and #8-32 screws provided, spacers and gasket should be between tube and sensor.

Step 9



Install tube to outside of housing. Tighten using screws, washers and nuts provided with 7/16" socket or wrench.

Step 10



Place hump coupler at end of tube with clamps provided. Install into vehicle. Position tube and housing to factory position. *Do not tighten clamps!*

Step 11



With 10mm socket or wrench, tighten down housing using 4 screws from step 6.

Step 12



Tighten clamps @ turbo end with 5/16" nut driver. Re-connect MAF sensor harness.

Step 13



Install air filter and tighten using 5/16" nut driver.

Step 14



With button head screws provided, install housing cover and tighten using 5/32" allen key.

Step 15



Place the included CARB EO Sticker on or near the intake system on a smooth, clean surface. E.O. identification label is required in passing the Smog Check Inspection. Your installation is now complete. Check all clamps and connections. Periodically check all clamps and hoses.