
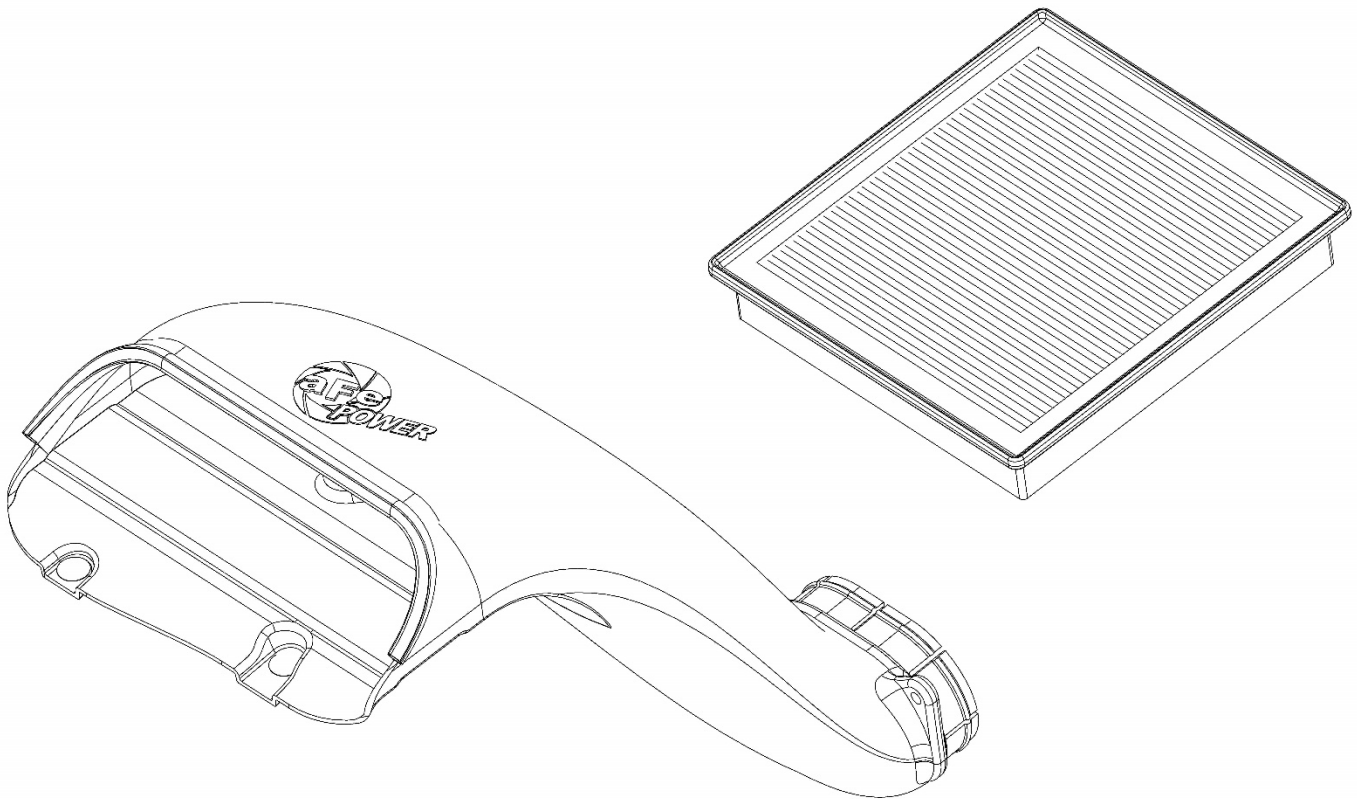


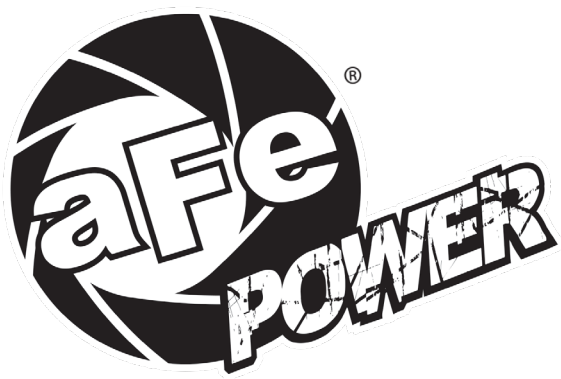

advanced FLOW engineering

Super Stock Induction System®

Instruction Manual P/N: 55-10003R / 55-10003D

Make: Ford	Model: F-150 EcoBoost	Year: 2015-2020	Engine: V6-2.7L(tt)/3.5L(tt)
Make: Ford	Model: F-150	Year: 2018-2020	Engine: V6-3.3L
Make: Ford	Model: F-150 Raptor	Year: 2017-2020	Engine: V6-3.5L(tt)
Make: Ford	Model: F-150	Year: 2015-2020	Engine: V8-5.0L
Make: Ford	Model: F-150	Year: 2015-2017	Engine: V6-3.5L
Make: Ford	Model: F-150	Year: 2018-2020	Engine: V6-3.0L(td)



- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7185.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.
- Retain factory parts for future use.

Label	Qty.	Description	Part Number
A1	1	Air Filter (Pro 5R)	30-10162
A2	1	Air Filter (Pro DRY S)	31-10162
B	1	Scoop, Black	05-53112B3
C	2	Retainer Clip	03-50616
D	1	Seal, Trim: 7/16" bulb (15.5" Length)	05-00072

Installation will require the following tools:

8mm, 13mm nut driver or socket and extension, Flat screwdriver

Emissions Disclaimer: This product does not require a CARB EO#.

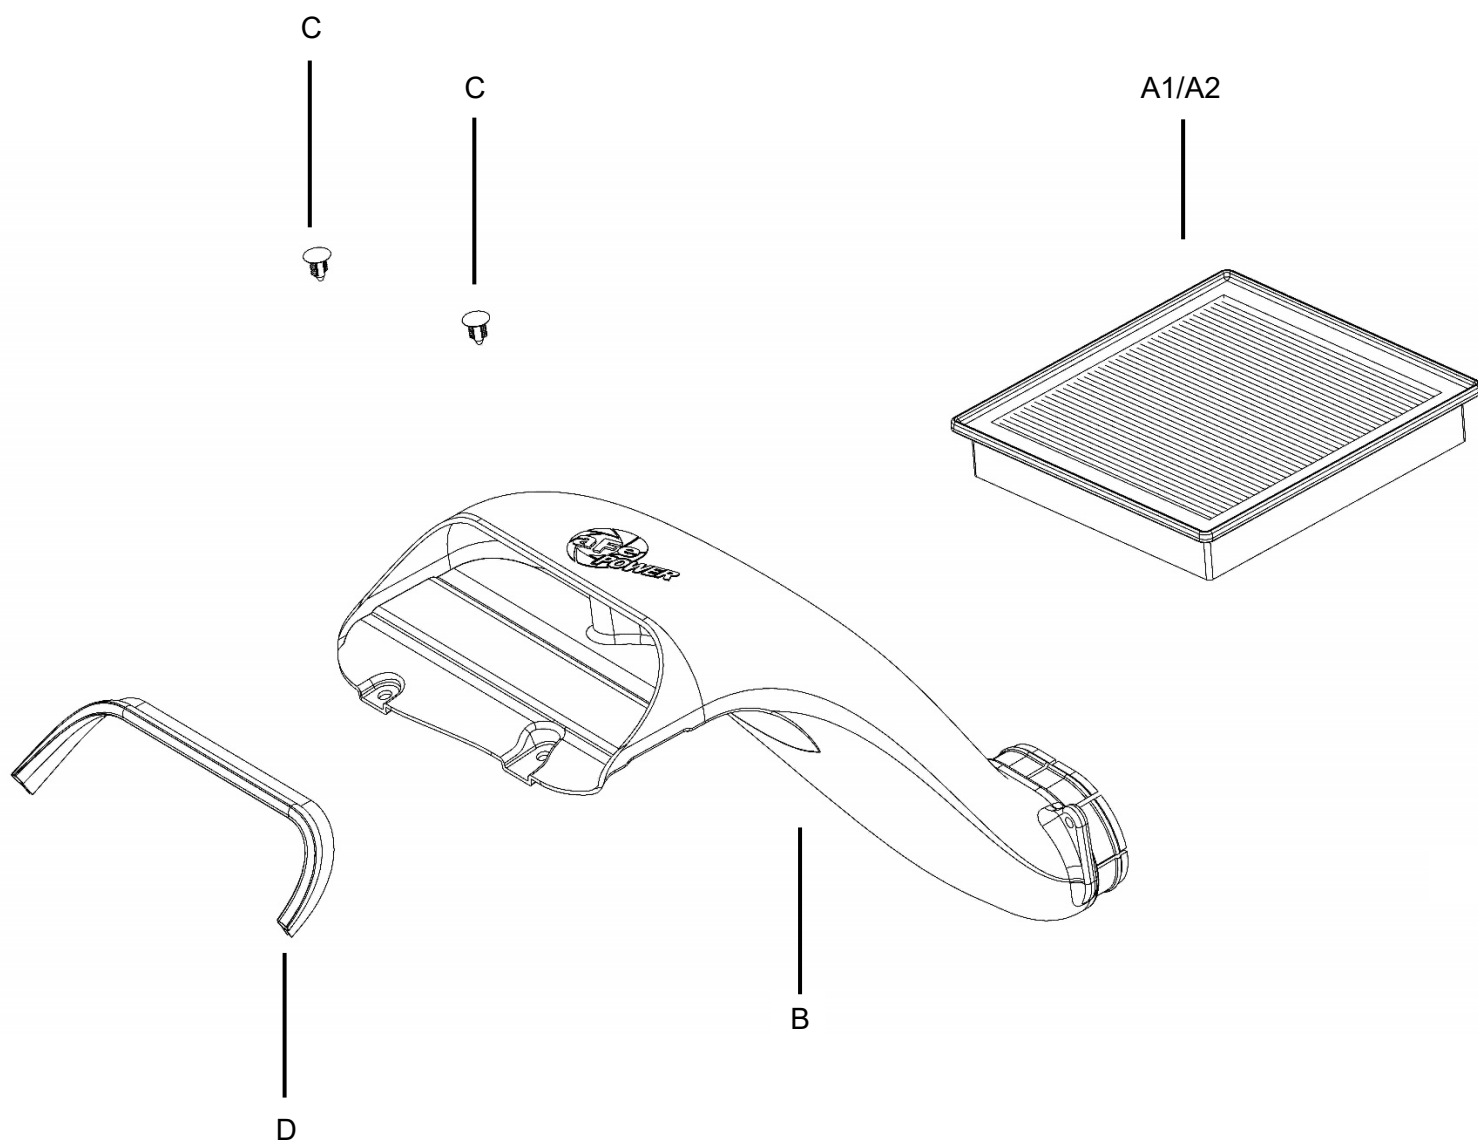




Figure A

Refer to Figure A for Steps 1-3

Step 1: Loosen the clamp between the intake tube and the factory housing.

Step 2: Unclip the top of the air box and remove it from the vehicle. Remove the air filter.

Step 3: Remove the two plastic rivets securing the scoop.



Figure B

Refer to Figure B for Step 4

Step 4: Remove the screw securing the housing, then pull the factory air box and scoop out of the vehicle.

REMOVAL



Refer to Figure C for Step 5

Step 5: Remove the screw securing the scoop to the factory housing, then pull the scoop out of the factory housing.

**Figure D****Refer to Figure D for Step 6**

Step 6: For installation on the factory housing, press the aFe POWER scoop into the factory housing and secure it using the factory screw removed in step 5.



Figure E

Refer to Figure E for Steps 7-10

Step 7: Reinstall the housing and scoop assembly into the vehicle. Secure the housing with the Screw removed at step 4.

Step 8: Secure the scoop using the two provided plastic rivets.

Step 9: Install the seal trim on the top edge of the aFe POWER scoop.

Step 10: Install the aFe POWER air filter into the housing.



Refer to Figure F for Step 11-14

Step 11: Reinstall the top of the factory air box. Secure it with the factory housing clips.


Step 12: Connect the housing to the intake tube and tighten the clamp.

Step 13: Place the supplied aFe POWER decal on the top of the housing.

Step 14: Make sure all clamps and connections are secured. Your installation is now complete. Thank you for choosing aFe POWER!

NOTE: Check all screws, clamps, and connectors are secure after 100-200 miles.

Pro DRY S Air Filter

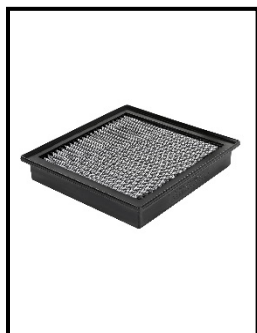

P/N: 31-10162

Pro 5R Air Filter



P/N: 30-10162

Restore Kit: 6.5oz Blue oil



P/N: 90-50001

Restore Kit: 12oz PDS



P/N: 90-59999

Throttle Body Spacer



P/N: 46-33010

Throttle Body Spacer



P/N: 46-33017

Scoop (Red)



P/N: 53-10008SR

Scoop (Blue)



P/N: 53-10008SL

Sprint Booster Power Converter



P/N: 77-13001



Warranty


General Terms:

- aFe warrants their products to be free from manufacturer's defects due to workmanship and material.
- This warranty applies only to the original purchaser of the product and is non-transferrable.
- Proof of purchase of the aFe product is required for all warranty claims.
- Warranty is valid provided aFe instructions for installation and/or cleaning were properly followed.
- Proper maintenance with regular inspections of product is required to insure warranty coverage.
- Damage due to improper installation, abuse, unauthorized repair or alteration is not warranted.
- Incidental or consequential damages or cost, including installation and removal of part, incurred due to failure of aFe product is not covered under this warranty.
- All warranty is limited to the repair and/or replacement of the aFe part. To request Return Goods Authorization ("RGA"), email RGA@afepower.com or call (951)493-7100. Upon receipt of the RGA, you must return the product to the address provided in the RGA, freight prepaid and accompanied with a dated proof of purchase and the RGA. Upon receipt of the defective product and upon verification of proof of purchase, aFe will either repair or replace the defective product within a reasonable time, not to exceed thirty days.

Product Category	P/N Prefix	Warranty duration
Direct OE Replacement Filters	10, 11, 30, 31, 71, 73	Life of the vehicle
Racing Filters	18	1 year
Universal	20, 21, 23, 24, 72, TF	2 years
Air Intake Systems	50, 51, 53, 54, 55, 56, 57, 58, 75, TR, TA, TL, TM	2 years
Exhaust Systems	49	2 years
Intercoolers & Intercooler Tubes	46-2	2 years
Intake Manifolds	46-1	2 years
Differential Cover	46-7	Life of the vehicle
Exhaust Manifolds	46	2 years
Throttle Body Spacers	46-3	2 years
Turbochargers	46-6	2 years*
Fluid Filters	44	90 days
Pre-Filters	28	2 years
Heavy Duty OE Replacement	70	2 years
PowerSports OE Replacement	81, 87	2 years
PowerSports Intake Systems	85	2 years

No other warranty expressed or implied applies nor is any person or advanced FLOW engineering authorized to assume any other warranty. Some States do not allow the exclusion or limitation of incidental or consequential damages or do not allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

*See turbocharger warranty for more info

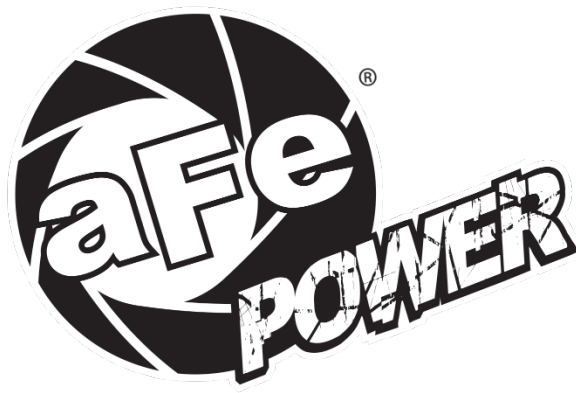

advanced FLOW engineering, inc.

252 Granite Street Corona, CA 92879
TEL: 951.493.7100 • TECH: 951.493.7185
E-Mail: Tech@aFepower.com

P/N: 06-81355