




Part # TABLF9204

1966-67 Ford Fairlane, Mercury Comet/Cyclone
Full Insulation and Sound Dampening Kit

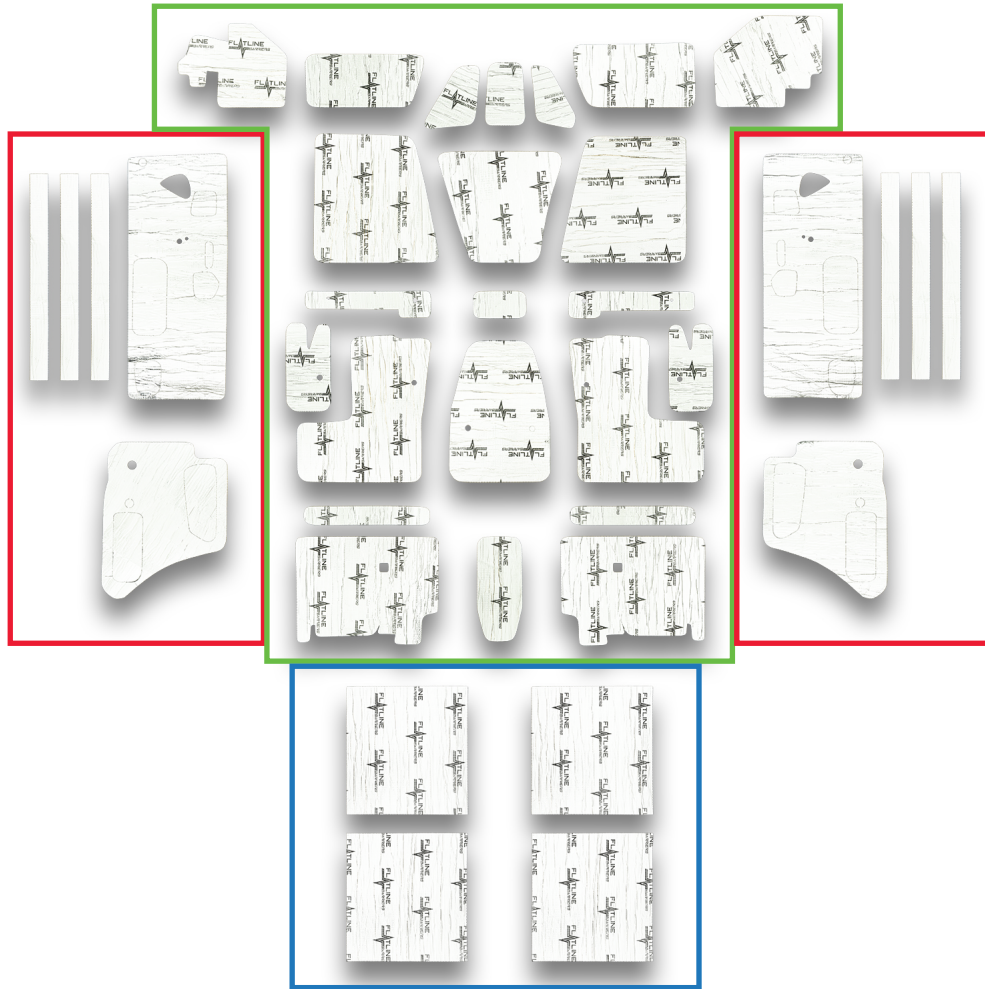

TABLF9200 - 1966-69 Ford Fairlane, Mercury Comet/Cyclone Floor Insulation and Sound Dampening Kit

TABLF9201 - 1966-69 Ford Fairlane, Mercury Comet/Cyclone Door Insulation and Sound Dampening Kit

TABLF9202 - 1966-69 Ford Fairlane, Mercury Comet/Cyclone Roof Insulation and Sound Dampening Kit

Installation Directions:

1. Clean any dirt, debris, or grime from the intended installation area using a degreasing agent.
2. Allow intended installation area adequate time to dry.
3. Remove the kit from its packaging, and dry fit the components allowing you to see exactly how the product will be placed for final installation.
4. Now you are ready to install. Remove the protective layer exposing the adhesive on your first piece applying it to its final position, using light pressure.
5. Repeat step 4 for each individual component until the full kit is installed.

***Note:** Flatline Barriers will NOT adhere to rubberized undercoating.

For further information please contact sales@flatlinebarriers.com