

# Cold Air Induction System

Part #1735



### Special Tools

#### Required:

- No special tools required

### Install Time:

Approximately  
1 Hour

### Difficulty:


2 out of 5

Follow these instructions carefully to ensure correct fitment and operation.

#### STEP 1

- Loosen the hose clamp that attaches the stock air box to the mass air meter.

#### STEP 2

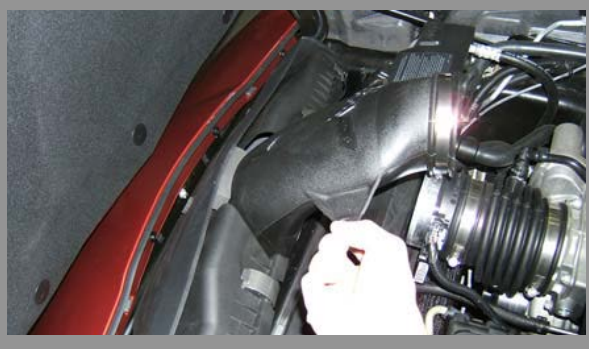

- Remove the stock air box assembly from the vehicle by lifting the air box straight up and pulling the inlet hose away from the mass air meter.

#### STEP 3



- Remove the rubber grommets that locate the stock air box on the radiator cover and swap them over to the BBK cold air casting.

#### STEP 4

- Place the supplied blue coupler hose over the outlet opening of the BBK cold air casting and securing it with one of the supplied hose clamps. Place another hose clamp over the open end of the coupler hose.



Join our Facebook page  
[www.facebook.com/bbkperformance](http://www.facebook.com/bbkperformance)



Follow us on Twitter  
[@bbkperformance](https://twitter.com/bbkperformance)



Check us out on Youtube  
[www.youtube.com/bbkperformance](http://www.youtube.com/bbkperformance)

GO TO NEXT PAGE

[WWW.BBKPERFORMANCE.COM](http://WWW.BBKPERFORMANCE.COM)

For any questions, email us:

[tech@bbkperformance.com](mailto:tech@bbkperformance.com)

installation instructions

1

**IMPORTANT:** All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance Inc. accepts no responsibility for injuries or damage caused by or during the installation of this product.

INS-104

# Cold Air Induction System

## Part #1735



### STEP 5

- Place one of the supplied hose clamps over the end of the BBK Air Filter and secure the filters to the inlets of the cold air casting.

### STEP 6

- Guide the assembled BBK Cold Air Induction System into position by placing the outlet hose coupler over the mass air meter, then pushing the rubber grommets down onto the locating pins on the radiator and tightening the remaining hose clamps.



Join our Facebook page  
[www.facebook.com/bbkperformance](http://www.facebook.com/bbkperformance)



Follow us on Twitter  
[@bbkperformance](https://twitter.com/bbkperformance)



Check us out on Youtube  
[www.youtube.com/bbkperformance](http://www.youtube.com/bbkperformance)

[WWW.BBKPERFORMANCE.COM](http://WWW.BBKPERFORMANCE.COM)

For any questions, email us:  
[tech@bbkperformance.com](mailto:tech@bbkperformance.com)

installation instructions

2

**IMPORTANT:** All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance Inc. accepts no responsibility for injuries or damage caused by or during the installation of this product.

INS-104