Universal Vari-Tune Muffler

Part # 3101, 31015, 3102, 31025, 3103, 31035

Tools Required:

- Basic Tools

Install Time:

Approximately
30 mins-1 Hour

Difficulty:

1 out of 5

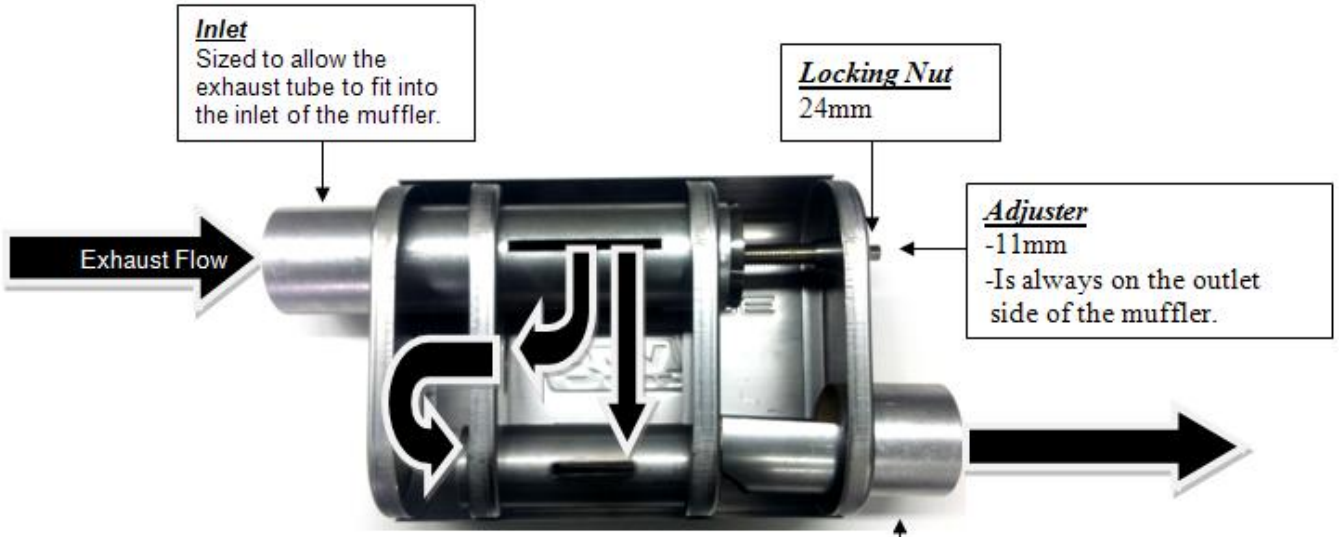

Description:
Having the muffler adjusted all the way in "closed" will make the sound of the exhaust the quietest and depending on the vehicle can also change the performance characteristics.

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance Inc. accepts no responsibility for injuries or damage caused by or during the installation of this product.

Universal Vari-Tune Muffler

Part # 3101, 31015, 3102, 31025, 3103, 31035

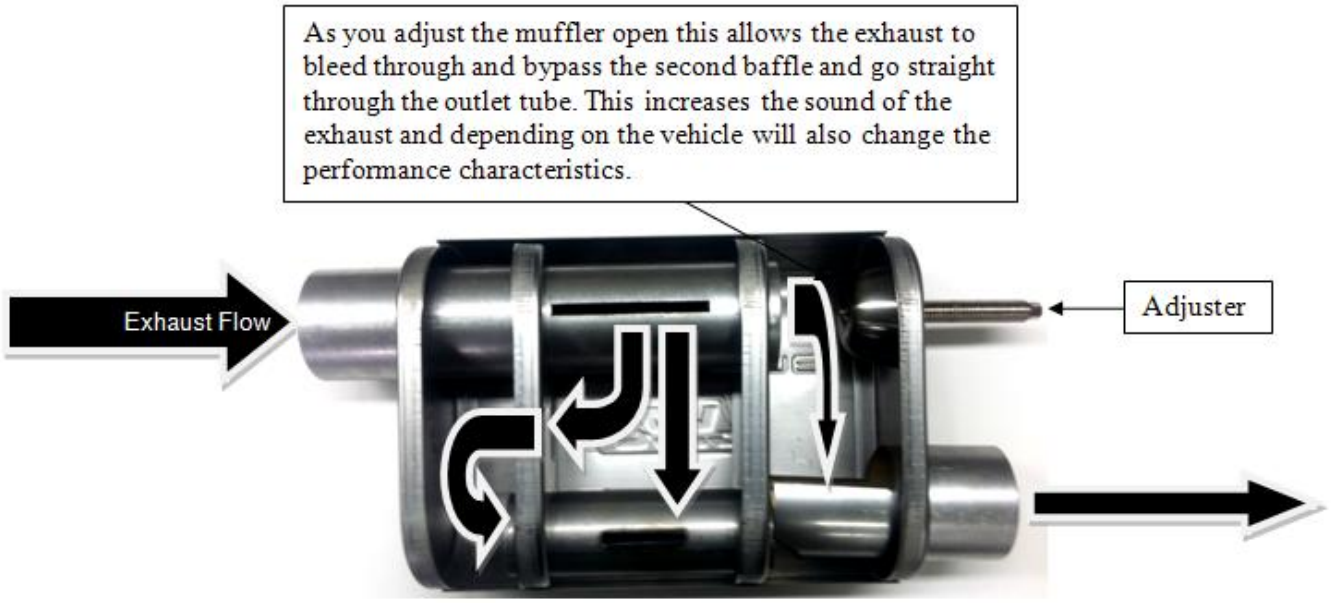

Adjusting the Vari-Tune Muffler

Step 1: Loosen the locking nut and turn the adjuster counter-clockwise to open up the adjustable bypass cone.

Step 2: Once you have reached the desired setting tighten the locking nut by holding the adjuster in place with a 11mm wrench and tighten the locking nut with a 24mm wrench.

IMPORTANT!!! **Do not adjust the Vari-Tune Muffler while the muffler is hot. Allow the muffler to cool down to prevent the adjuster from seizing.**

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance Inc. accepts no responsibility for injuries or damage caused by or during the installation of this product.