




Printing Instructions

When printing instructions from a PDF make sure to change the Page Scaling option in the Print dialouge box to None.

See example below.

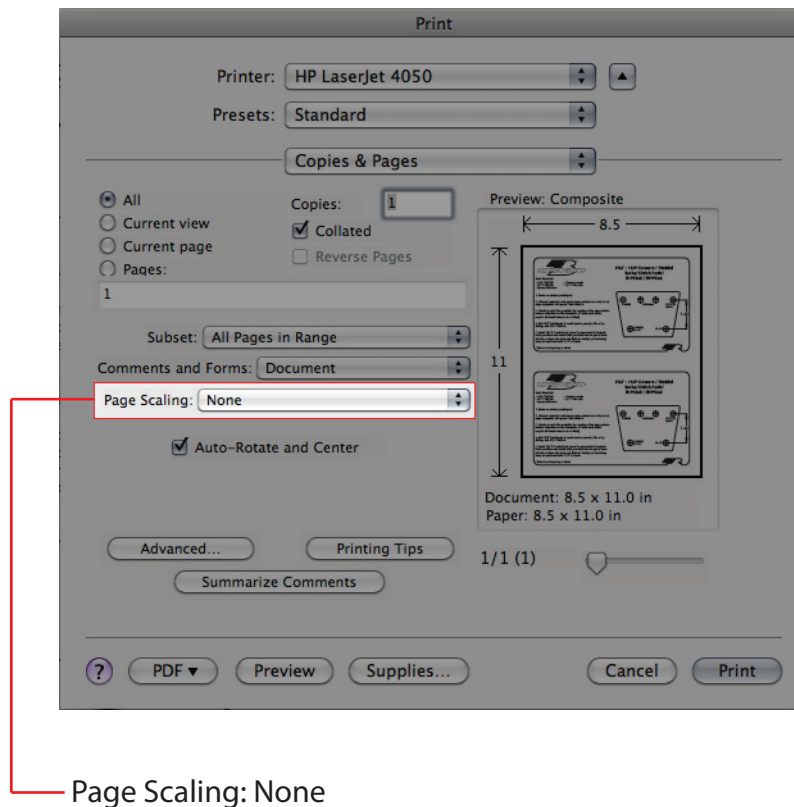


If you do not change the Print Scaling to None, the templates provided will not match the correct dimensions.



1967 - 1969 Camaro Brake Pedal Pad - Automatic #199460 / #199465

Due to multiple sources used by the auto manufacturer, some pedals may have to be trimmed for the pedal cover to fit properly.

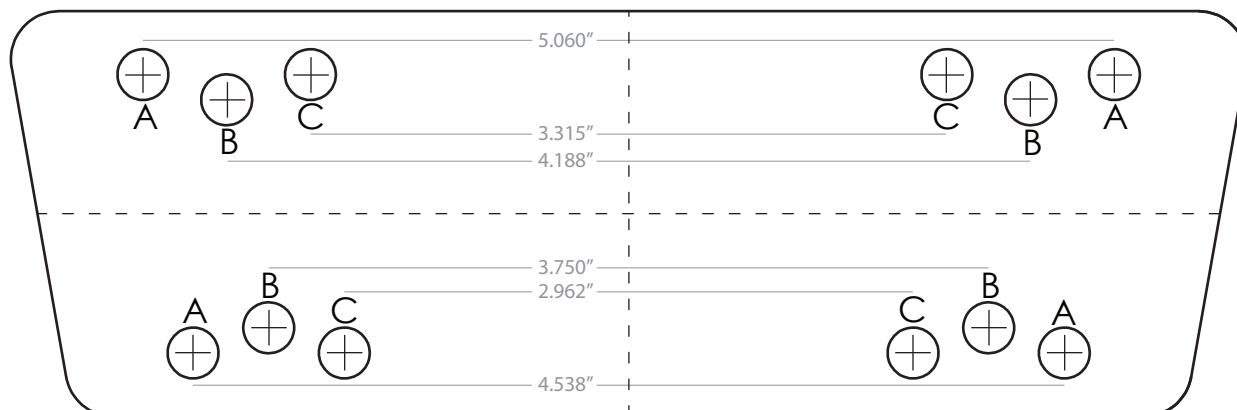

Tools Needed:

- 3/32" drill bit
- 5/16" drill bit
- 7/16" wrench
- Center punch
- Spray adhesive

Align center lines with center of factory pedal mounting surface

Applications:


A: Camaro
B: Firebird
C: Chevelle

1. Remove rubber pedal pad.
2. Cut out template and apply spray adhesive to the back, align template with brake pedal and attach.
3. Center punch the pedal in the center of the appropriate holes as marked on the template.
4. Drill 3/32" pilot holes in each center punch, follow by drilling with 5/16" drill bit.
5. Install 1/4-20 socket set screw in appropriate holes in billet pedal cover, install billet pedal cover on pedal then attach washer and lock nut. Tighten firmly by alternating turns at each nut with 7/16" wrench.



1967 - 1969 Camaro Brake Pedal Pad - Automatic #199460 / #199465

Due to multiple sources used by the auto manufacturer, some pedals may have to be trimmed for the pedal cover to fit properly.

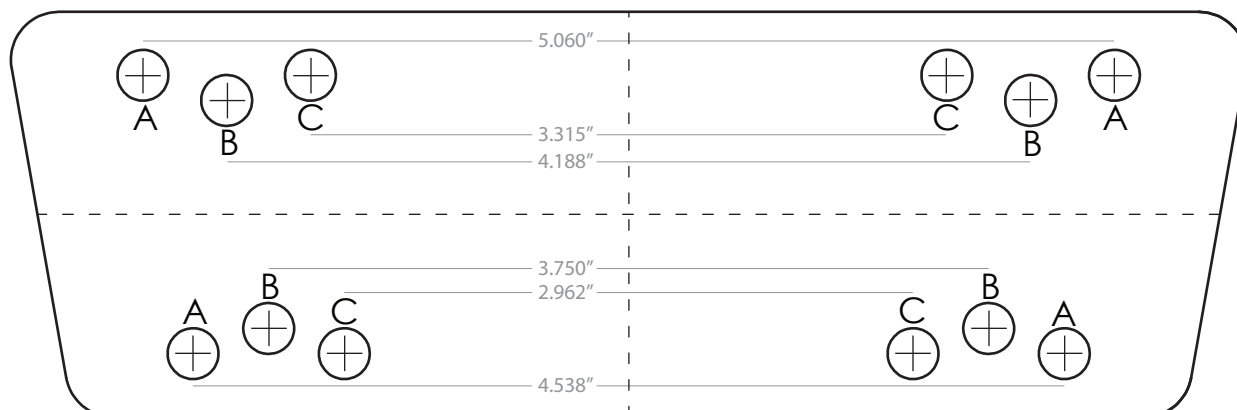

Tools Needed:

- 3/32" drill bit
- 5/16" drill bit
- 7/16" wrench
- Center punch
- Spray adhesive

Align center lines with center of factory pedal mounting surface

Applications:

A: Camaro
B: Firebird
C: Chevelle

1. Remove rubber pedal pad.
2. Cut out template and apply spray adhesive to the back, align template with brake pedal and attach.
3. Center punch the pedal in the center of the appropriate holes as marked on the template.
4. Drill 3/32" pilot holes in each center punch, follow by drilling with 5/16" drill bit.
5. Install 1/4-20 socket set screw in appropriate holes in billet pedal cover, install billet pedal cover on pedal then attach washer and lock nut. Tighten firmly by alternating turns at each nut with 7/16" wrench.

