

BMR FABRICATION

DRIVESHAFT TUNNEL BRACE


DTB003 – 1967-1969 Camaro and Firebird Convertible

Tools required:

- o 3/8" drive ratchet
- o 9/16" socket
- o 5/16" Allen wrench

Installation:

1. Lift the vehicle high enough to gain access to the driveshaft tunnel area. Support with jack stands.
2. Using the 9/16" socket, remove the six bolts holding the OE tunnel brace in place. Remove.
3. Position the BMR tunnel brace into place and install the provided 3/8" Allen bolts with washers.
4. Torque bolts to 40 ft/lbs.
5. Lower vehicle.

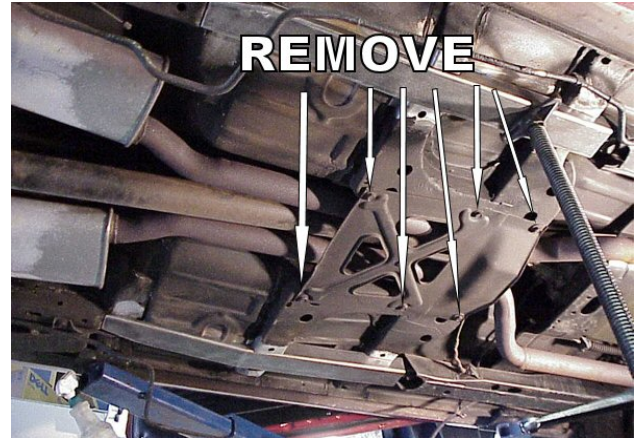

ABOVE IMAGE SHOWN WITH OPTIONAL 6 SPEED CROSSMEMBER.

WWW.BMRFABRICATION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to the vehicle/person during installation or use of this product.