




SB020 INSTALLATION INSTRUCTIONS

1978-1987 GM G-Body

1. Lift the front of the vehicle and safely support with jack stands under the frame rails.
2. Remove the sway bar end link nuts on the ends of the sway bar and remove the end links.
3. Using a 10mm socket (some applications used a 13mm socket), remove all (4) bolts on the sway bar mounting saddles then remove the sway bar.
4. Lube the inside of the 1.25" diameter sway bar bushings and install them over the BMR sway bar.
5. Slide the provided saddles over the bushings then install the bar to the frame using the factory hardware.
6. Assemble the new end links on the sway bar and connect them to the A-arms as shown in **IMAGE 1**. Tighten using two 9/16" wrenches.
7. Lower vehicle.

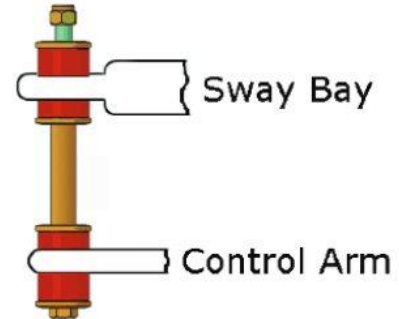

WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to the vehicle/person during installation or use of this product