



INSTALLATION INSTRUCTIONS FOR
Toyota 4Runner, 035-16001
Running Board Boots for Factory Running Boards
(Use in conjunction with Extend-A-Fender® Set No. 031913)

TOOLS REQUIRED FOR INSTALLATION:

- Electric Drill
- Duct Tape
- Jack and Jack Stands (Optional)

IMPORTANT: READ BEFORE BEGINNING INSTALLATION

This product is intended to replace the factory running board end caps on vehicles equipped with factory running boards.
For use with Bushwacker Extend-A-Fender® flares only.

Verifying Fit - Verify correct type and fit BEFORE beginning installation or painting. Small fit adjustments can be made by trimming (filing, sanding or scraping) excess plastic.

Performance - Using larger tires may increase the area required to turn the vehicle. Some Tire/Rim combinations may require lowering bump stops and/or installing steering stops to prevent tire shoulders from contacting flares or boots.

Exhaust System - Modifications may be necessary to maintain a minimum 4" clearance between boots and exhaust pipes. Exhaust gases should not vent directly onto flares or boots.

INSTALLATION PROCEDURES

Step 1: Painting

It is recommended that painting (when desired) be done prior to installation, after verifying correct type and fit.

- (A) Sand (optional) before application of paint.
- (B) Clean outer surface with a good grade degreaser. DO NOT USE LACQUER THINNER OR ENAMEL REDUCER AS A DEGREASER. Wipe outer surface thoroughly with a tack rag prior to painting.
- (C) Paint boots using a high quality lacquer, enamel, or polyurethane automotive paint. Application of a primer coat is optional.

Step 2: Preparing the Work Area (Front and Rear)

- (A) Support vehicle and remove wheel using jack and jack stands. (Optional)
- (B) Remove and save screws securing mud flaps, and factory running board end caps (when installed).

Step 3: Flare Installation



Follow the instructions for Extend-A-Fender® flare installation, which accompany the flares, and install prior to installation of the Running Board Boots.

Step 4: Running Board Boot Installation (Front)


- (A) Fit the Bushwacker boots on the factory running board aligning with the face and interior surface of the Extend-A-Fender® flares.
- (B) Using dimples molded into boot as a guide, fasten to under side of factory running board with two drill tip screws. Drill through plastic and sheet metal.
- (C) Finish fastening with two drill screws through dimples at the pinch seam of the rocker panel. See illustration "Left Front."

Step 5: Running Board Boot Installation (Rear)

- (A) Fit the Bushwacker boots on the factory running board aligning with the face and interior surface of the Extend-A-Fender® flares.
- (B) Using dimples molded in boot as a guide, fasten to under side of factory running board with two drill tip screws. Drill screw through plastic into sheet metal.
- (C) Finish fastening with two drill screws through dimples at the wheel well rim and one drill screw through dimple at the pinch seam of the rocker panel. See illustration "Left Rear."

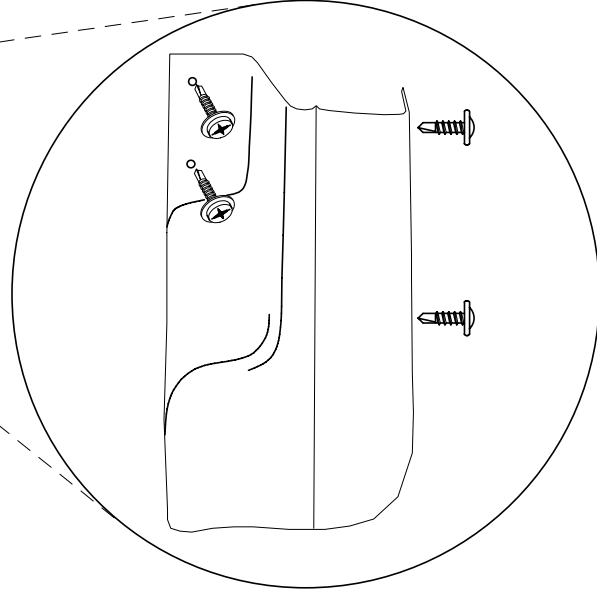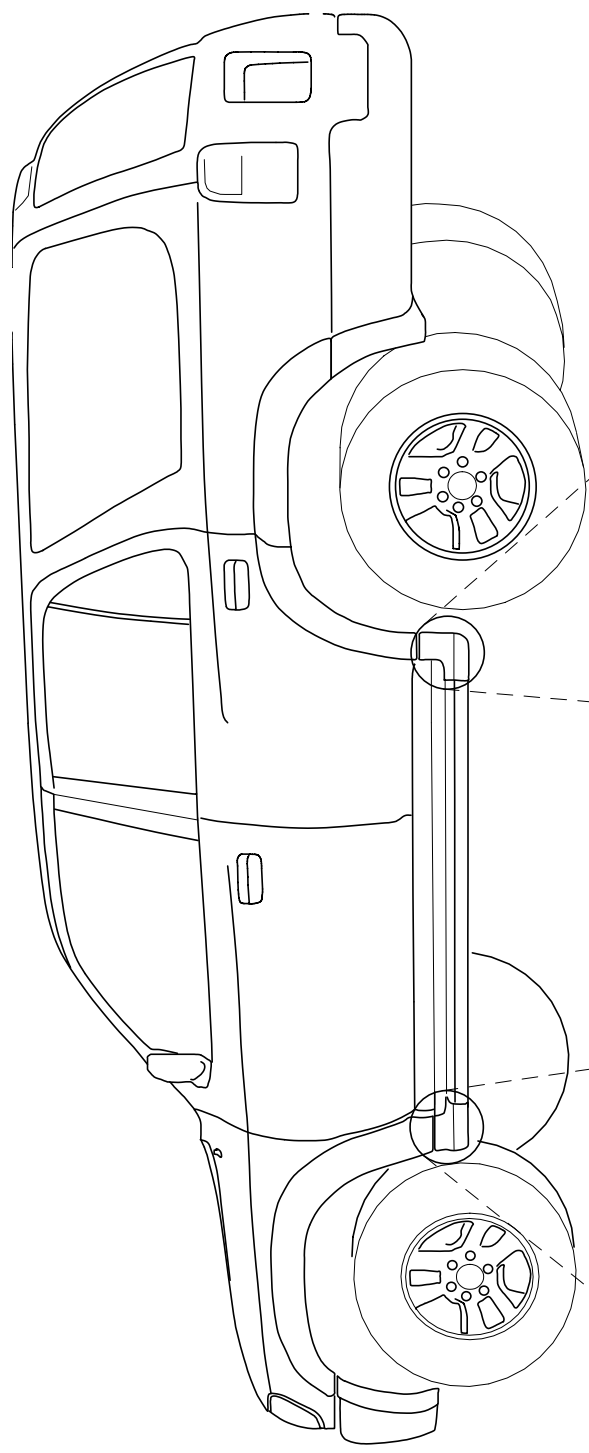

Left Front

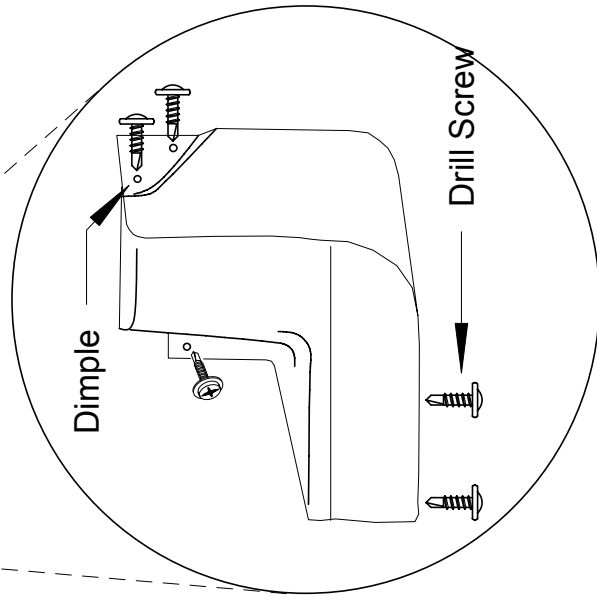

Left Rear